



01 Right-hand handlebar switch	16 R.H. Rear turn signal	31 Vertical Cylinder exhaust lambda sensor	46 Injection cable connector
02 E-Lock	17 Rear headlight	32 Horizontal Cylinder exhaust lambda sensor	47 Horizontal TPS/ETV motor
03 E-Lock relay	18 L.H. Rear turn signal	33 Sensor (Quick shift)	48 Vertical TPS/ETV motor
04 Fuse box	19 Number plate light	34 Sidestand	49 Horizontal Cylinder injector (1)
05 Fuse box 2	20 Rear wiring harness connector	35 Oil pressure switch	50 Vertical Cylinder injector (1)
06 ECU	21 Fuel tank pump	36 Rear Brake light switch	51 Horizontal Cylinder injector (2)
07 APS sensor	22 Self-diagnosis/DDA	37 Clutch switch	52 Vertical Cylinder injector (2)
08 Starter motor	23 BBS unit	38 Front Brake light switch	53 Horizontal Throttle position sensor
09 Starter contactor	24 Valve motor	39 Injection relay	54 Vertical Throttle position sensor
10 Engine cooling electric fan	25 Gearbox position sensor	40 Vertical MAP sensor	55 AIS
11 Battery	26 Rear Speed sensor	41 Horizontal MAP sensor	56 L.H. switch
12 Voltage Regulator	27 Front Speed sensor	42 Cylinder temperature sensor	61 L.H. Front turn signal
13 Generator	28 Vertical Cylinder coil	43 Air temperature sensor	62 Control panel
14 Stepper C (left rear shock compression)	29 Horizontal Cylinder coil	44 Horizontal ETV relay	63 Headlight
15 Stepper D (right rear shock rebound)	30 Rpm/timing sensor	45 Vertical ETV relay	64 R.H. Front turn signal
			65 ABS unit

Colour List				
B	Blue	Lb	Light Blue	\$101 = Left
W	White	Gr	Gray	\$102 = Right
V	Violet	G	Green	\$140 = Horizontal
Bk	Black	Bn	Brown	\$141 = Vertical
Y	Yellow	O	Orange	\$142 = Front
R	Red	P	Pink	\$143 = Rear

FUSE BOX 1		FUSE BOX 2	
USE	VALUE	USE	VALUE
1	-	7	ABS1
2	GPS	8	ABS2
3	Key sense	9	Injection
4	Diagnostic	10	Lights
5	ETV relay	11	ECU
6	Dashboard	12	BBS