



Completely screw silent blocks (15) on instrument panel (16).

Fit toothed washers (17) on silent block (15) threaded pins.

Fit cover (16) on the windscreen support assembly / central panel (18) by tightening nuts (19) to a torque of 3 Nm \pm 10%.

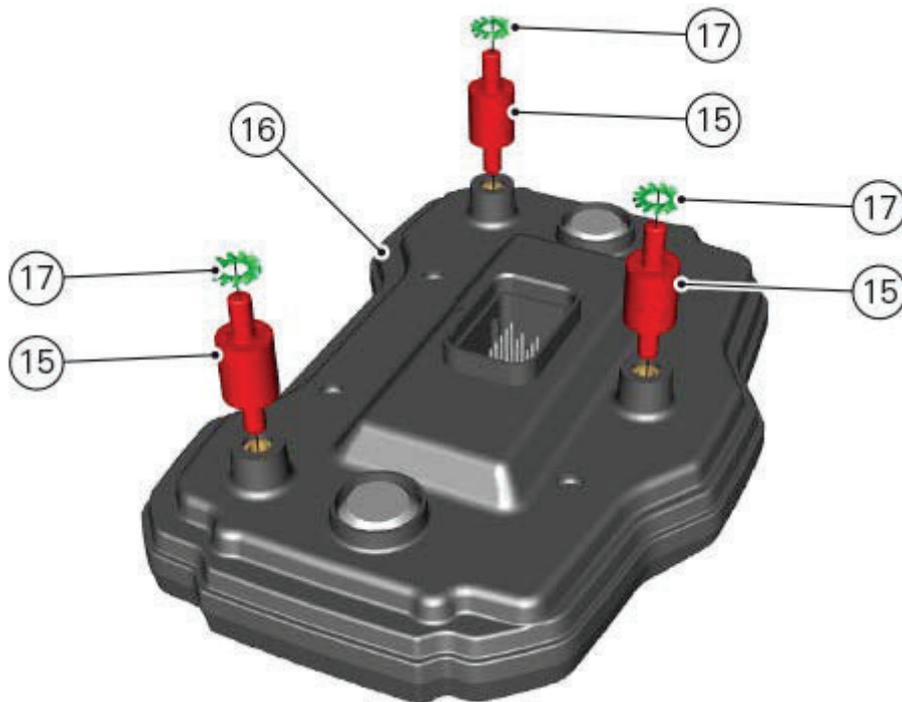

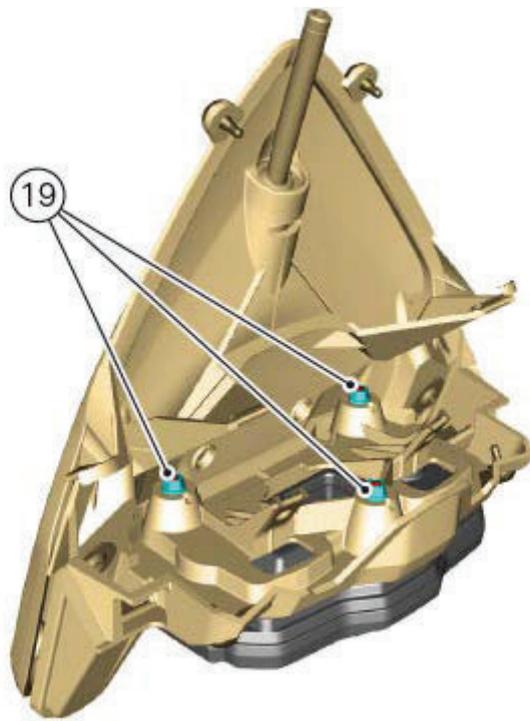

FITTING THE HEADLIGHT FAIRING

Position headlight fairing (4) on the front frame.
Start screws (3) and tighten them to a torque of $3 \text{ Nm} \pm 10\%$.

