



Assembly Instructions

KIT Top Case 1106


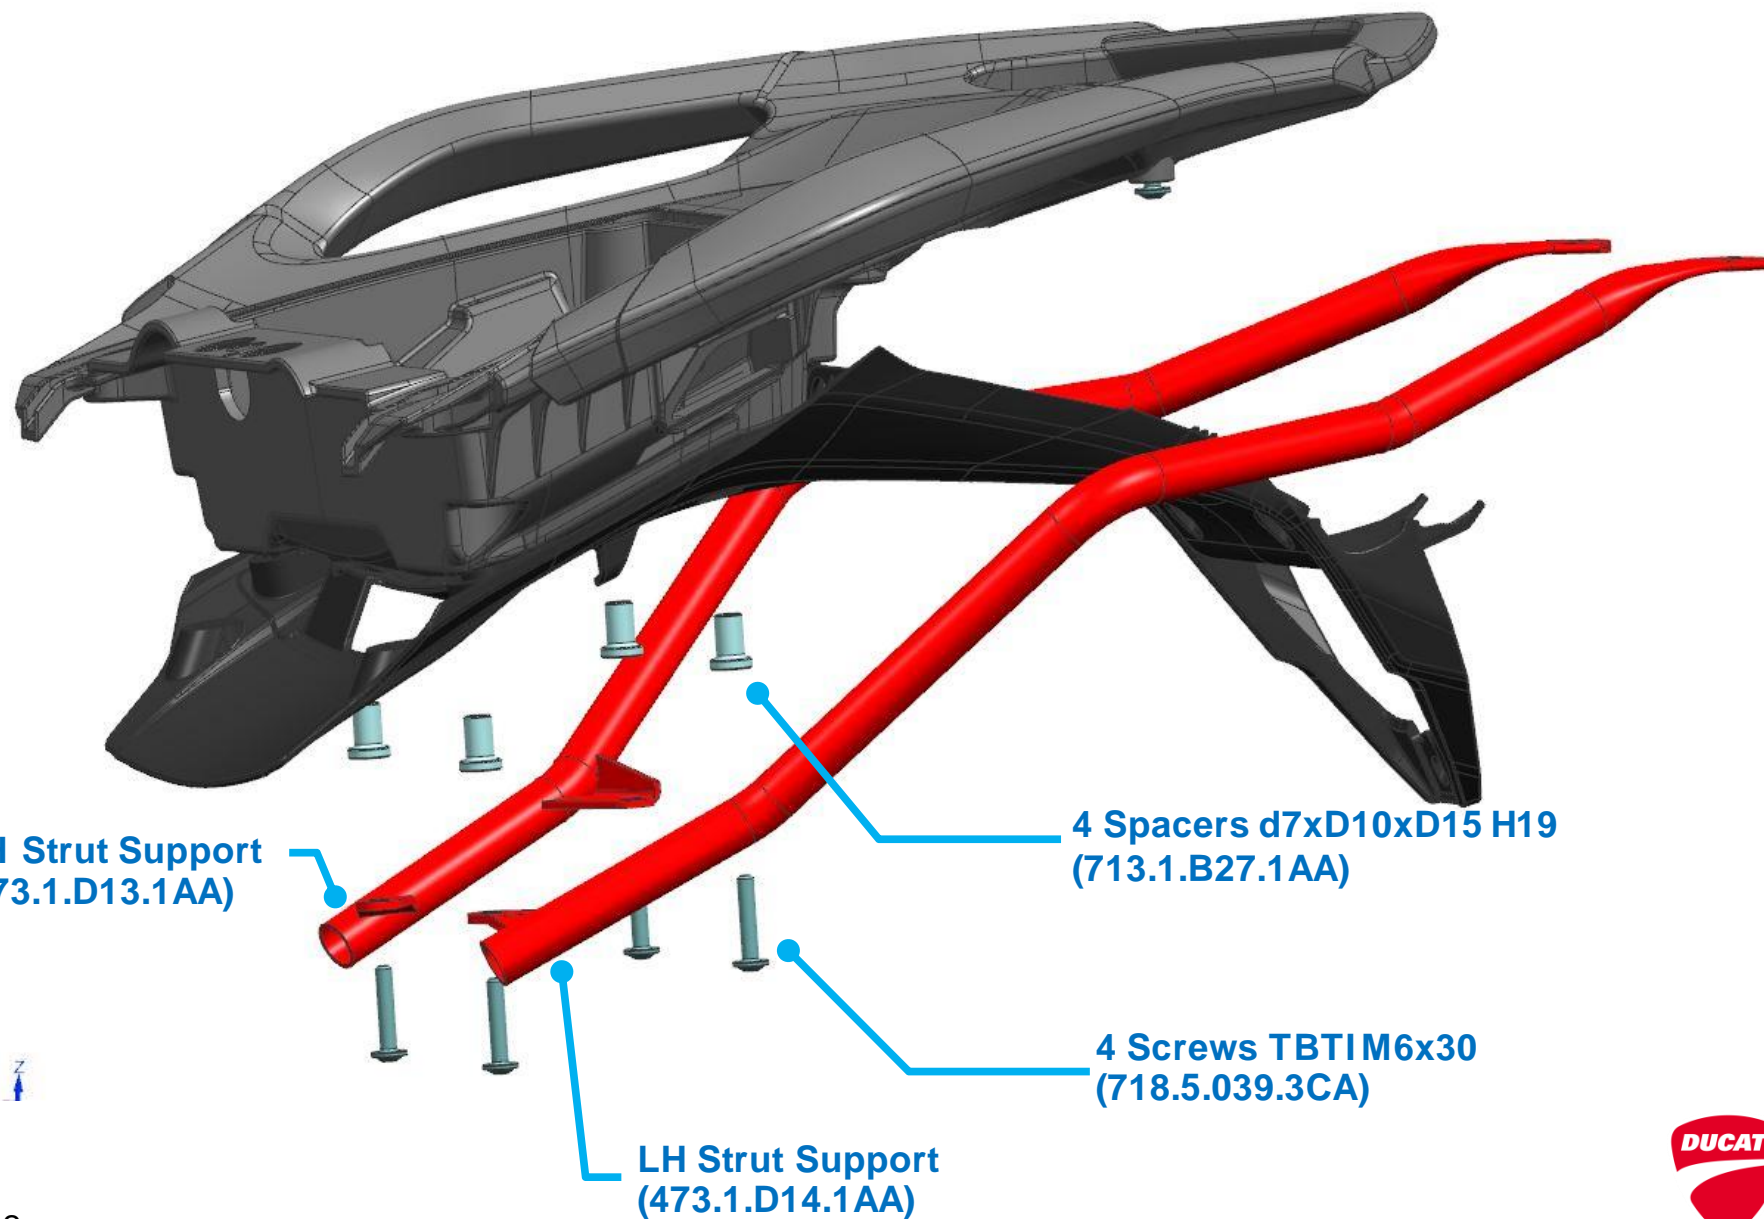


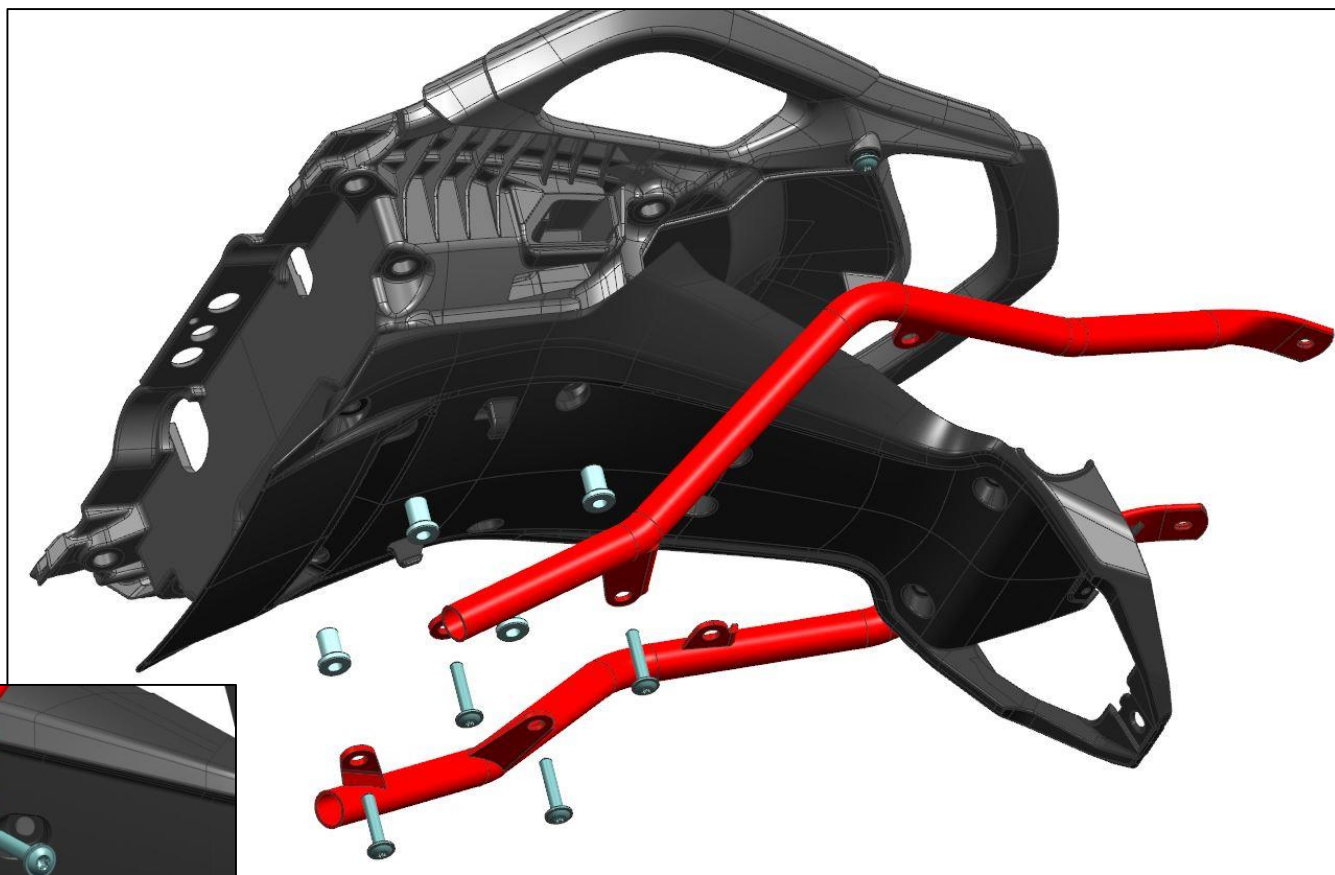






Assembly Instructions: KIT Top Case 1106

Pietro Albamonte – 29-04-2015

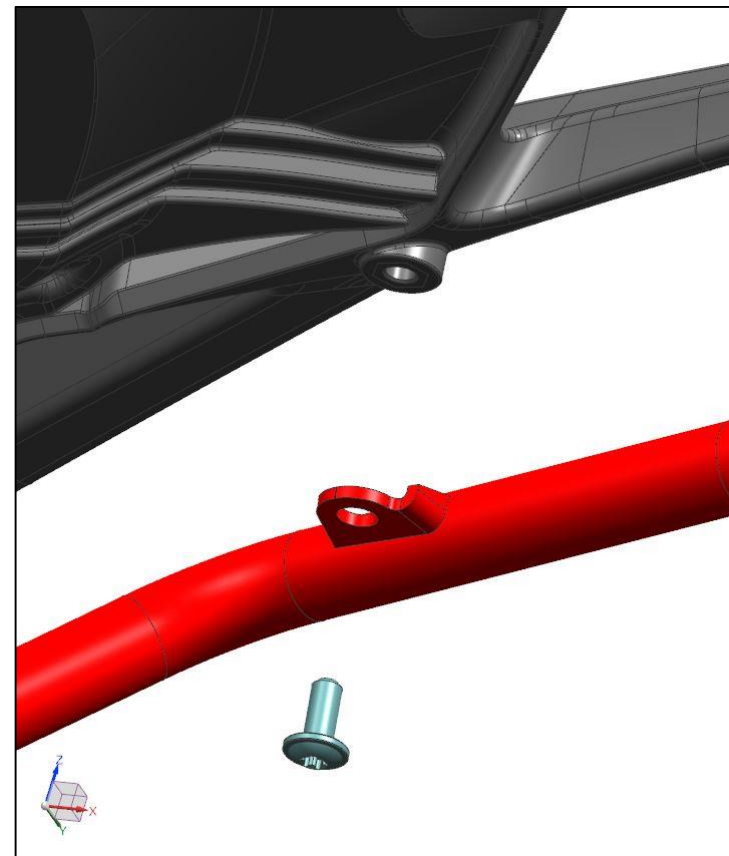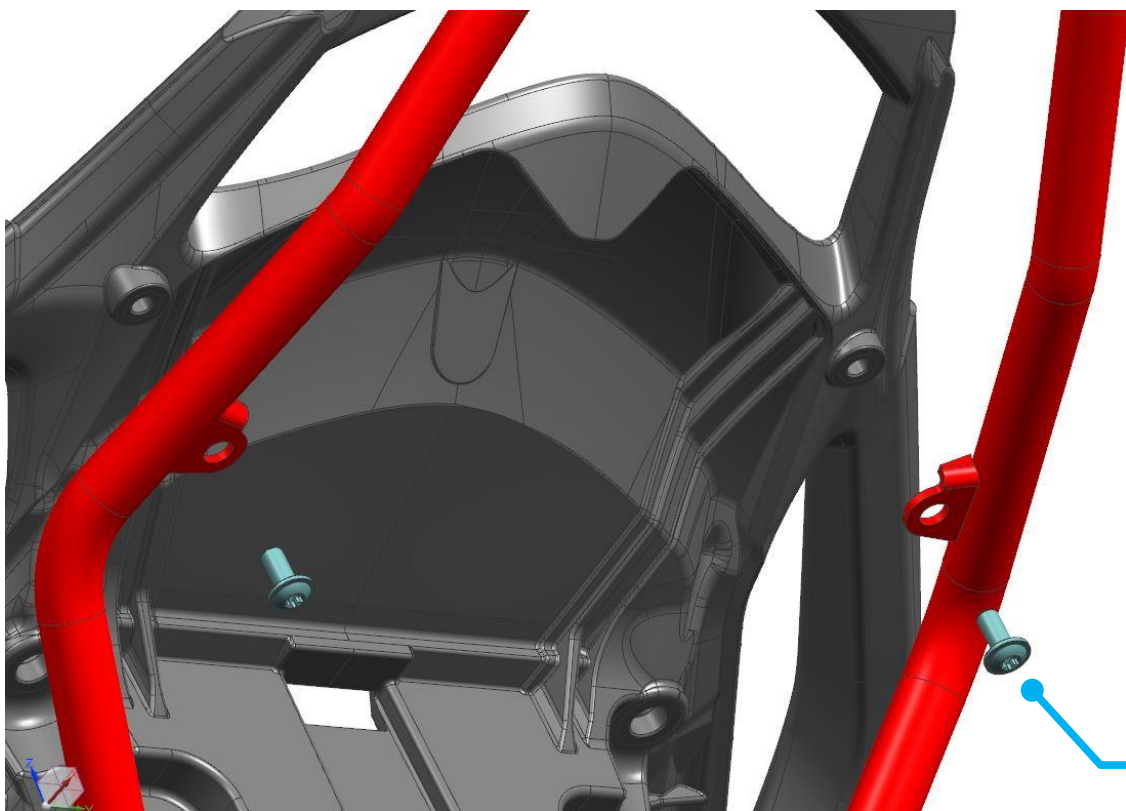


2 Screws TBTIM6x14
(718.5.032.3CA)

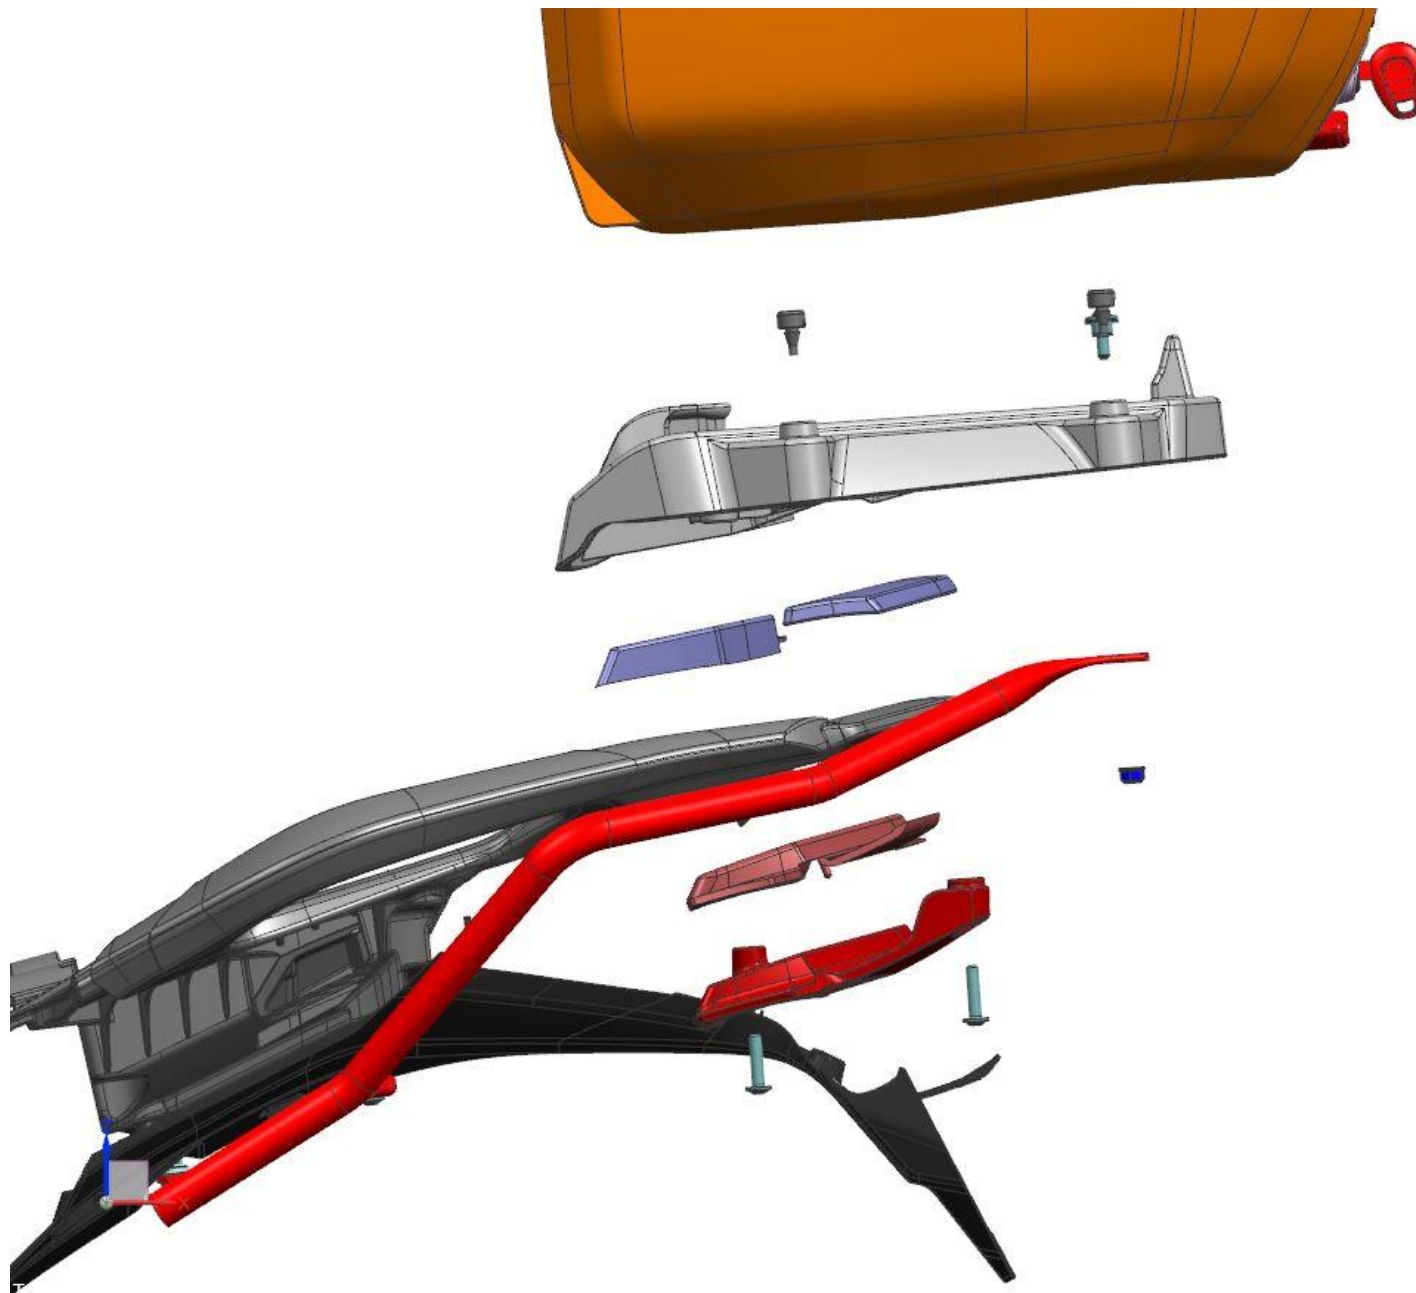

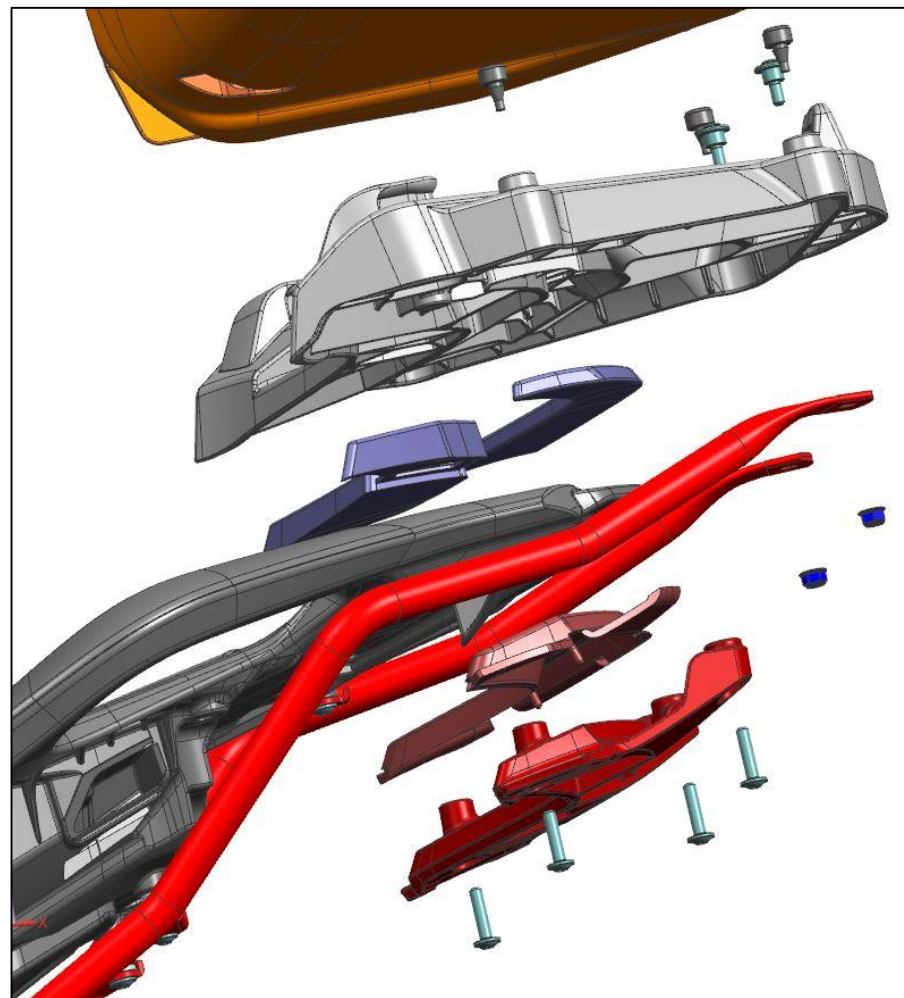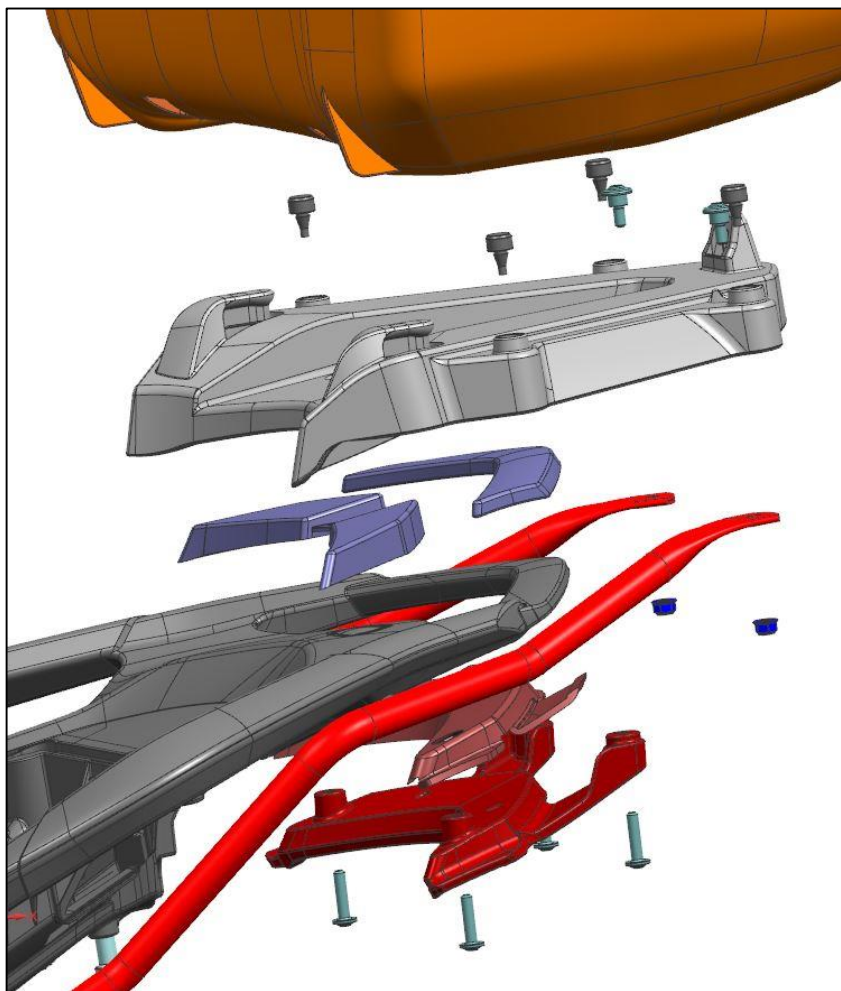



Assembly Instructions: KIT Top Case 1106

Pietro Albamonte – 29-04-2015

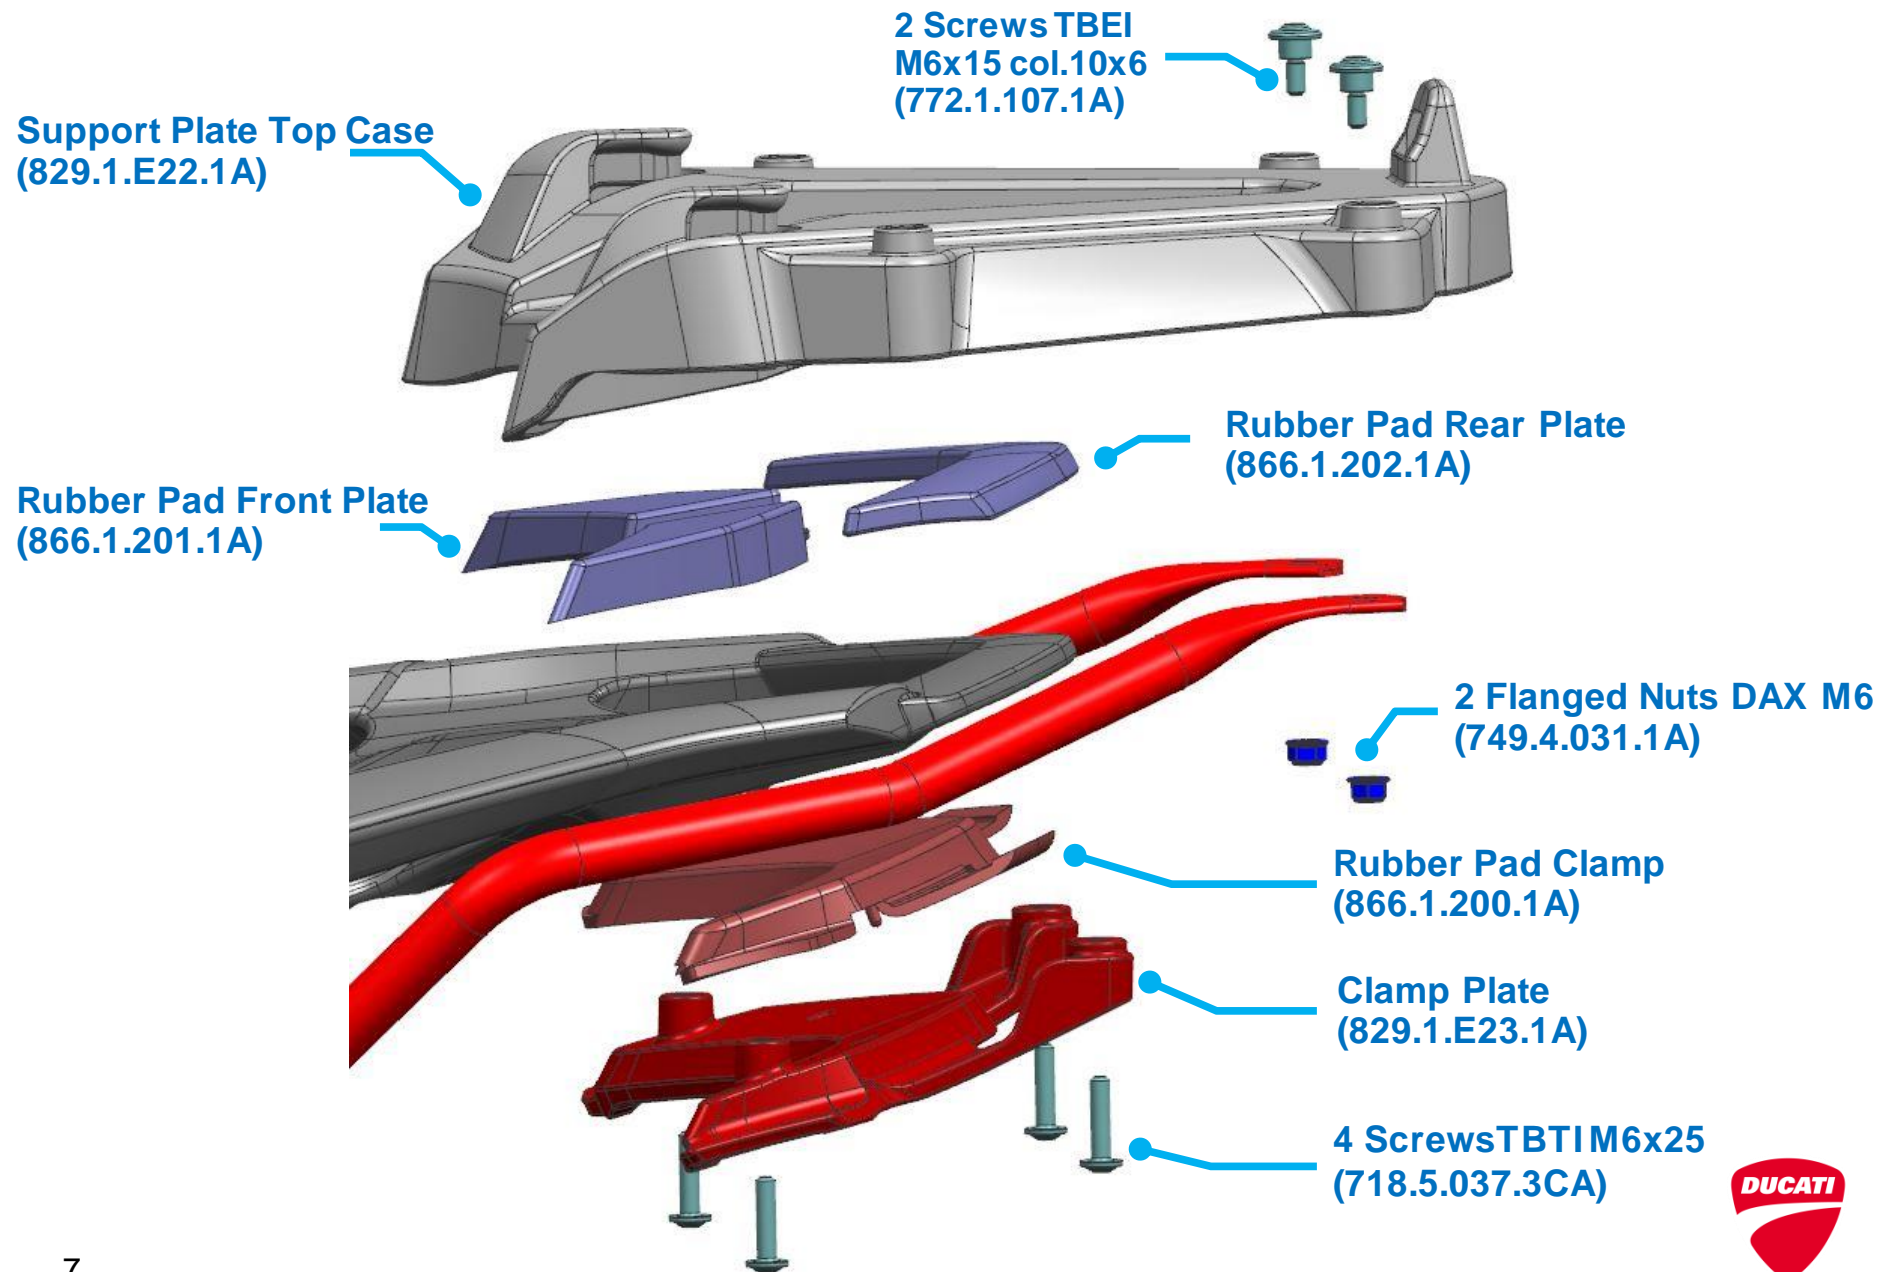

Assembly Instructions: KIT Top Case 1106

Pietro Albamonte – 29-04-2015

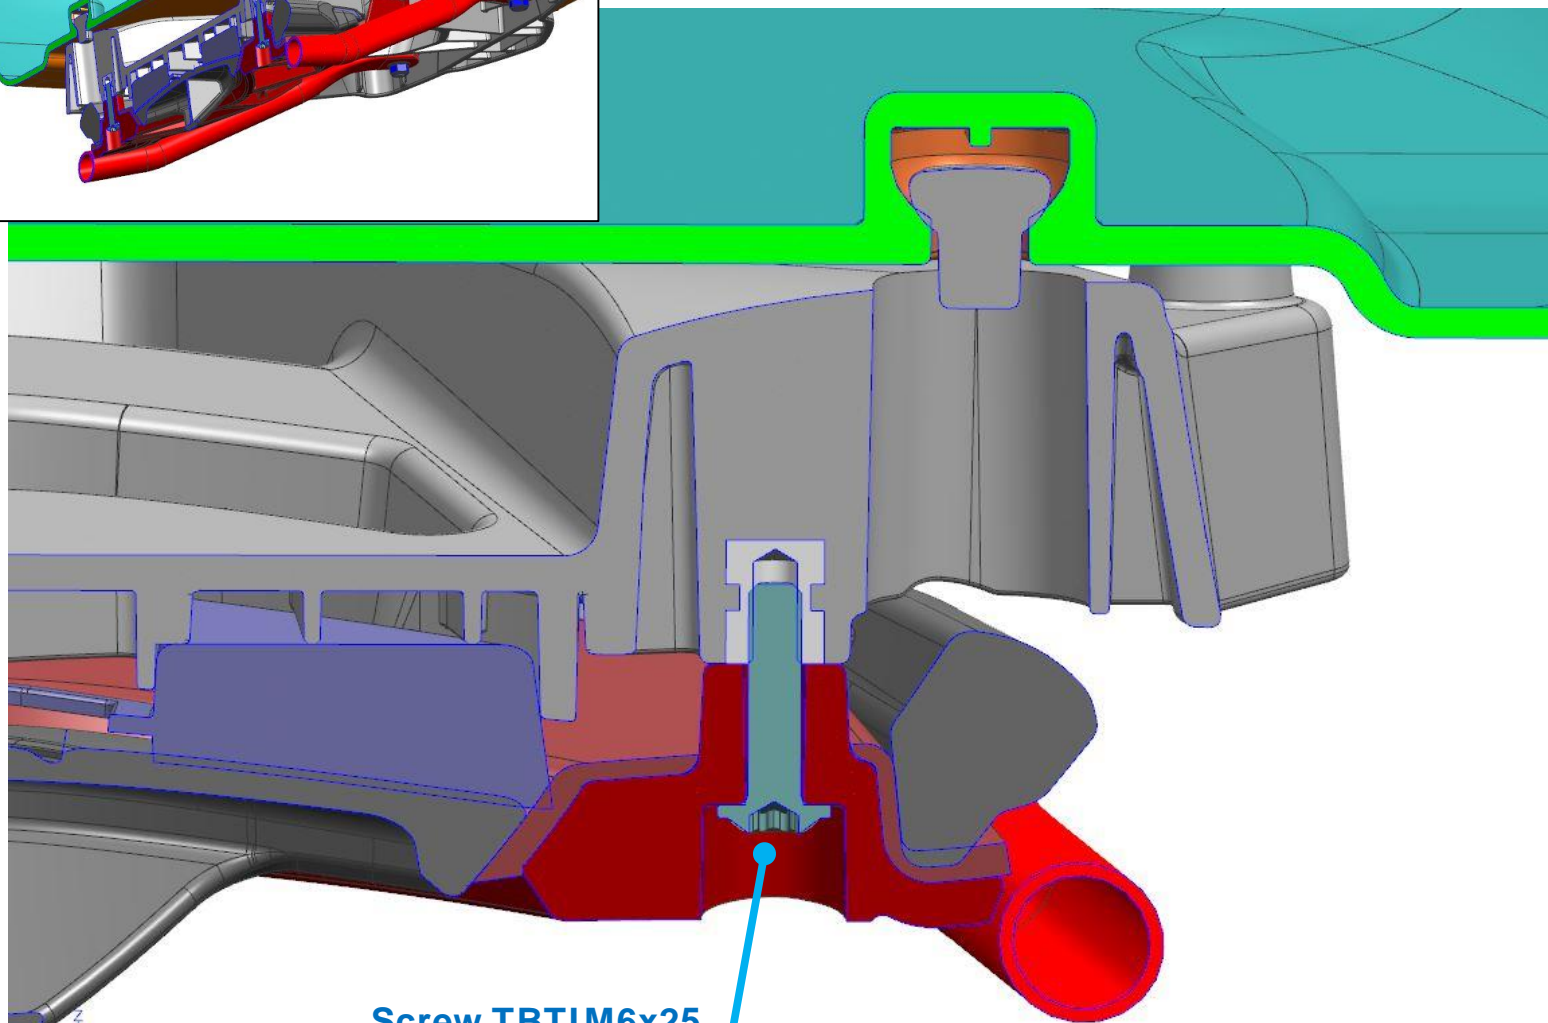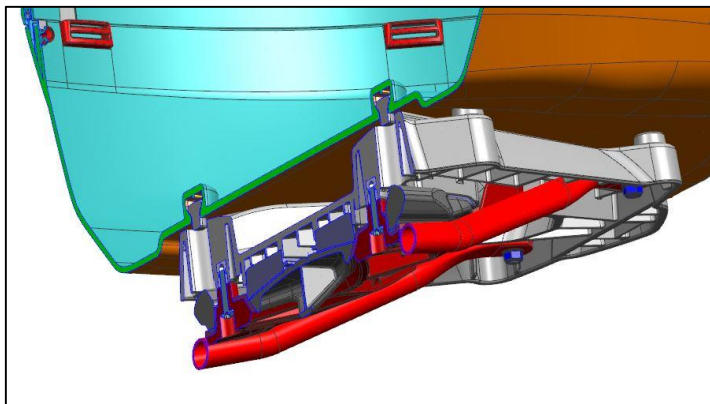

Screw TBTIM6x25
(718.5.037.3CA)



