


# 1998 ST2

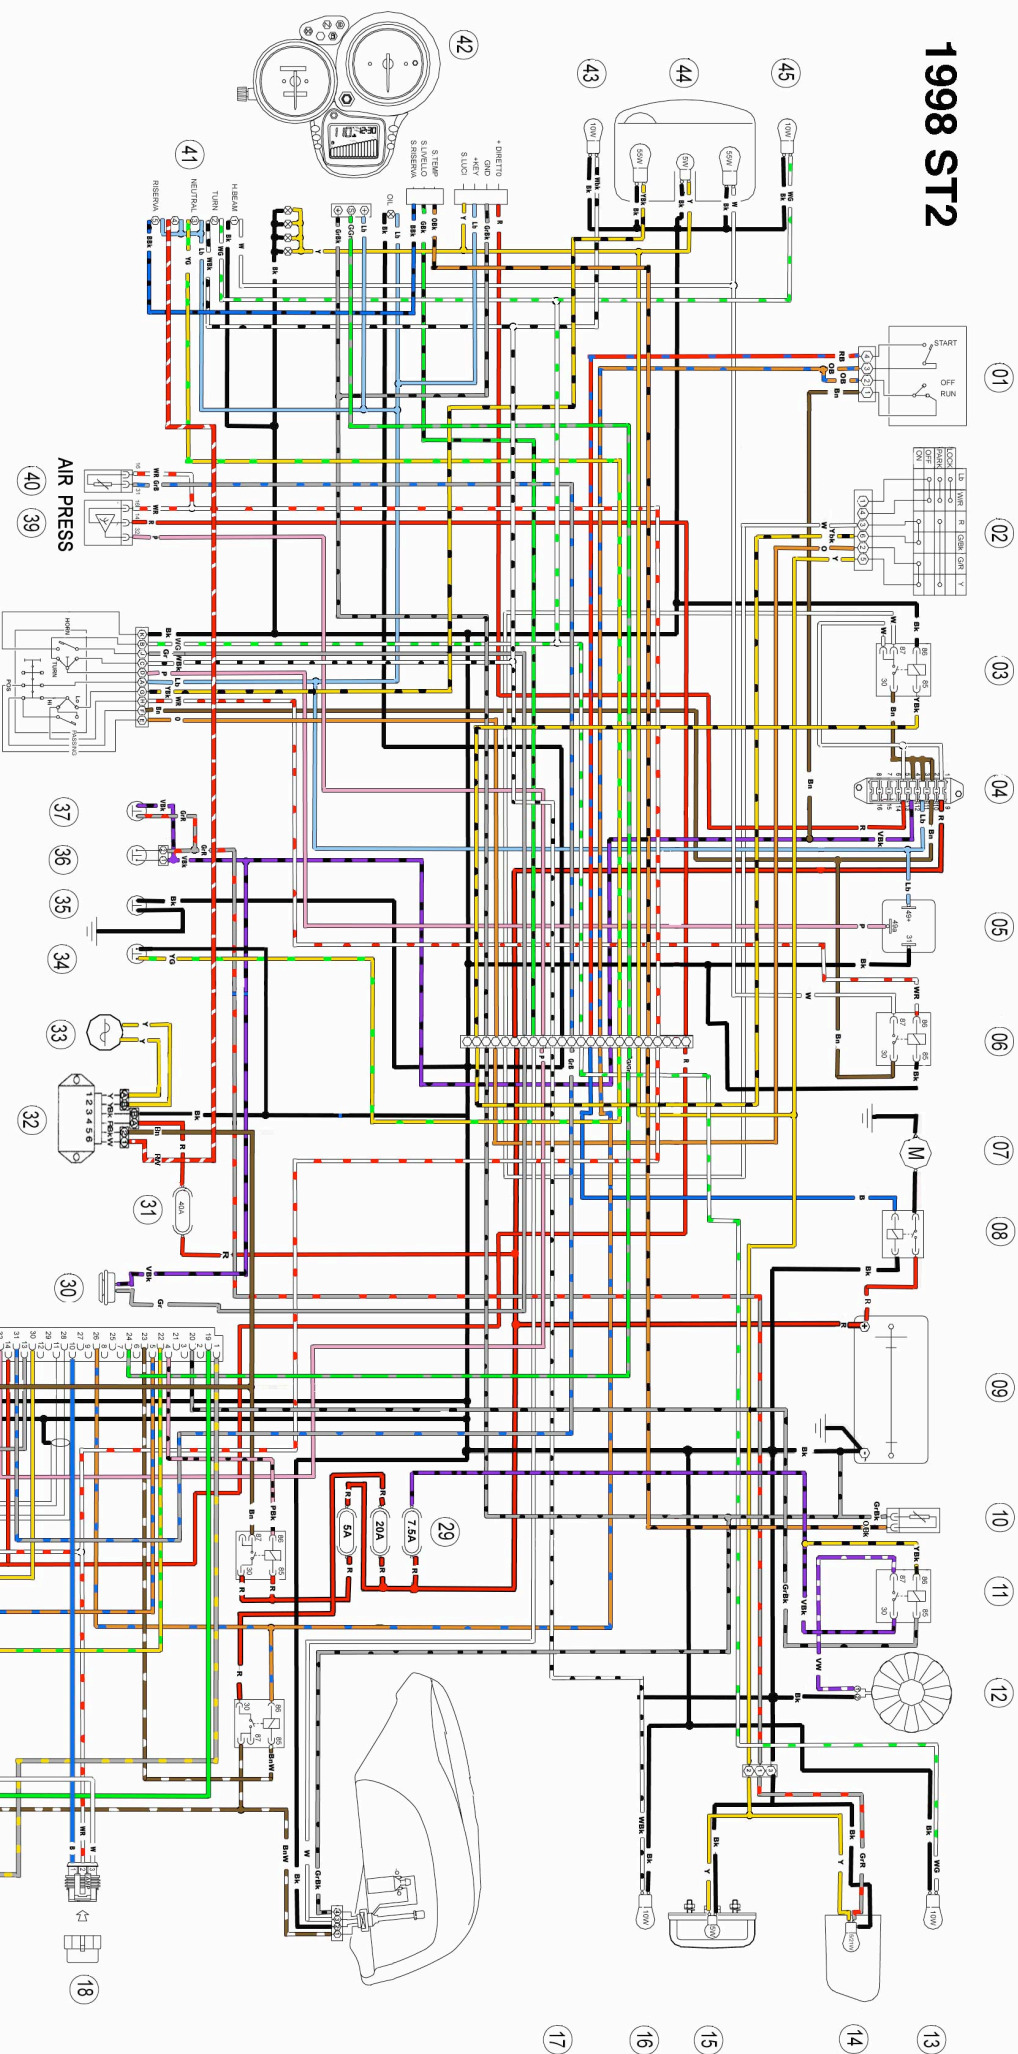

## Wire color coding

- P Pink
- GR-Bk Grey-Black
- Y-G Yellow-Green
- G Green
- R-G Red-Green
- W-R White-Red
- O-Bk Orange-Black
- V-Violet
- Y Yellow
- W-B White-Blue
- BN Brown
- G-W Green-White
- O-W Orange-White
- R-Bk Red-Black
- R-B Red-Blue
- GR-R Grey-Red
- R Red
- G-Bk Green-Black
- V-Violet
- Y-Bk Yellow-Black
- GR Grey
- G-B Green-Blue
- Lb Light-Blue
- Bk Black

## Legend of the wiring diagram of electric system/ignition

- 1) Light switch
- 2) Key-operated switch
- 3) Ignition relay
- 4) Fuse box
- 5) Turn indicator flasher
- 6) Lights relay
- 7) Starter motor
- 8) Starter solenoid
- 9) Battery
- 10) Water temperature sensor
- 11) Electric fan relay
- 12) Electric fan
- 13) Rear right-turn indicator
- 14) Tail light
- 15) Number plate light
- 16) Rear left-turn indicator
- 17) Fuel tank connector
- 18) Horizontal cylinder coil
- 19) Horizontal cylinder coil
- 20) Horizontal cylinder spark plug
- 21) Vertical cylinder spark plug
- 22) Vertical cylinder injector
- 23) Horizontal cylinder injector
- 24) Vertical cylinder injector

## Fuses

Position	Description	Rating
A1	Main	30A
B2	Hi and Lo Beams	15A
C3	Direction indicators	7.5A
D4	Pilot lights, Horn	7.5A
E5	Stop light, Horn	3A
F6	Digital Display	15A
G7	Spare	7.5A
H8	Spare	3A

ALL CONNECTORS ARE VIEWED FROM C