

MV AGUSTA

F4



Owner's Manual

Il presente Manuale di uso e manutenzione è disponibile nelle edizioni in lingua sotto specificate:

This Owner's Manual is available in the languages listed below:

Le présent livret d'utilisation et d'entretien est disponible dans les éditions rédigées dans les langues spécifiées ci-dessous:

Die vorliegende Bedienungs- und Wartungsanleitung ist in folgenden Sprachen erhältlich:

Las ediciones del presente manual de uso y mantenimiento están disponibles en los siguientes idiomas:

Codice/Code/Code
Bestell-Nr./Código

| | | | | | |
|-------------------|------------------------|-------------------|-----------------------------|---------------------|-----------|
| Edizione Italiana | <i>Italian Edition</i> | Edition Italienne | <i>Italienische Ausgabe</i> | Edición en Italiano | 800092869 |
| Edizione Inglese | <i>English Edition</i> | Edition Anglaise | <i>Englische Ausgabe</i> | Edición en Inglés | 8A0092869 |
| Edizione Francese | <i>French Edition</i> | Edition Française | <i>Französische Ausgabe</i> | Edición en Francés | 8B0092869 |
| Edizione Tedesca | <i>German Edition</i> | Edition Allemande | <i>Deutsche Ausgabe</i> | Edición en Alemán | 8C0092869 |
| Edizione Spagnola | <i>Spanish Edition</i> | Edition Espagnole | <i>Spanische Ausgabe</i> | Edición en Español | 8D0092869 |
| Edizione USA | <i>USA Edition</i> | Edition USA | <i>USA Ausgabe</i> | Edición USA | 8A0089042 |

Dear Customer,

We wish to thank you for your preference and congratulate you on purchasing your new F4.

Your choice is a reward for the passionate effort our technicians have put into giving the F4 functional and aesthetic characteristics that place it above the finest motorcycles currently available on the market, making it an exclusive and sought-after item.

If, from a purely technical standpoint, the F4 represents an internationally recognized point of reference on account of the innumerable innovations it introduces, its sleek, timeless design wonderfully combines a glorious past with the new millennium.

The combination of these elements, which was made possible by love of detail, passion, and the desire to realize a technically and aesthetically superior motorcycle, allows the F4 to soar above passing fashions, giving it the privilege of being considered a unique item.

This manual has been drawn up with a view to providing you with a clear and practical guide to operating and maintaining your new motorcycle while safeguarding your warranty rights.

The indications contained in the manual will help you make the most of your motorcycle in terms of both performance and operating life. The manual provides useful information on how to take care of your vehicle, and also describes some routine maintenance operations. Fundamental units such as the engine and the transmission are covered in the Workshop Manuals. Operations involving these parts require specific equipment and are reserved for skilled personnel. Your dealer possesses the skills, the equipment and the spare parts that are needed to keep your motorcycle in perfect working order. This manual is to be considered as an integral part of the vehicle, and must be transferred to any new owner together with the vehicle.



CONTENTS

| <i>chap.</i> | <i>Subjects covered</i> | <i>page</i> |
|--------------|--|-------------|
| 1 | GENERAL INFORMATION | 10 |
| 1.1 | Purpose of the manual | 10 |
| 1.2 | Symbols | 11 |
| 1.3 | Warranty Booklet and Service Coupons | 12 |
| 1.4 | Identification data | 13 |
| 1.5 | Magnesium parts | 15 |
| 2 | SAFETY INFORMATION | 16 |
| 2.1 | Safety | 16 |
| 2.1.1 | How to report a safety-related defect | 16 |
| 2.1.2 | Noise emission warranty | 16 |
| 2.1.3 | Note on tampering | 16 |
| 2.1.4 | Information on the emission control system | 18 |
| 2.1.5 | Safety rules | 19 |
| 2.1.6 | Installing accessories | 21 |
| 2.1.7 | Vehicle load | 21 |
| 2.1.8 | Modifications | 22 |
| 2.1.9 | Competitions | 22 |
| 2.1.10 | Recommendations for safe riding | 23 |
| 2.1.11 | Protective clothing | 25 |

| <i>chap.</i> | <i>Subjects covered</i> | <i>page</i> |
|--------------|--------------------------------------|-------------|
| 2.2 | Safety signs - Location | 27 |
| 2.3 | Safety - Visual and acoustic signals | 35 |
| 3 | CONTROLS AND INSTRUMENTS | 36 |
| 3.1 | Location of controls and instruments | 36 |
| 3.2 | Sidestand | 37 |
| 3.2.1 | Auto return sidestand | 37 |
| 3.2.2 | Non-auto return sidestand | 38 |
| 3.3 | Handlebar controls, left side | 39 |
| 3.4 | Handlebar controls, right side | 41 |
| 3.5 | Ignition switch and steering lock | 44 |
| 3.6 | Gear lever | 45 |
| 3.7 | Instruments and warning lights | 46 |
| 3.7.1 | Warning lights | 47 |
| 3.7.2 | Multifunction display | 48 |
| 4 | OPERATION | 49 |
| 4.1 | Using the motorcycle | 49 |
| 4.2 | Running-in | 50 |
| 4.3 | Starting the engine | 52 |
| 4.4 | Setting the display functions | 53 |
| 4.5 | Selecting the display functions | 58 |



CONTENTS

| <i>chap.</i> | <i>Subjects covered</i> | <i>page</i> |
|--------------|--|-------------|
| 4.6 | Refuelling | 60 |
| 4.7 | Glove compartment | 61 |
| 4.8 | Parking the motorcycle | 62 |
| 4.9 | Preriding checks | 64 |
| 4.10 | Riding | 65 |
| 5 | ADJUSTMENTS | 66 |
| 5.1 | List of adjustments | 66 |
| 5.2 | Table of adjustments | 68 |
| 5.3 | Adjusting the front brake lever | 69 |
| 5.4 | Adjusting the clutch lever | 69 |
| 5.5 | Adjusting the rearview mirrors | 70 |
| 5.6 | Adjusting the steering damper | 70 |
| 5.7 | Adjusting the front suspension | 71 |
| 5.7.1 | Spring preload | 72 |
| 5.7.2 | Rebound damping hydraulic device (front suspension) | 72 |
| 5.7.3 | Compression damping hydraulic device (front suspension) | 73 |
| 5.8 | Adjusting the rear suspension | 74 |
| 5.8.1 | Rebound damping hydraulic device (rear suspension) | 75 |

| <i>chap.</i> | <i>Subjects covered</i> | <i>page</i> |
|--------------|---|-------------|
| 5.8.2 | Compression damping hydraulic device (rear suspension) | 75 |
| 6 | MAINTENANCE | 76 |
| 6.1 | Tables of scheduled maintenance and checks | 76 |
| 6.2 | Tools and accessories supplied | 83 |
| 6.3 | Table of lubricants and fluids | 83 |
| 6.4 | Removing/fitting the right-hand side fairing | 84 |
| 6.5 | Checking the engine oil level | 86 |
| 6.5.1 | Restoring the engine oil level | 87 |
| 6.6 | Checking the coolant level | 88 |
| 6.6.1 | Restoring the coolant level | 89 |
| 6.7 | Checking the wear of the brake pads | 90 |
| 6.8 | Checking the brake fluid level | 91 |
| 6.9 | Checking the clutch fluid level | 92 |
| 6.10 | Checking the tyres | 93 |
| 6.11 | Checking and lubricating the drive chain | 94 |
| 6.12 | Checking the idle speed | 96 |
| 6.13 | Periodic emission check | 97 |



CONTENTS

| <i>chap.</i> | <i>Subjects covered</i> | <i>page</i> |
|--------------|---|-------------|
| 6.14 | Emission control system warranty obligations | 98 |
| 6.14.1 | Your warranty rights and obligations | 98 |
| 6.14.2 | Manufacturer's warranty coverage | 98 |
| 6.14.3 | Owner's warranty responsibilities | 99 |
| 6.15 | Limited warranty on emission control system | 100 |
| 6.15.1 | Coverage | 100 |
| 6.15.2 | Limitations | 101 |
| 6.15.3 | Limited liability | 102 |
| 6.15.4 | Legal rights | 103 |
| 6.15.5 | Additional information | 103 |
| 6.16 | Replacing parts - General information | 104 |
| 6.16.1 | Replacing the fuses | 104 |
| 6.16.2 | Replacing the low beam bulb | 106 |
| 6.16.3 | Replacing the high beam bulb | 107 |
| 6.16.4 | Replacing the front turn indicator bulbs | 108 |
| 6.16.5 | Replacing the rear turn indicator bulbs | 109 |
| 6.16.6 | Replacing the rear light and brake light bulb | 110 |
| 6.16.7 | Replacing the number-plate light bulb | 111 |

| <i>chap.</i> | <i>Subjects covered</i> | <i>page</i> |
|--------------|-------------------------------|-------------|
| 6.17 | Battery | 112 |
| 6.18 | Cleaning the motorcycle | 113 |
| 6.19 | Prolonged inactivity | 114 |
| 7 | TROUBLESHOOTING | 115 |
| 7.1 | Engine problems | 115 |
| 7.2 | Electrical equipment problems | 120 |
| 8 | TECHNICAL INFORMATION | 123 |
| 8.1 | Motorcycle overview | 123 |
| 8.1.1 | Front brake circuit | 125 |
| 8.1.2 | Rear brake circuit | 126 |
| 8.1.3 | Clutch circuit | 127 |
| 8.1.4 | Engine lubrication | 128 |
| 8.1.5 | Coolant circuit | 129 |
| 8.1.6 | Fuel system | 130 |
| 8.2 | Specifications | 131 |
| 8.3 | Carbon components | 138 |



INDEX

| | |
|------------------------------------|-----|
| A | |
| Accessories, installation | 21 |
| Adjustments | |
| – clutch lever | 69 |
| – front brake lever | 69 |
| – front suspension | 71 |
| – list | 66 |
| – rear suspension | 74 |
| – rearview mirrors | 70 |
| – steering damper | 70 |
| – table | 68 |
| B | |
| Battery | 112 |
| Brakes | |
| – fluid level, check | 91 |
| – front brake circuit | 125 |
| – front brake lever, adjustment | 69 |
| – pads, wear check | 90 |
| – rear brake circuit | 126 |
| Bulbs, replacement of | |
| – front turn indicators | 108 |
| – high beam | 107 |
| – low beam | 106 |
| – number-plate light | 111 |
| – rear light and brake light | 110 |
| – rear turn indicators | 109 |
| C | |
| Carbon components | 138 |
| Chain | |
| – check | 94 |
| – lubrication | 95 |
| Cleaning the motorcycle | 113 |
| Clutch | |
| – circuit | 127 |
| – fluid level, check | 92 |
| – lever, adjustment | 69 |
| Competitions | 22 |
| Controls and instruments, location | 36 |
| Coolant | |
| – level, check | 88 |
| – circuit | 129 |
| – topping up | 89 |
| D | |
| Damping, hydraulic device | |
| – compression (front suspension) | 73 |
| – compression (rear suspension) | 75 |
| – rebound (front suspension) | 72 |
| – rebound (rear suspension) | 75 |
| Display, multifunction | 48 |
| – selecting functions | 58 |
| – setting functions | 53 |



INDEX

| | | |
|---------------------------------------|-----|--|
| E | | |
| Electrical equipment, troubleshooting | 120 | |
| Emissions | | |
| – control system | 18 | |
| – control system warranty | 98 | |
| – periodic check | 97 | |
| Engine | | |
| – lubrication | 128 | |
| – oil level, check | 86 | |
| – oil level, topping up | 87 | |
| – starting | 52 | |
| – troubleshooting | 115 | |
| F | | |
| Fuel system | 130 | |
| Fuses, replacement | 104 | |
| G | | |
| Gear lever | 45 | |
| Glove compartment | 61 | |
| H | | |
| Handlebar controls | | |
| – left side | 39 | |
| – right side | 41 | |
| Headlight | | |
| – high beam, bulb replacement | 107 | |
| – low beam, bulb replacement | 106 | |
| I | | |
| Identification data | 13 | |
| Idle speed, check | 96 | |
| Ignition switch and steering lock | 44 | |
| Instruments and warning lights | 46 | |
| L | | |
| Levels | | |
| – brake fluid | 91 | |
| – clutch fluid | 92 | |
| – coolant | 88 | |
| – engine oil | 86 | |
| Location of controls and instruments | 36 | |
| Lubricants and fluids, table | 83 | |
| M | | |
| Magnesium components | 15 | |
| Maintenance and checks, tables | 76 | |
| Motorcycle overview | 123 | |
| N | | |
| Number-plate light, bulb replacement | 111 | |
| P | | |
| Parking | 62 | |
| Preriding checks | 64 | |
| Prolonged inactivity | 114 | |
| Purpose of manual | 10 | |



INDEX

R

| | |
|--|-----|
| Rear light and brake light, bulb replacement | 110 |
| Rearview mirrors, adjustment | 70 |
| Refuelling | 60 |
| Replacing parts, general information | 104 |
| Running-in | 50 |

S

| | |
|---|-----|
| Safety | 16 |
| – recommendations for safe riding | 23 |
| – reporting a safety-related defect | 16 |
| – rules | 19 |
| – signs, location | 27 |
| – visual and acoustic signals | 35 |
| Scheduled maintenance tables | 77 |
| Side fairing, right-hand, removal/refitting | 84 |
| Sidestand | 37 |
| Specifications | 131 |
| Spring preload | 72 |
| Steering damper, adjustment | 70 |
| Suspensions | |
| – front, adjustment | 71 |
| – rear, adjustment | 74 |
| Symbols | 11 |

T

| | |
|--------------------------------|-----|
| Tampering, note | 16 |
| Tools and accessories supplied | 83 |
| Topping up | |
| – coolant | 89 |
| – engine oil | 87 |
| Troubleshooting | |
| – electrical equipment | 120 |
| – engine | 115 |
| Turn indicators | |
| – front, bulb replacement | 108 |
| – rear, bulb replacement | 109 |
| Tyres, check | 93 |

V

| | |
|-----------------|----|
| Vehicle | |
| – load | 21 |
| – modifications | 22 |

W

| | |
|-------------------------------|----|
| Warning lights | 47 |
| Warranty | |
| – Booklet and Service Coupons | 12 |
| – emission control system | 98 |



1

1.1 Purpose of the manual

In addition to providing directions on operation and maintenance, this manual contains important information about general safety. Read the manual over carefully before first using the motorcycle.

The manual describes the model with the maximum equipment at print time.

Information marked with the symbol “★” only refers to the F4 750 ORO model.



1.2 Symbols

Sections of text that are particularly important in terms of personal safety or possible damage to the motorcycle are marked with the following symbols:



Danger - Warning: Failure to observe these prescriptions, even in part, may pose a serious hazard to the rider's and other people's safety.



Caution: Failure to observe these prescriptions, even in part, may result in damage to the motorcycle.

The following symbols give an indication of who is supposed to perform the different adjustments and/or maintenance operations:



Information on operations that can be carried out by the user.



Information on operations that are reserved for authorized personnel.

The “§” symbol refers the reader to the chapter identified by the number that follows.



1


1.3 Warranty Booklet and Service Coupons

Besides this Owner's Manual, the vehicle is accompanied by a Warranty Booklet containing a Warranty and Pre-Delivery Certificate and recommended service coupons.

IMPORTANT

The copy the Warranty and Pre-Delivery Certificate to be sent to MV Agusta Motor must be filled in by the dealer and returned to the factory within 7 days from the date of registration.

Every time the vehicle is serviced by a dealer, the user must produce the Warranty Booklet so that the dealer can fill in the service coupon and return it to the manufacturer within 7 days from the date of the servicing.

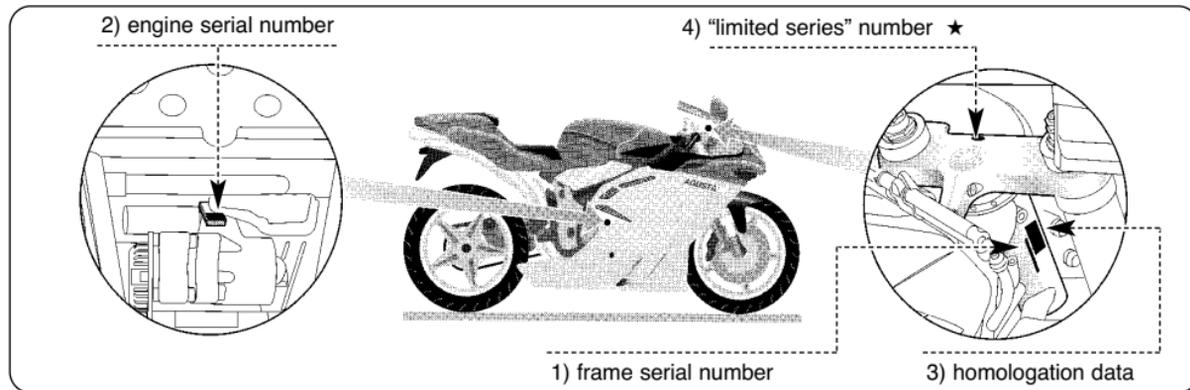

1.4 Identification data

- 1) frame serial number
- 2) engine serial number
- 3) homologation data
- 4) "limited series" number ★

► Motorcycle identification

The motorcycle is identified by a frame serial number. When placing orders for spare parts, in addition to this number, you may be required to provide the engine serial number, the colour code and the key identification.

We recommend writing down all these numbers and keep them in a safe place.


★ *This motorcycle has been produced in a limited series. Each vehicle is identified by a serial number stamped on a 24-carat gold plate.*



1


► Motorcycle key identification


A key is supplied in duplicate for both the ignition and all the locks. Keep the duplicate in a safe place.

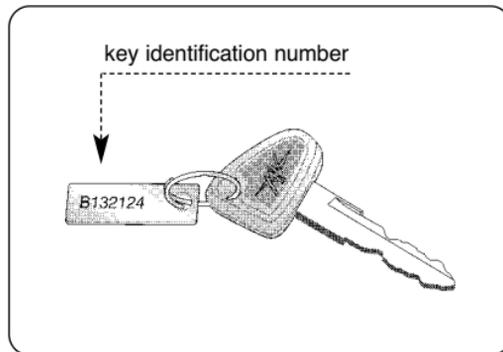

► Identification of motorcycle colour combination

The colour code must be mentioned when ordering body spares.

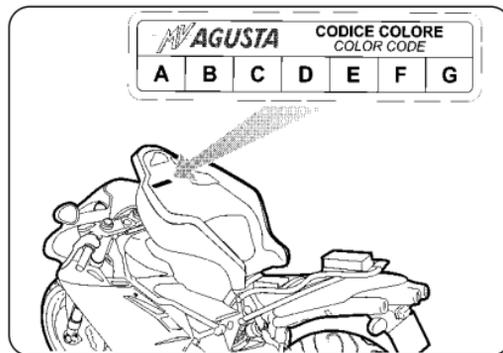

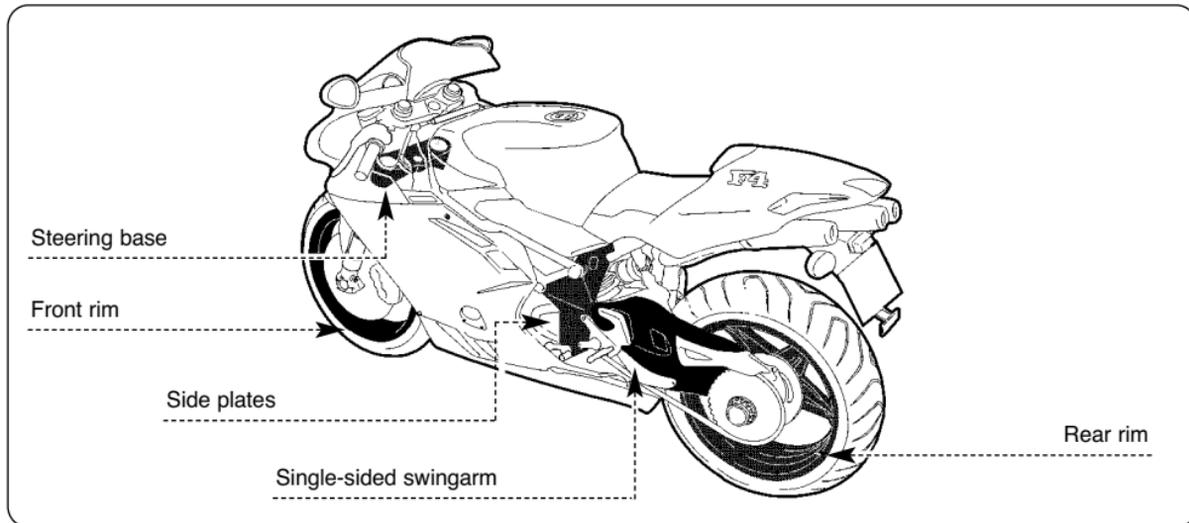

★ 1.5 Magnesium components

Check the condition of the surface coating of magnesium components before each ride. If any abraded parts are noted, immediately contact an authorized service centre.

After travelling on roads treated with salt, wash the parts as soon as possible with cold water. Do not use hot water as it enhances the corrosive action of salt.



2.1. Safety

2.1.1 HOW TO REPORT A SAFETY-RELATED DEFECT

2

If you believe that your vehicle has a defect capable of causing accidents involving the risk of death or injury, immediately contact the National Highway Traffic Safety Administration (NHTSA) as well as MV AGUSTA Motor S.p.A. If the NHTSA receives, or has received, similar complaints, it may order an investigation and, if a safety-related defect is found on a certain number of vehicles, it may arrange for a recall to be conducted. On no account, however, can the NHTSA be involved in any controversy arising between you and your dealer or MV AGUSTA Motor S.p.A. To contact the NHTSA, you may call the toll-free Auto Safety Hotline at 1-800-424-9393 (or 366-0123 in the Washington D.C. area), or send a letter to the following address: NHTSA, U.S. Department of Transportation, Washington, D.C. 20590.

The Hotline may also provide you with additional information on motor vehicle safety.

2.1.2 NOISE EMISSION WARRANTY

MV AGUSTA Motor S.p.A. warrants that, at the time of sale, the exhaust system conformed to all applicable U.S. EPA (Environmental Protection Agency) noise control regulations. The warranty applies to the first retail purchaser of the exhaust system and to all subsequent buyers. Any warranty claims must be addressed to: Cagiva U.S.A., Davisville Road, Willow Grove, PA 19090-4139.

2.1.3 NOTE ON TAMPERING

Tampering with the noise control system is prohibited. In particular, federal law prohibits the following acts:

1. The removal or rendering inoperative, other than for purposes of maintenance, repair, or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use.



2. The use of the vehicle after such device or element of design has been removed or rendered inoperative.

Acts presumed to constitute tampering include:

1. The removal or piercing of the exhaust silencer, the diaphragm, the manifolds, or any other components involved in the transmission of exhaust gases.
2. The removal or piercing of any part of the intake system.
3. Poor maintenance.
4. The replacement of any movable parts of the vehicle or of any intake or exhaust components with parts or components other than those prescribed by the manufacturer.

NOTE

We recommend overhauling and if necessary repairing or replacing the product if a marked increase in noise levels is noted.

Failure to do this may cause the owner to incur the penalties provided for by local and national legislation.



WARNING

Highway Code provisions vary from country to country. Make sure of the content of local regulations before using the vehicle.



2.1.4 INFORMATION ON THE EMISSION CONTROL SYSTEM

The combustion process produces carbon monoxide and hydrocarbons. Hydrocarbon control is particularly important in that, under certain conditions and when exposed to direct sunlight, hydrocarbons undergo reactions which lead to the formation of photochemical smog. Carbon monoxide does not react in the same way, but it is highly toxic. **MV Agusta** uses a sequential multi-point electronic injection system and other methods designed to cut carbon monoxide and hydrocarbon emissions.

Exhaust emission control system

The exhaust emission control system is made up of the sequential multipoint injection (SMPI) system, which requires no adjustment. The exhaust emission control system is distinct from the crankcase emission control system.

Crankcase emission control system

The engine is equipped with a closed-crankcase

system designed to prevent the release of crankcase emissions into the atmosphere. Blow-by gases return to the combustion chamber via the air filter and the injection system.

Problems relating to the vehicle's emissions

Should the vehicle show any of the following symptoms, contact your **MV Agusta** dealer to have it checked and if necessary repaired:

- 1) Engine is difficult to start or stalls after starting.
- 2) Idle speed is erratic.
- 3) Misfiring or backfiring during acceleration.
- 4) Afterburning.
- 5) Poor performance (driveability) and excessive consumption.



2.1.5 SAFETY RULES



IMPORTANT: READ BEFORE USE

- Before riding, carefully read this manual so as to familiarize yourself with the controls, characteristics, functionalities and limits of the vehicle. The manual is not aimed at providing information on all possible techniques and methods required for safe riding.
- Do not attach a sidecar, a trailer or any other accessory to the motorcycle. Do not modify the vehicle in any way. Failure to observe this prescription may make the vehicle unstable and cause serious accidents.
- To ensure maximum reliability and maintain the vehicle in perfect working order, it is essential to perform the servicing detailed in the Scheduled Maintenance Table and to follow all the prescriptions provided in this manual. For further information, apply to your dealer, who possesses the necessary technical skills and the workshop manual.
- The introduction of structural improvements and performance enhancements in the production process may cause the structure of the vehicle to depart slightly from the illustrations and texts contained in this manual.



2

- ▶ **Do not use the motorcycle, nor try to service it, if you do not possess the necessary skills.**
- ▶ **Full control of the motorcycle is fundamental to safe riding. Concentration and a perfect physical condition are essential requirements for the rider. The road and weather conditions should also be taken into account.**
- ▶ **Always wear suitable clothes, especially when travelling by night (e.g. garments with fluorescent bands).**
- ▶ **Always wear a helmet, even on short rides.**
- ▶ **When travelling during daylight, keep the low beam on if allowed by local regulations.**
- ▶ **Do not attach objects or wear garments that could adversely affect control and handling of the motorcycle.**
- ▶ **When refuelling, switch off the engine and refrain from smoking.**
- ▶ **When refuelling, avoid spilling the fuel onto the tank and the exhaust pipes.**
- ▶ **When refuelling, stay away from the vehicle to avoid inhaling harmful fumes. Should the fuel come into contact with the skin or clothes, immediately wash with water and change the contaminated garments.**
- ▶ **Some parts of the vehicle become very hot during use. Avoid contact with these parts and keep the motorcycle out of the reach of children.**
- ▶ **Always park the motorcycle safely and avoid leaving it unattended while the ignition key is in the dashboard.**
- ▶ **Park the vehicle where it is unlikely to be bumped into or damaged.**
- ▶ **To prevent the vehicle from tipping over, never park it on soft or uneven ground.**
- ▶ **Do not start the engine in closed places. Exhaust gases are toxic and can quickly saturate the air and cause fainting or even death.**
- ▶ **Before starting the engine in a closed place, ensure that the area is well ventilated.**



- ▶ While the vehicle is in motion, always rest the feet on the specially designed supports.
- ▶ While riding, always keep both hands on the handlebars.
- ▶ Maximum performance of the standard brake pads is obtained on dry roads. Also available on request are pads that ensure optimum performance even on wet roads (for further information contact an authorized service centre).

2.1.6 INSTALLING ACCESSORIES

MV Agusta provides a range of accessories specially designed for your vehicle. It is essential that these accessories are installed by an authorized service centre. The use of non-genuine accessories can make the vehicle unsafe by reducing its handling, stability and the effectiveness of the braking system. For this reason, the installation of any non-genuine accessory makes the warranty null and void and relieves **MV Agusta** of all responsibility.

2.1.7 VEHICLE LOAD

The **F4 S** version is designed for use by the rider only, whereas the **F4 S 1+1** version can also seat a passenger. To use the vehicle in complete safety and in compliance with the Highway Code, it is essential that the following maximum load conditions are never exceeded:

| | | |
|-----------------|--------|-----------|
| F4 S | 325 kg | (717 lbs) |
| F4 S 1+1 | 405 kg | (893 lbs) |

These values are also shown on the plate fixed to the left side of the steering head tube.



2

2.1.8 MODIFICATIONS

Any modifications made to the vehicle (e.g. alteration and/or removal of components) can make the vehicle unsafe or unlawful. Modifying the vehicle immediately voids the warranty and relieves MV Agusta of all responsibility.

Highway Code for which **MV Agusta** cannot be held responsible.

2.1.9 COMPETITIONS



WARNING

Riding the vehicle in competitions requires considerable skill and experience as well as an accurate setup of the motorcycle.

MV Agusta has designed a number of special components for use in competitions and/or sporting events. The use of such components is strictly limited to areas closed to traffic. Failure to observe this restriction constitutes a breach of the



2.1.10 RECOMMENDATIONS FOR SAFE RIDING

Besides being a means of transport, your motorcycle is a source of recreation and excitement. However, the configuration of the vehicle does not exclude a certain amount of risk. To ensure maximum safety, in addition to scrupulously observing the indications provided in the previous paragraphs, it is essential to take a few additional precautions.

In particular:

Before starting off

Follow all the directions given in the section “PRE-DELIVERY CHECKS”. Conduct an overall check of all safety-related aspects of the motorcycle.

Familiarizing with the vehicle

The rider's ability and his mechanical skills form the basis of riding safety. It is advisable to practise riding in areas without traffic until you have

become familiar with the vehicle and its controls. Remember: practice leads to perfection.

Being aware of one's limits

When riding, never exceed your limits nor those imposed by law. Being aware of your limits and acting accordingly will help you avoid accidents.

Adverse weather conditions

Be very careful when riding in adverse weather conditions. On wet roads, for example, the braking distance doubles as a result of reduced tyre traction. It is therefore necessary to travel at moderate speed and avoid abrupt braking and acceleration. Pay particular attention when riding on slippery surfaces such as road markings, manholes, level crossings, bridges, gratings, etc. Considering that a motorcycle cannot provide the same degree of shock protection as a motor vehicle, it is essential to adopt a “defensive” riding attitude, particularly in the adverse weather conditions described above.



► Before changing lanes, besides using the rearview mirror, turn your head slightly and glance back to make sure that the road is clear.

Relying on the rearview mirror alone puts the rider at risk of misjudging the distance and speed of the vehicles at the back or not seeing them at all.

► Change gears as necessary to ensure that the proper gear ratio is chosen in all riding conditions, allowing the engine to revolve at optimum speed at all times.

Avoid high gear ratios when travelling at reduced speed (excessively low rpm) as well as low gear ratios when travelling at high speed (excessively high rpm).

► Special attention should be given to the braking system, which plays a key role in ensuring safety. When braking, always take account of the speed of the vehicle and the condition of the road surface.

The braking action should always be applied gen-

tly and gradually to both wheels, an ability that can only be learned from experience.

Performing this operation and, more in general, riding the vehicle always requires the utmost care. Therefore, caution should be exercised by all users, and in particular by inexperienced riders.

► When covering long distances downhill, reduce the speed of the vehicle by closing the throttle and using a low gear ratio to take advantage of the exhaust brake. The front and rear brakes should also be used with moderation, in order to prevent them from overheating and reduce their effectiveness.

► When rapid acceleration is required (e.g. when overtaking), change down to obtain better pickup.

► When the engine is running at high speed, gearing down several times in rapid succession can cause the engine to race. As a result, the rear driving wheel may lock, making the vehicle difficult to control and causing damage to the engine.



- ▶ Keep at a safe distance from the preceding vehicles and adjust the speed to the weather and traffic conditions. Remember that, as the vehicle picks up speed, the stopping distance increases and the motorcycle becomes more difficult to control. In any case, never exceed the speed limits imposed by the Highway Code.
- ▶ It is strictly forbidden to drink alcoholic beverages or take drugs before riding. Even very small amounts of these substances adversely affect the rider's ability to control the vehicle.

2.1.11 PROTECTIVE CLOTHING

Helmet wearing is compulsory under the Highway Code. The helmet must be securely fastened and, if it is of the open-face type, specially designed glasses are also required.

Suitable protective clothing, though not required by law, is strongly recommended.

In particular, the following items should be worn:

- ▶ A strong, close-fitting and easy-to-fasten vest.
- ▶ A collar for protecting the throat from the air flow.
- ▶ Supple, reinforced gloves providing both sensitivity and protection.
- ▶ Strong, close-fitting trousers covering the legs completely.
- ▶ Soft, reinforced boots providing both sensitivity and protection.

The items mentioned above are available from any specialized shop.

We recommend buying brightly coloured clothes, as they make the rider easier to see at night and in the fog.

In any case, the clothes must allow complete freedom of movement and not hamper the rider in any way. In addition, they must have no loose parts capable of catching in the control levers, the footrests, the wheels, the drive chain, etc.

**WARNING**

Protective clothes do not afford complete protection against the risk of personal injury in case of accident.


It is therefore essential not to be deceived by the false sense of security that is provided by motorcycle clothing. When riding, always adopt a cautious attitude and follow the recommendations given in the previous paragraphs.

2



2.2 Safety signs - Location


- 1 - Windscreen function
- 2 - Battery warning
- 3 - Unleaded petrol
- 4 - Chain adjustment
- 5 - Information on gas emissions, LH and RH exhausts
- 6 - Information on emission control
- 7 - Emission control
- 8 - Tyre pressure, single-seat F4
- 9 - Tyre pressure, two-seat F4
- 10 - Manufacturer's data, two-seat F4
- 11 - Manufacturer's data, single-seat F4
- 12 - Rearview mirrors
- 13 - Rear shock absorber

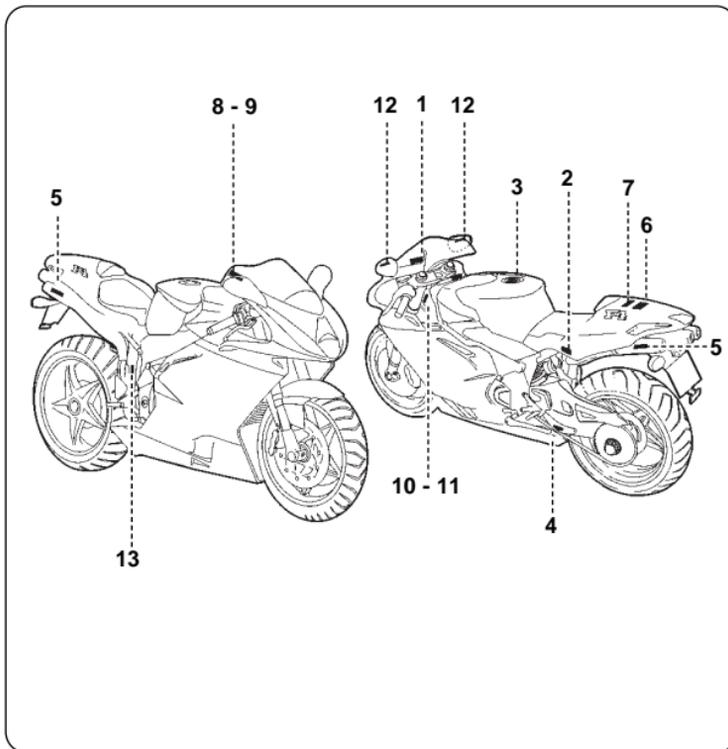



ADHESIVE LABEL – WINDSCREEN WARNING

2

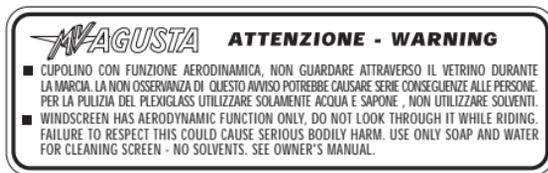


ADHESIVE LABEL – BATTERY WARNING






ADHESIVE LABEL – UNLEADED PETROL

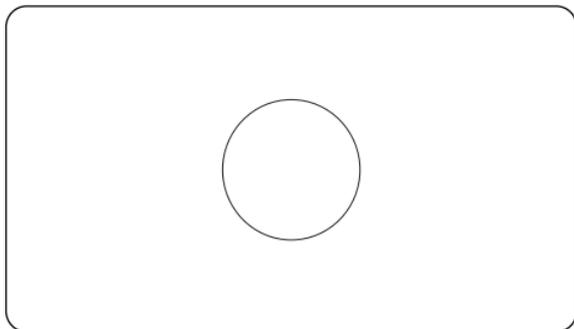

2

ADHESIVE LABEL – CHAIN ADJUSTMENT

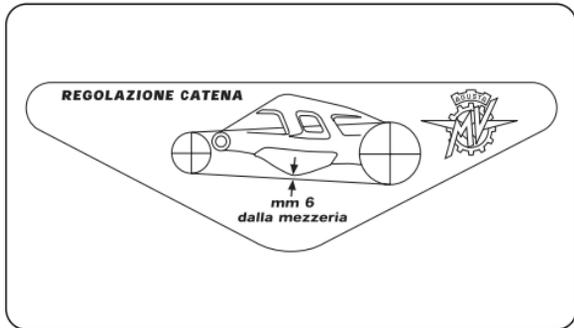

**STAMPING ON LH SILENCER – GAS EMIS-
SION INFORMATION, LH EXHAUST****2**

MOTORCYCLE EXHAUST SYSTEM NOISE EMISSION CONTROL INFORMATION
THIS CAGIVA EXHAUST SYSTEM, 800090377 MEETS US EPA NOISE EMISSION
REQUIREMENT OF 80 dBA FOR THE FOLLOWING
MOTORCYCLES: CAG44F0750. INSTALLATION OF THIS EXHAUST SYSTEM ON
MOTORCYCLE MODELS NOT SPECIFIED MAY VIOLATE FEDERAL LAW

**STAMPING ON RH SILENCER – GAS EMIS-
SION INFORMATION, RH EXHAUST**

MOTORCYCLE EXHAUST SYSTEM NOISE EMISSION CONTROL INFORMATION
THIS CAGIVA EXHAUST SYSTEM, 800090376 MEETS US EPA NOISE EMISSION
REQUIREMENT OF 80 dBA FOR THE FOLLOWING
MOTORCYCLES: CAG44F0750. INSTALLATION OF THIS EXHAUST SYSTEM ON
MOTORCYCLE MODELS NOT SPECIFIED MAY VIOLATE FEDERAL LAW



ADHESIVE LABEL – EMISSION CONTROL

MOTORCYCLE NOISE EMISSION CONTROL INFORMATION

THIS 2000 CAG44F0750 MOTORCYCLE, 800090376 - 800090377 MEETS US EPA NOISE EMISSION REQUIREMENT OF 80 dBA AT 6875 RPM BY THE FEDERAL TEST PROCEDURE. MODIFICATIONS WHICH CAUSE THIS MOTORCYCLE TO EXCEED FEDERAL NOISE STANDARDS ARE PROHIBITED BY FEDERAL LAW. SEE OWNER'S MANUAL.

2

ADHESIVE LABEL – TYRE PRESSURE, SINGLE-SEAT F4

AGUSTA TIRE INFORMATION LABEL

GVWR 717 lbs/325 kg.

GAWR F 331 lbs/150 kg. with 120/65 17"(56W) or 120/60 17"(55W)

PIRELLI-METZELER Tire, 3,5X17" rim at 36 psi COLD

120/65 17"(56W) or 120/60 17"(55W)

MICHELIN Tire, 3,5X17" rim at 32 psi COLD

GAWR R 386 lbs/175 kg. with 190/50 17"(73W) or 180/55 17"(73W)



PIRELLI-METZELER Tire, 6,0X17" or 5,75X17" rim at 33 psi COLD

190/50 17"(73W) or 180/55 17"(73W)

MICHELIN Tire, 6,0X17" or 5,75X17" rim at 34 psi COLD

**ADHESIVE LABEL – TYRE PRESSURE, TWO-SEAT F4**

2

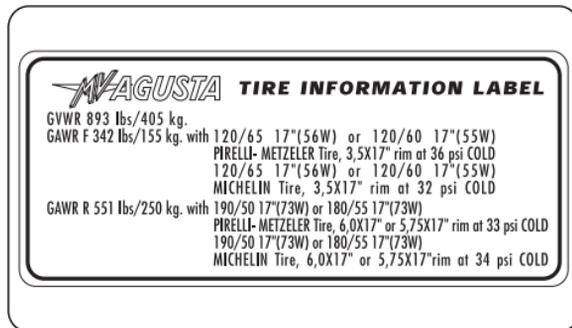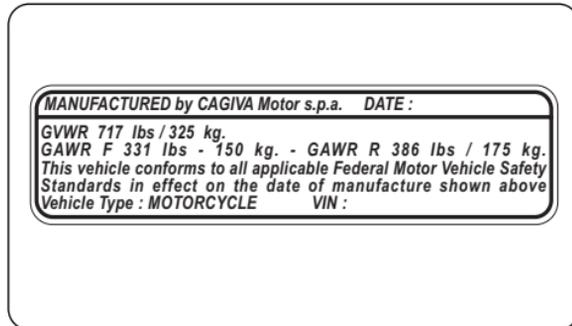**ADHESIVE LABEL – MANUFACTURER'S DATA, SINGLE-SEAT F4**



**ADHESIVE LABEL – MANUFACTURER'S
DATA, TWO-SEAT F4 S**

MANUFACTURED by CAGIVA Motor s.p.a. DATE :
GVWR 893 lbs / 405 kg.
GAWR F 342 lbs - 155 kg. - GAWR R 551 lbs / 250 kg.
*This vehicle conforms to all applicable Federal Motor Vehicle Safety
Standards in effect on the date of manufacture shown above*
Vehicle Type : MOTORCYCLE VIN :

2

ADHESIVE LABEL – REARVIEW MIRRORS

**OBJECTS IN MIRROR ARE CLOSER
THAN THEY APPEAR**



SAFETY INFORMATION

2

ADHESIVE LABEL - REAR SHOCK
ABSORBER

2


WARNING
CONTAINS HIGHLY COMPRESSED GAS
USE ONLY PERFECTLY DRY NITROGEN GAS
OTHER GASES MAY CAUSE EXPLOSION
DO NOT INCINERATE REFER TO OWNER'S
MANUAL FOR REGULATING GAS

SACHS



2.3 Safety - Visual and acoustic signals


Before each ride, it is essential to verify the operation of the visual and acoustic signals.

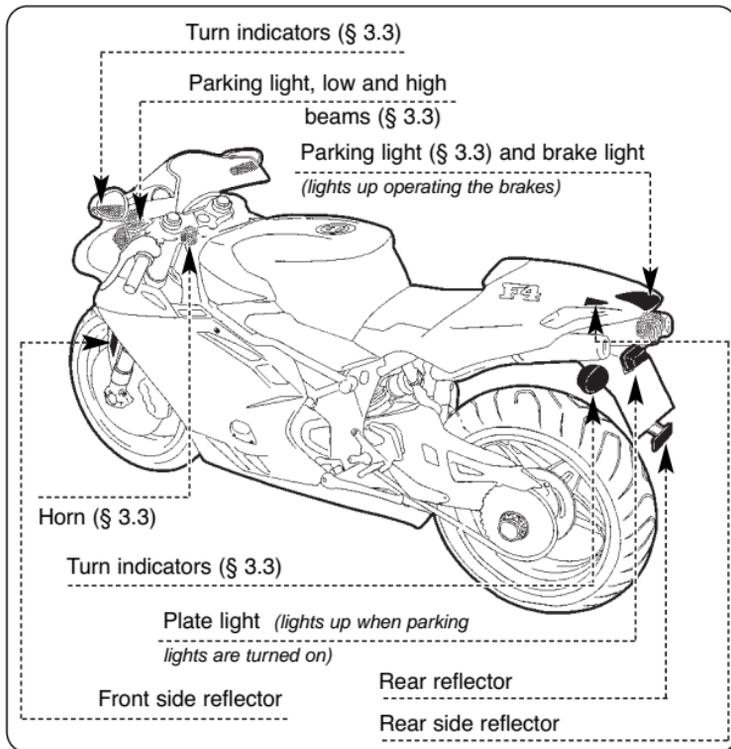



3.1 Location of controls and instruments

3

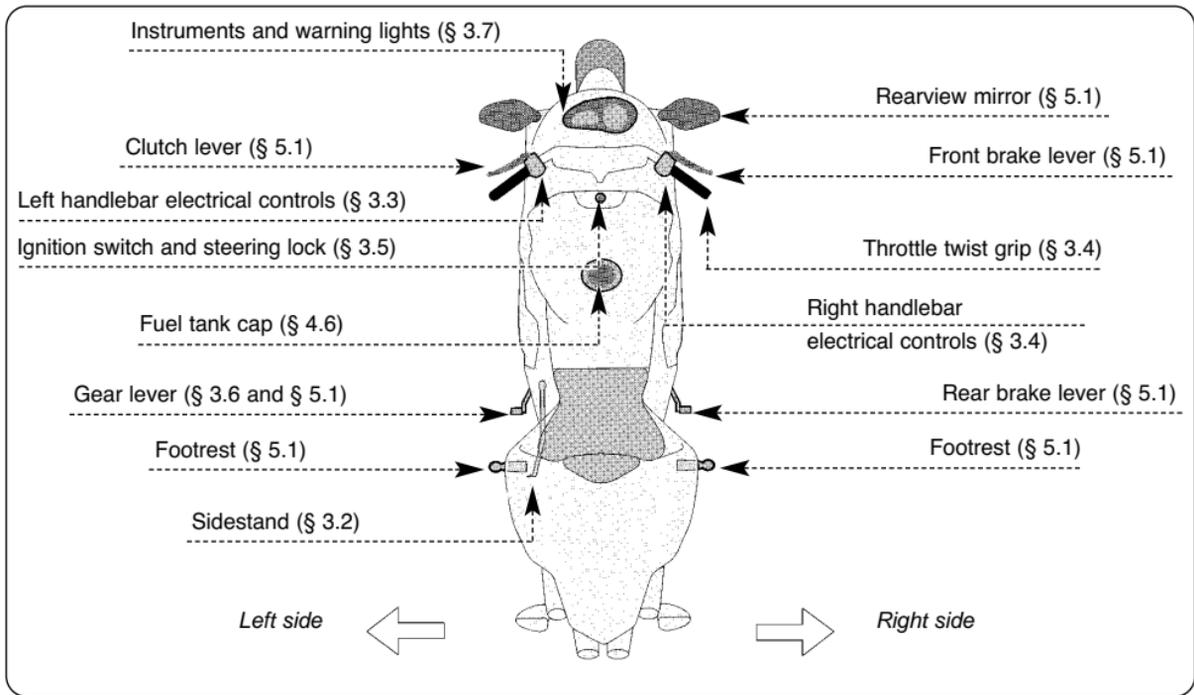



3.2 Sidestand


3.2.1 AUTO RETURN SIDESTAND

The sidestand is equipped with a safety switch that prevents the motorcycle from moving off while the stand is down.

If the rider attempts to engage the gears while the engine is running and the stand is down, the switch automatically turns off the engine by cutting the current supply.

If the motorcycle is parked (sidestand down) and the gears are engaged, the switch prevents the engine from being started, thereby avoiding the risk of accidentally toppling the vehicle.

Some versions of the motorcycle fit a device that automatically pulls up the sidestand as soon as the vehicle is lifted from the parking position.

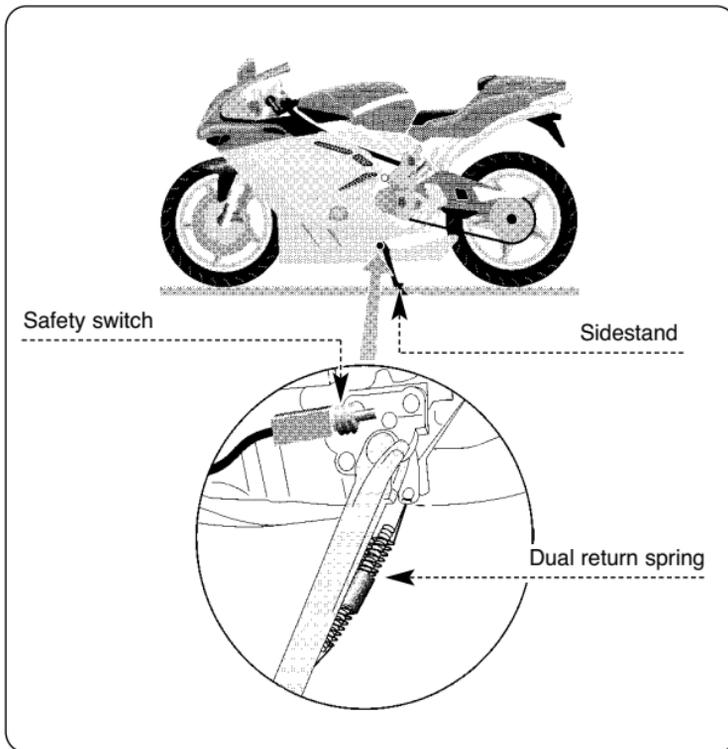




This system is specially designed to save the rider having to lift the side-stand with the foot before starting off.

In any case, the automatic return device does not exclude the function of the safety switch mentioned above.

3


3.2.2 NON-AUTO RETURN SIDE- STAND

Some versions of the motorcycle do not fit an automatic return device for the side-stand, which must then be lifted with the foot before starting off. These versions, however, fit the same side-stand safety switch that makes it necessary to follow the starting procedures described in paragraph 3.2.1.

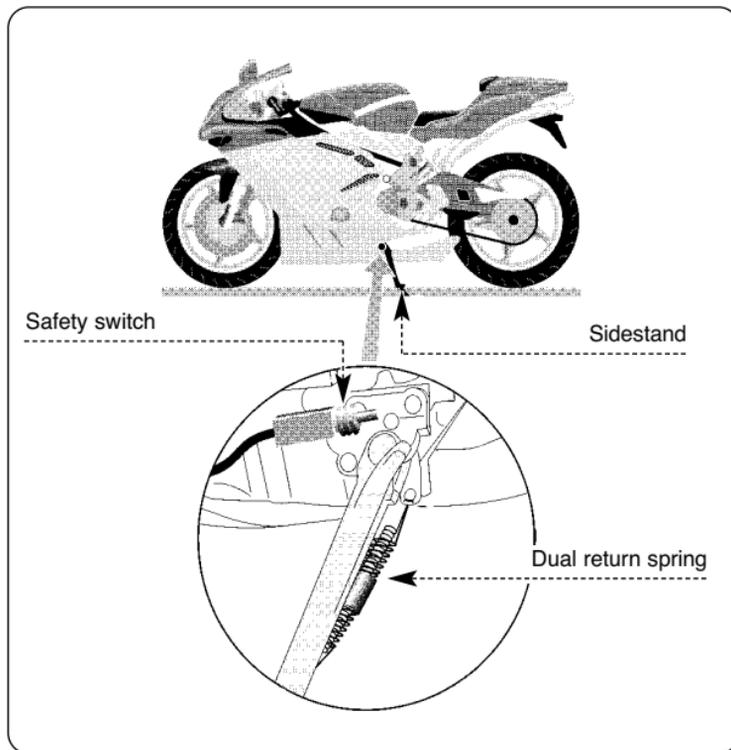



3.3 Handlebar controls, left side

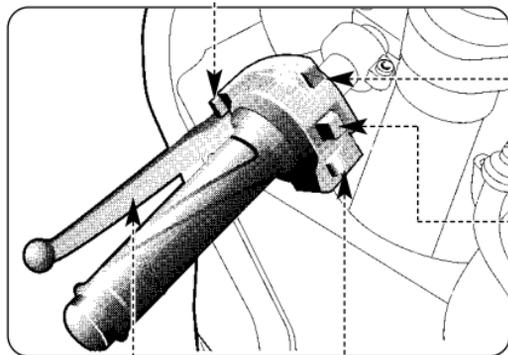

High beam flasher button

Press the button repeatedly

Low/high beam button

Button not pressed in ■ : low beam

Button pressed in — : high beam



Turn indicator switch

Shifting the lever to the left or right switches on the left or right turn indicators. The switch then returns to the central position. Press to turn off the indicators.

Horn button

Press to operate the warning horn.

Clutch lever

Move towards/away from the handgrip to release/engage the clutch.

**High beam flasher button**

It is used to attract the attention of other road users in case of danger. When the high beam is on, the function is inactive.

Low/high beam button

Under normal conditions, the low beam is on. The high beam can be switched on by pressing the button when allowed by the traffic and road conditions.

Turn indicator switch

It is used to show the rider's intention to change direction or lane.

**WARNING**

Failure to switch the turn indicators on or off at the right time may cause an accident in that the other road users may draw incorrect conclusions as to direction of motion the vehicle. Always switch on the indicators before turning or changing lanes. Then be sure to switch off the indicators after completing the operation.

Horn button

It is used to attract the attention of other road users in case of danger.

Clutch lever

It engages/disengages the clutch through a hydraulically controlled device.



3.4 Handlebar controls, right side

Engine stop switch

Stops the engine and prevents it from being restarted.

Engine start button

Starts the engine. To be released as soon as the engine starts. When the engine is running, pressing the button selects the display functions.

Cold start (choke) lever


Rotate clockwise when cold starting. After a few seconds, bring the lever back to the home position.

Throttle twist grip

Rotate to control the engine fuel supply.

Front brake lever

Pull to the handgrip to operate the front brake.

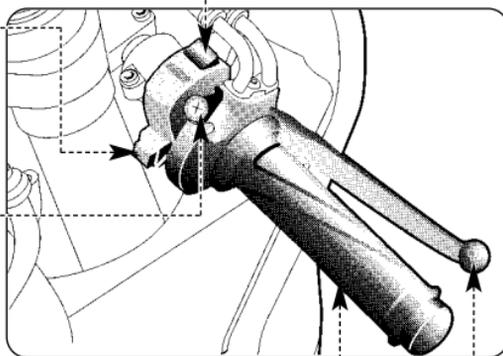

**Engine stop switch**

It is used to switch off the engine in an emergency. The ignition circuit is disabled, preventing the engine from being restarted. To be able to restart the engine, bring the switch back to the home position.

NOTE

Under normal conditions, do not use this switch to shut off the engine.

3**Engine start button**

It is used to start the engine and, when the engine is running, to select the different functions of the display installed on the instrument panel.

**DANGER**

To avoid damaging the electrical equipment, be sure not to hold down the button for longer than 5 consecutive seconds.

If, after several attempts, the engine does not start, refer to the chapter “TROUBLESHOOTING” later in this manual.

Cold start (choke) lever

It facilitates cold starts by acting on the fuel supply.

**NOTE**

This function must remain active only for a short time depending on the engine and outside temperatures. As soon as the idle speed keeps the engine running, it is advisable to disable the control.

Throttle twist grip

It controls the fuel supply, making it possible to change the speed of the engine. To operate the device, rotate the handgrip from the home position, corresponding to the idle speed.

When cold starting (choke on), rotating the handgrip towards the throttle closing position brings the choke lever back to the home position.

Front brake lever

It controls a hydraulic circuit that operates the front wheel braking system.



3

3.5 Ignition switch and steering lock

 **Danger - Warning:** Do not attach a ring or any other object to the ignition key as they may hinder the steering action.

The ignition switch enables and disables the electrical circuit and the steering lock. The four positions of the switch are described below.

OFF position

All electrical circuits are deactivated. The key can be extracted.



ON position

All electrical circuits are activated. The instruments and warning lights perform the self-diagnostic cycle. The engine can be started. The key cannot be extracted.

 **WARNING**
Never attempt to change the switch functions while riding, as you may lose control of the vehicle.

LOCK position


Turn the handlebar to the left or right. Press the key in gently while rotating it to the LOCK position. All electrical circuits are deactivated and the steering is locked. The key can be extracted.

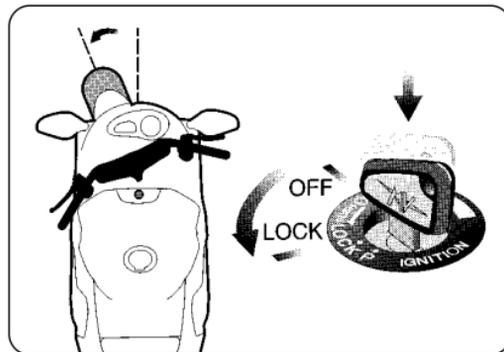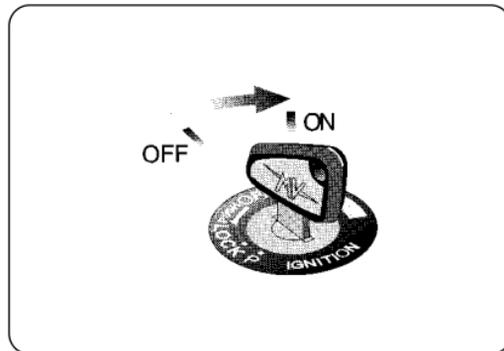



P (PARKING) position

Turn the key from the LOCK position to the P position. All electrical circuits are deactivated except the parking lights. The steering is locked. The key can be extracted.

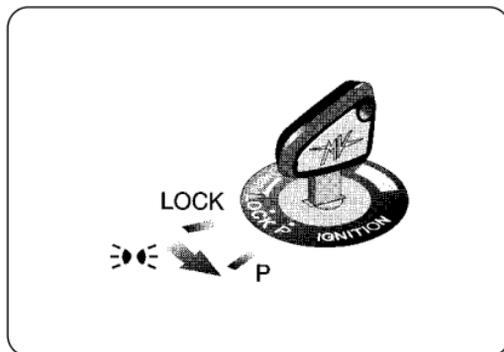


3.6 Gear lever

The **N** (neutral) position is indicated by the related warning light on the instrument panel.

To change into first gear, shift the lever down.

To change into second gear, shift the lever up. Shifting the lever up repeatedly engages all the other gears in succession up to the sixth speed.

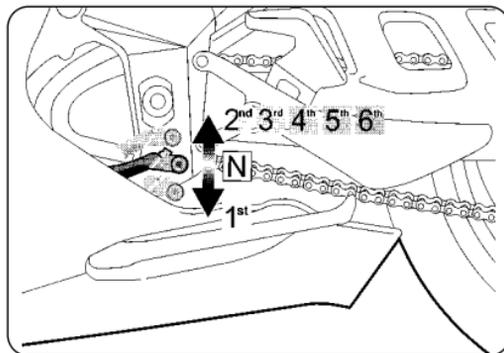




3.7 Instruments and warning lights

The instruments and warning lights are activated by turning the ignition switch to the ON position. After a preliminary check (approx. 7 seconds) the displayed information reflects the current general condition of the motorcycle.

3

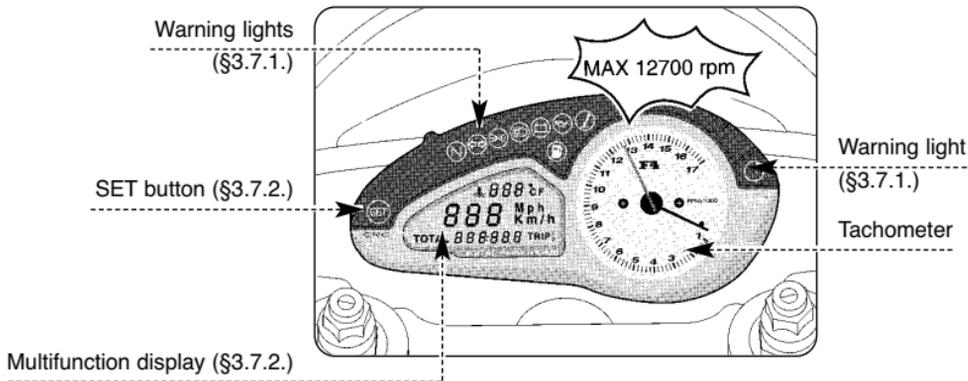



3.7.1 Warning lights

High beam warning light (blue)

Lights up when the high beam is activated.

Low beam warning light (green)

Comes on when the low beam is activated.

Neutral indicator (green)

Lights up when the gears are in neutral.

Turn indicator light (green)

Lights up when the turn indicators are activated.

Reserve fuel indicator (amber)

Comes on when approximately 4 litres of fuel are left.

Battery charge indicator (red)

Lights up when the alternator does not supply enough current to charge the battery.

If the indicator comes on while riding, contact an authorized service centre.

Sidestand down warning light (red)

Lights up when the sidestand is down.

Rev limiter warning light (red)


Lights up when the engine speed exceeds 12,700 rpm. The rev limiter trips at 13,100 rpm.

Engine oil pressure warning light (red)

Lights up when the oil pressure is insufficient.



Danger - Warning: If the warning light comes on while riding, stop the motorcycle immediately. Check and if necessary restore the oil level. If the warning light comes on even if the oil level is correct, do not resume riding and contact an authorized service centre.

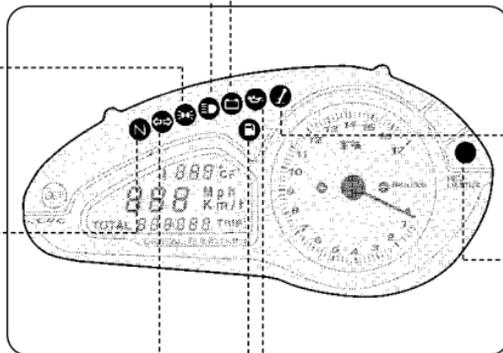



3.7.2 Multifunction display

Speedometer

Measures the speed of the vehicle. The speed can be displayed in kilometres per hour (km/h) or miles per hour (mph). The full-scale value is 320 km/h (200 mph).

Thermometer


Displays the coolant temperature in degrees centigrade (° C) or Fahrenheit (° F).

The display range is 40° to 140° C (104° to 284° F):

- Below 40° C (104° F) no temperature is displayed but three blinking lines denote a very low temperature.
- Between 40° and 49° C (104° and 120° F) the temperature reading blinks to indicate a low temperature.
- Between 50° and 105° C (122° and 221° F) the temperature reading is fixed.
- Between 106° and 140° C (223° and 284° F) the temperature reading blinks to indicate a high temperature.

SET button

Pressing the button allows the setting of the different display functions. Pressing the button again confirms the entered values.

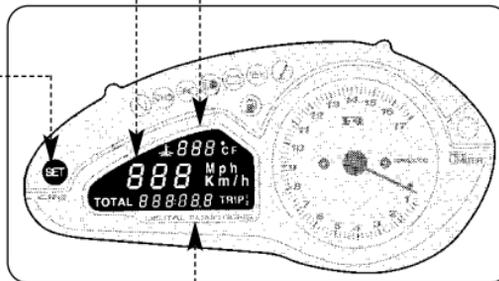

TOTAL mileage counter

Displays the total distance covered: from 0 to 999,000 (km or mi)

TRIP 1 mileage counter

Displays a first trip mileage count: from 0 to 9,999.9 (km or mi)

TRIP 2 mileage counter

Displays a second trip mileage count: from 0 to 9,999.9 (km or mi)

Clock

Displays the time (0÷24)



Danger - Warning: If the temperature exceeds 115° C (239° F), stop the motorcycle, check and if necessary restore the coolant level. If the high temperature indication is given even when the coolant level is correct, do not resume riding and contact an authorized service centre.



4.1 Using the motorcycle

This section provides the basic information needed to correctly operate the motorcycle:

- Running-in (§ 4.2)
- Starting the engine (§ 4.3)
- Setting the display functions (§ 4.4)
- Selecting the display functions (§ 4.5)
- Refuelling (§ 4.6)
- Glove compartment (§ 4.7)
- Parking the motorcycle (§ 4.8)
- Preriding checks (§ 4.9)
- Riding (§ 4.10)



4.2 Running-in




Caution: Failure to observe the indications provided below can reduce performance and shorten the life of the motorcycle.

Running-in is generally considered to apply only to the engine. In fact, it should be regarded as an essential phase for other important parts such as the tyres, the brakes and the drive chain. During the very first kilometres, adopt a relaxed riding style.

4

0 to 500 km (0 to 300 mi) (A)


Frequently change the engine speed. If possible, prefer hilly routes with gentle slopes and many bends. Avoid long straight stretches.

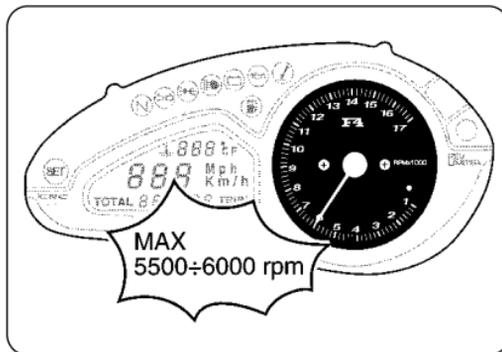



□ 500 to 1000 km (300 to 600 mi)


Avoid subjecting the engine to prolonged strain.

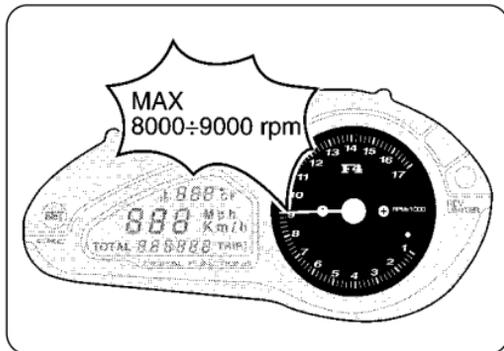

4

□ 1000 to 2500 km (600 to 1600 mi)

Higher engine performance can be demanded, but it is advisable not to exceed the engine speed shown in the figure..

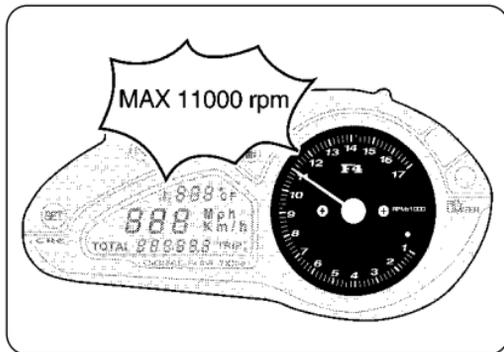



4.3 Starting the engine



Caution: Avoid warming up the engine while the vehicle is stationary. It is advisable to bring the engine to the working temperature by riding at reduced speed.

► Turn the ignition switch to the ON position. The instruments and the warning lights will go through the self-diagnostic cycle. Make sure the gears are in neutral.

4

❑ Cold starting

► Rotate the CHOKE lever without turning the throttle twist grip and then press the start button.

► As soon as the engine starts, release the button and, after warming up the engine for a short time, bring back the CHOKE lever to the home position.



❑ Hot starting

► Press the start button without turning the throttle twist grip.

► As soon as the engine starts, release the button.



Caution: Do not press the start button for longer than 5 consecutive seconds.

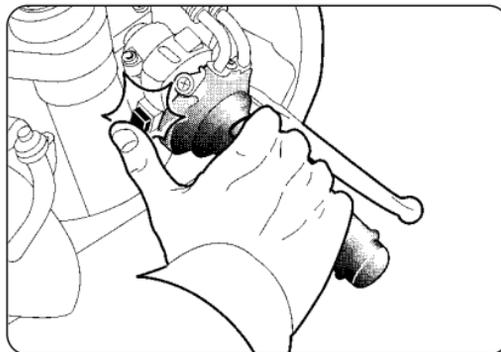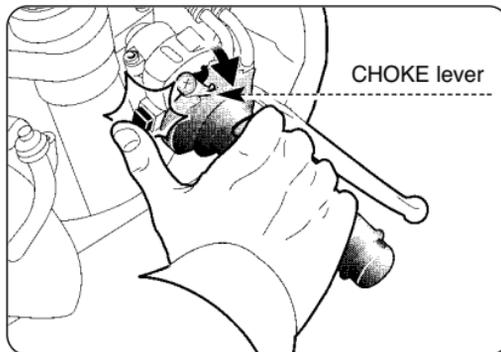



4.4 Setting the display functions

The following functions can be set: clock, speedometer and thermometer units.




WARNING


The operation must be performed while the engine is running, the gears are in neutral, the motorcycle is stationary, and with the feet on the ground. Do not set the display functions while riding.

❑ Clock (hours and minutes)

- ▶ Repeatedly press the button until the time is displayed.
- ▶ Press the SET button – the first hour digit will start blinking.

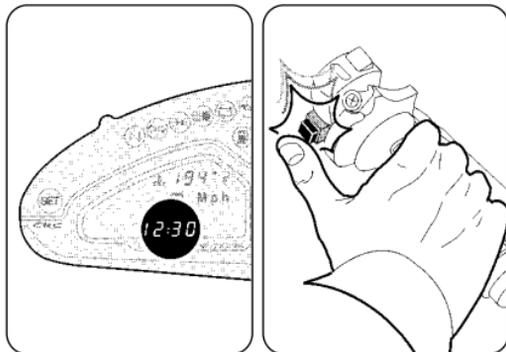

4

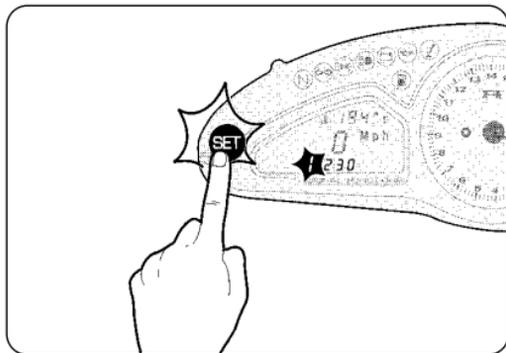



- ▶ Hold down the button and release it as soon as the desired figure is displayed.
- ▶ Repeat the procedure to set the second hour digit and the first and second minute digits.



NOTE

To quickly cycle through the selected digit, hold the start button depressed for longer than two seconds.

4**NOTE**

The instrument panel has an integrated memory which retains all the parameters even when the engine is not running. Except for the clock, which is reset, all the parameters are retained even when the battery is disconnected.

- ▶ Press SET to confirm the time and exit the set (blinking) mode.

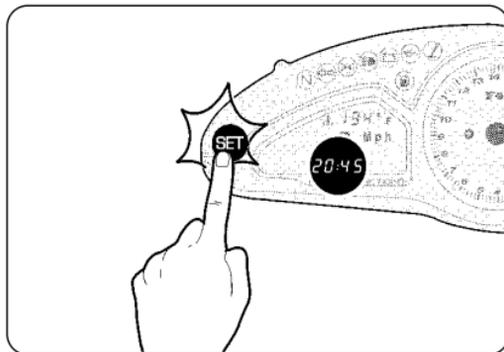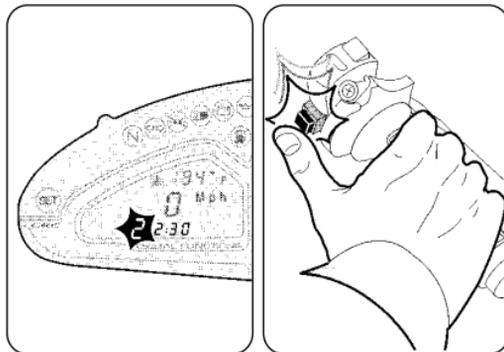




OPERATION

4


❑ Speedometer (km/h - mph)

▶ Repeatedly press the button until the TOTAL counter function is displayed.

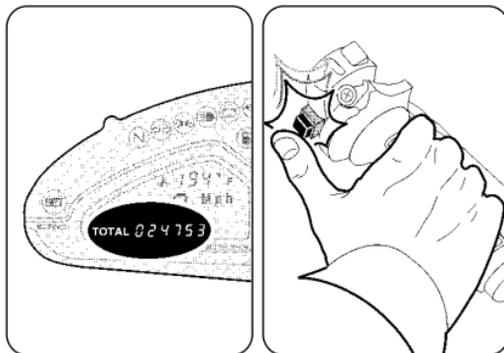


4

▶ Press the SET button. The speedometer unit will start blinking.

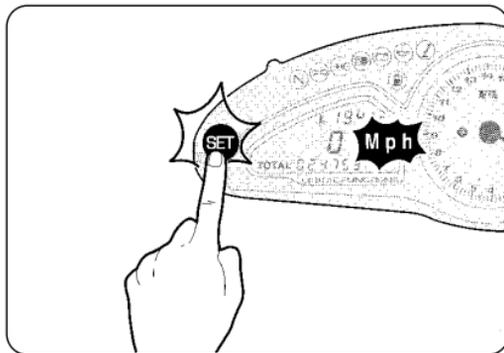




► Press the button to toggle between km/h and mph. Changing the speedometer unit also changes the units for the total and trip mileage counters.

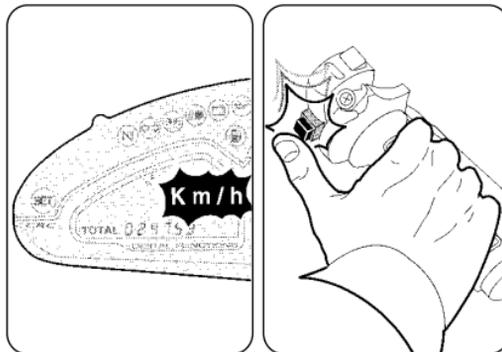

4


► Press SET to confirm the speedometer unit. The thermometer unit will start blinking, indicating that the display is ready for the next setting.

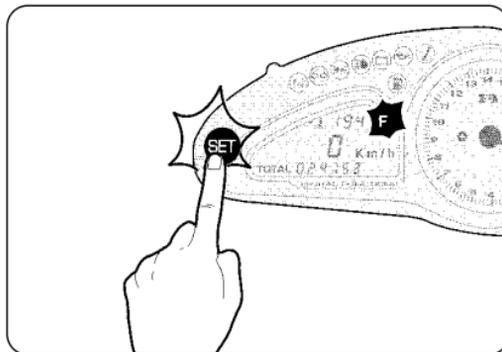




▣ Thermometer (° C - ° F)

- ▶ Press the button to toggle between ° C and ° F.

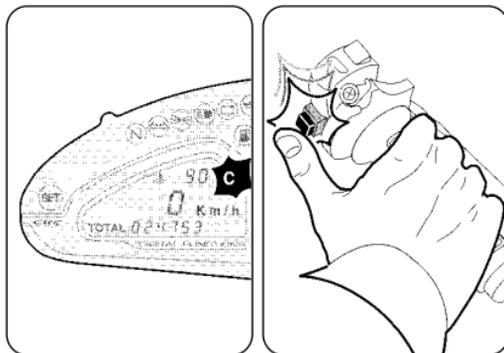

4

- ▶ Press SET to confirm the temperature unit.

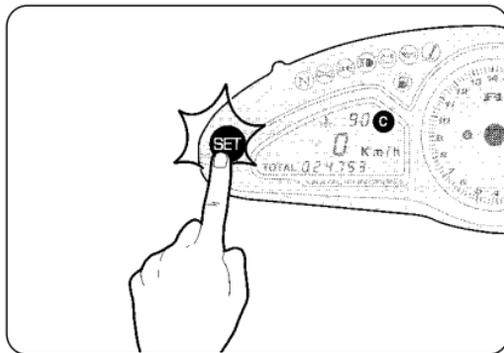




4.5 Selecting the display functions

Selectable functions include the TOTAL, TRIP 1 and TRIP 2 mileage counters, and the clock. The selection must be performed while the engine is running.

4

► Pressing the button repeatedly cycles through the different functions.

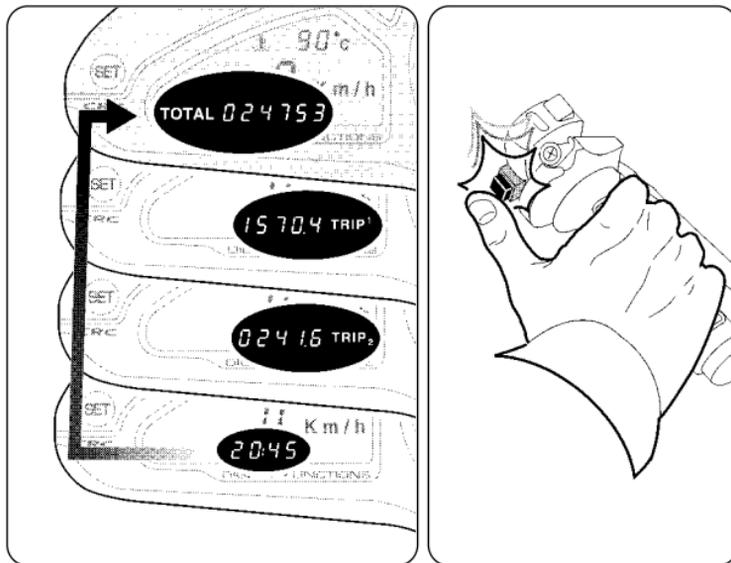





❑ Resetting the trip mileage counters

The TRIP 1 and TRIP 2 counters can be reset as follows:

▶ Press the button for longer than four seconds. The mileage will start blinking.

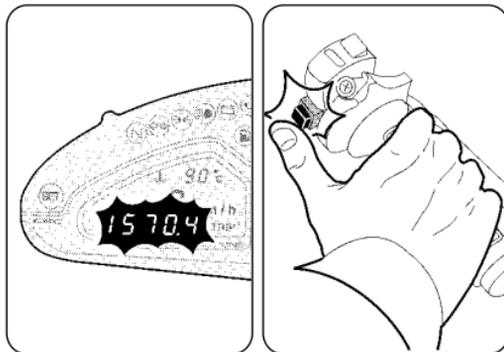

▶ Pressing the button for less than four seconds sets the mileage to zero. If, on the other hand, the button is pressed for longer than four seconds the entire resetting procedure is cancelled.

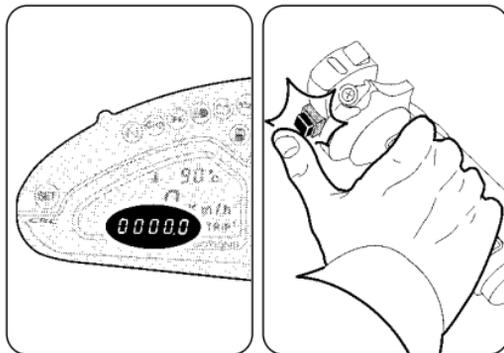




4.6 Refuelling

 **Danger - Warning:** When refuelling, switch off the engine, avoid smoking, and keep away from flames, sparks and heat sources.

 **WARNING**
Petrol and its fumes are highly toxic and flammable. Avoid contact and inhalation.

 **Caution:** Only use high-octane unleaded petrol. A green dot on the lower side of the tank cap serves as a reminder of this.

- ▶ Lift the dust cover.
- ▶ Insert the key into the lock, rotate it clockwise and lift the tank cap.
- ▶ After refuelling, press down the tank cap while rotating the key clockwise to facilitate the locking. Then release the key and extract it.

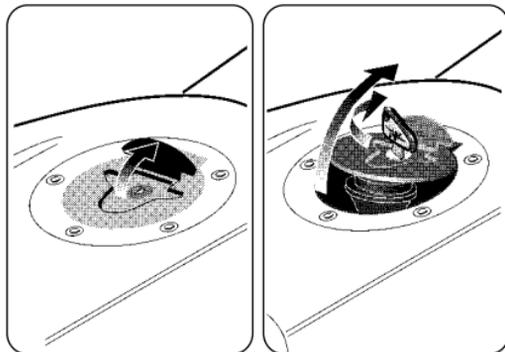


**WARNING**

Overfilling the tank may cause the fuel to overflow as a result of the expansion due to the heat from the engine or to exposure to sunlight. Fuel spills can catch fire. The level of the fuel in the tank must never be higher than the base of the filler.

4.7 Glove compartment

- ▶ Insert the key into the lock.
- ▶ Press down the tail section end while turning the key clockwise.
- ▶ Slightly lift the tail section off the rear end. Slide the tail section backwards and overturn it onto the fuel tank.

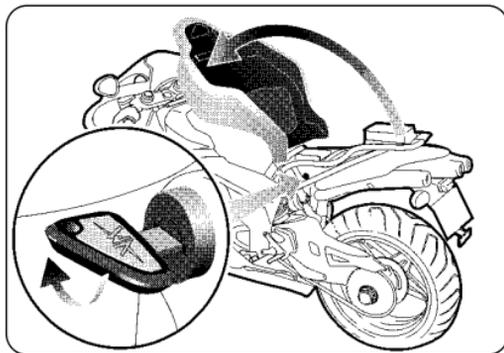



4.8 Parking the motorcycle

□ Using the sidestand



Care - Caution: Park the motorcycle safely on solid ground.


On slopes, engage the bottom gear and park the vehicle so that the front wheel faces uphill. Remember to put the gear lever in the neutral position before restarting the engine. Never leave the vehicle unattended while the ignition key is in the dashboard.

In versions equipped with an auto return sidestand, even a light blow can accidentally operate the return device and cause the vehicle to topple over.

► Using a foot, lower the sidestand to travel end and then slowly tip the motorcycle to bring the stand support foot into contact with the ground.

NOTE

When parking a vehicle equipped with an auto return sidestand, be sure to bring the stand all the way down with the foot and to keep it in position until the vehicle is stable.

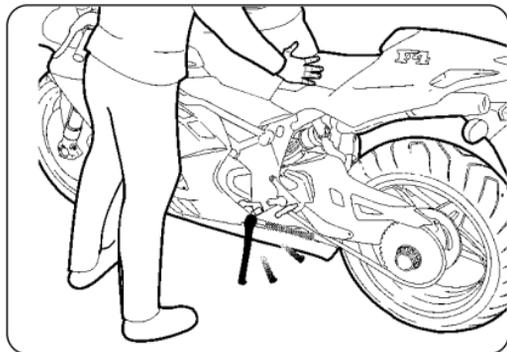

WARNING

Do not sit on the vehicle when it is parked on the sidestand, as your full weight would rest on the vehicle's only support.



WARNING


Before moving off, ensure that the sidestand warning light on the instrument panel goes out. In any case, make sure that the stand has been retracted.



□ Using the rear stand

Insert the stand pin into the rear wheel axle hole on the left side of the motorcycle. Rest the stand on the ground and, pressing down on the stand, lift the vehicle until it reaches a stable condition.

4

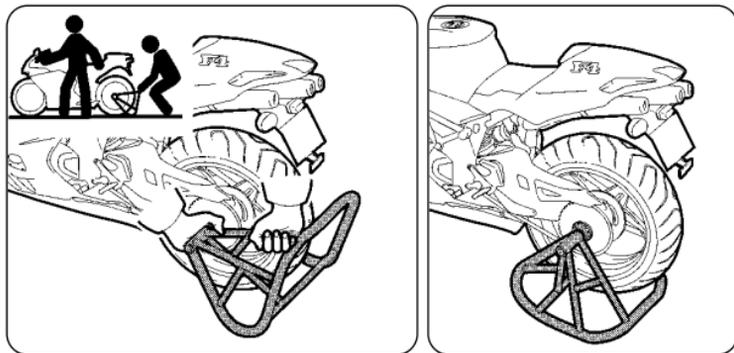



4.9 Pre-riding checks

A motorcycle can be in good running order and then become unexpectedly unreliable even if unused (e.g. deflation of the tyres). It is therefore important to carry out the checks described in the table below before each ride. A few moments taken to carry out these checks will help you maintain your motorcycle safe and in perfect working order.

Brakes

Check fluid level (§ 6.8).

Check for fluid leakages.

Pull lever and press pedal to check brake operation.

Check pads for wear (§ 6.7)

Clutch lever

Check fluid level (§ 6.9).

Check for fluid leakages.

Pull lever and check that it moves smoothly and gradually.

Throttle twist grip

Check that grip rotates smoothly and returns to closed position when released.

Steering damper

Always check adjustment (§ 5.6).

Engine start button / stop switch

Check operation (§ 3.4).

Lights, visual and acoustic signals

Check operation.

Tyres

Check inflating pressure and wear (§ 6.10).

Suspensions

Check adjustment (§ 5.7 and § 5.8).

Drive chain

Check adjustment and lubrication (§ 6.11).

Coolant

Check level (§6.6).

Check for leakages.

Engine oil

Check level (§ 6.5).

Check for leakages.

Sidestand

Check return to home position.

★ Magnesium components

Check condition of surface coating (§ 1.5).



4.10 Riding

Riding a motorcycle requires experience and concentration.

Inexperienced riders should undergo a period of training and attend an introductory course consisting of theoretical lessons as well as practical riding sessions in areas closed to traffic.

The instructor's advice will help the novice rider become familiar with the basics of riding safety.

Relying on the advice of persons other than a qualified riding instructor, even if possessing specific knowledge, may prove to be useless or even dangerous, especially if the practical training takes place in an area open to traffic.

**WARNING**

While riding, always observe the safety prescriptions described in paragraph 2.1.10 of this manual.



5.1 List of adjustments

There are many adjustments that can significantly improve the ergonomics, geometry and safety of the motorcycle.

Some of these can only be performed by skilled personnel at authorized service centres.



WARNING

To avoid losing control of the vehicle while riding, be sure to always keep both hands on the handlebars. All adjustments must be performed when the vehicle is stationary.



(F) Rearview mirror adjustment (§ 5.5)


(A) Clutch lever adjustment (§ 5.4)

(F) Rearview mirror adjustment (§ 5.5)

★ (C) Right-hand footrest adjustment (§5.2.)

(E) Rear brake lever adjustment (§ 5.2)


(B) Front brake lever adjustment (§ 5.3)

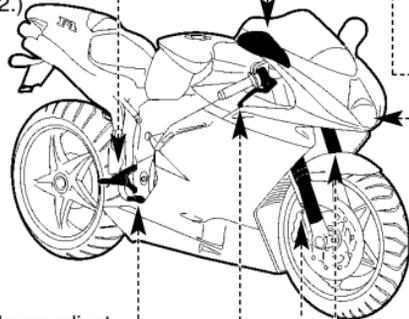

(G) Steering damper adjustment (§ 5.6)

(D) Gear lever adjustment (§ 5.2)

(L) Rear suspension adjustment (§ 5.8)

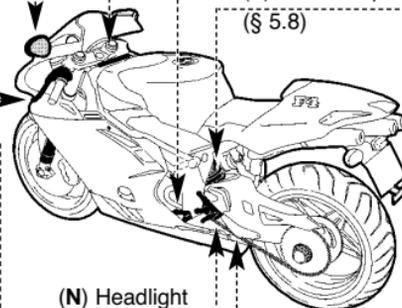

(N) Headlight adjustment (§ 5.2)

(M) Drive chain adjustment (§ 5.2)

★ (C) Left-hand footrest adjustment (§ 5.2)

(H) Front suspension adjustment (§ 5.2)



5.2 Table of adjustments



A - Clutch lever adjustment: Optimizes the grip to suit the rider's needs (§ 5.4).



B - Front brake lever adjustment: Optimizes the grip to suit the rider's needs (§ 5.3).



C - LH and RH footrest adjustment: Optimizes the position of the feet to suit the rider's needs ★.



D - Gear lever adjustment: Optimizes the movement of the lever to suit the rider's needs.



E - Rear brake lever adjustment: Optimizes the movement of the lever to suit the rider's needs.



F - Rearview mirror adjustment: Optimizes the orientation of the rearview mirrors (§ 5.5).



G - Steering damper adjustment: Adjusts the steering stiffness to the rider's preference (§ 5.6).



H - Front suspension adjustment: The following can be adjusted to adapt the response of the suspension to the rider's preference:

- spring preload (§ 5.7)
- rebound damping hydraulic device (§ 5.7)
- compression damping hydraulic device (§ 5.7)



L - Rear suspension adjustment: The following can be adjusted to adapt the response of the suspension to the rider's preference:

- spring preload
- geometry height
- rebound damping hydraulic device (§ 5.8)
- compression damping hydraulic device (§ 5.8)



M - Drive chain adjustment: To ensure safe and effective transmission of power.




N - Headlight adjustment: To adjust the range of the light beam to the geometry of the motorcycle.



5.3 Adjusting the front brake lever

 **Danger - Warning:** Never perform the adjustment while riding.


While pulling the lever to counter the action of the spring, turn the ring clockwise or anticlockwise to move the lever away or towards the handgrip respectively.

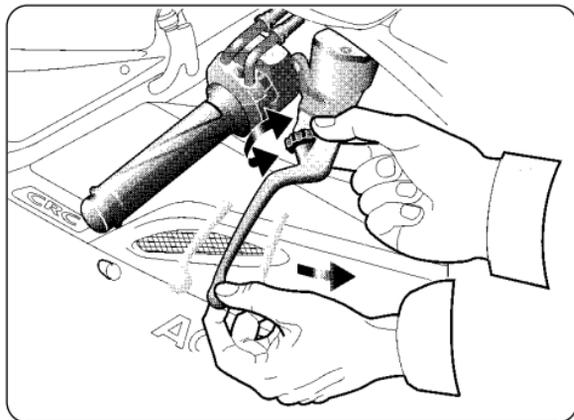

5.4 Adjusting the clutch lever

 **Danger - Warning:** Never perform the adjustment while riding.

While pulling the lever to counter the action of the spring, turn the ring clockwise or anticlockwise to move the lever away or towards the handgrip respectively.

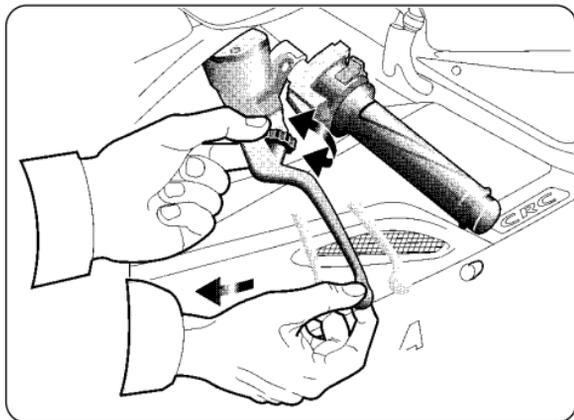



5.5 Adjusting the rearview mirrors

Press the mirror at the points shown in the figure to adjust its position in the four directions.

5.6 Adjusting the steering damper



Danger - Warning: Never perform the adjustment while riding.

The standard adjustment is obtained by fully rotating the knob anticlockwise. In this position the damper offers the least resistance to the rotation of the steering.



To suit the rider's needs, the action of the damper can be gradually increased by rotating the knob clockwise.

5



WARNING

The knob should never be rotated more than 10 clicks from the end position. Beyond that limit, the action of the steering damper becomes very strong, making the steering stiff at low speeds, which could cause the rider to lose control of the vehicle.

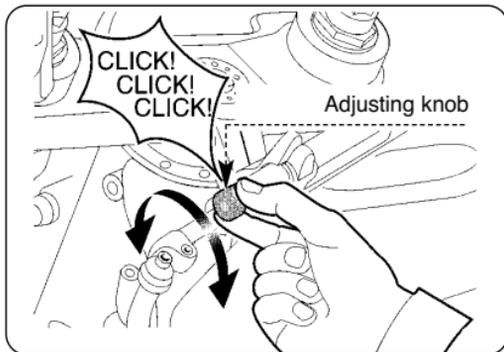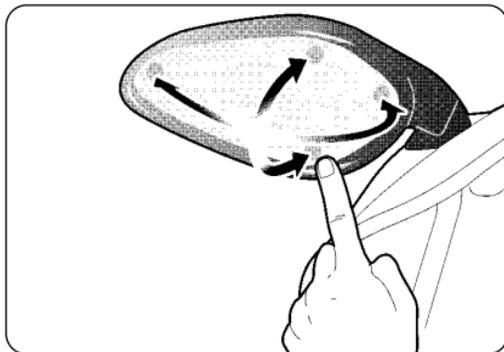




5.7 Adjusting the front suspension

**WARNING**

It is essential that the adjusters of both fork rods are adjusted to the same position.


| | Type of geometry | | |
|---------------------|------------------|-----------|-----------|
| | Soft | Standard | Stiff |
| Spring preload | 6 notches | 5 notches | 4 notches |
| Rebound damping | 7 clicks | 5 clicks | 3 clicks |
| Compression damping | 7 clicks | 5 clicks | 3 clicks |

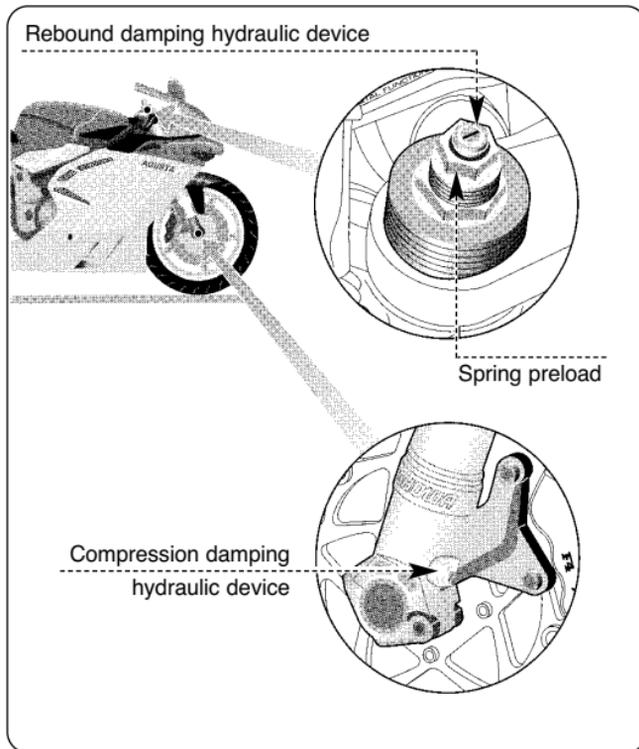




5.7.1 Spring preload

The adjustment is performed by referring to the notches. The minimum preload corresponds to the position where seven notches are in view. The maximum preload is obtained when one notch is visible.

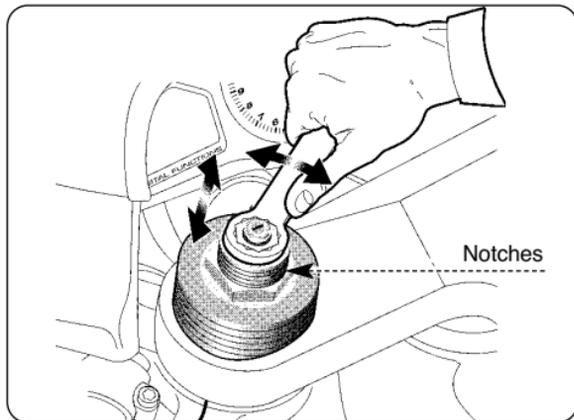

5.7.2 Rebound damping hydraulic device (front suspension)


The adjustment is obtained from the standard position, which is found by fully turning clockwise and then anticlockwise (see table). Rotate clockwise to increase the damping action or anticlockwise to decrease it.

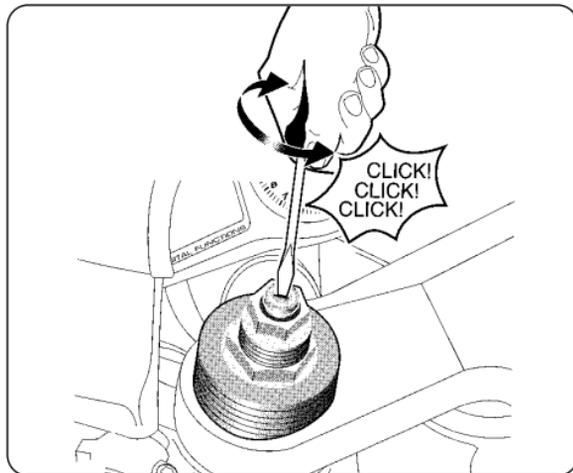



5.7.3 Compression damping hydraulic device (front suspension)

The adjustment is obtained from the standard position, which is found by fully turning the screw clockwise and then anticlockwise (see table). Rotate clockwise to increase the damping action or anticlockwise to decrease it.

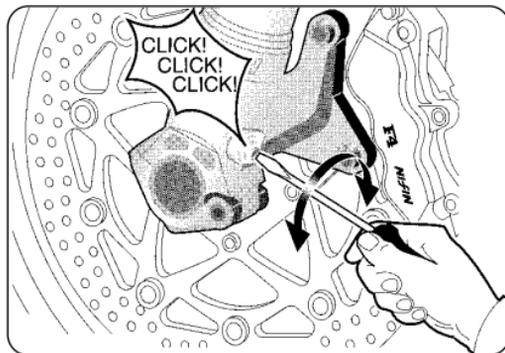




5.8 Adjusting the rear suspension



Danger - Warning: The high temperature of the exhaust pipes can cause burns.


| | | | |
|----------------------------------|------------------|-----------|-----------|
| F4 750 ORO-S | Type of geometry | | |
| | Soft | Standard | Stiff |
| Rebound damping (§ 5.8.1) | 18 clicks | 16 clicks | 14 clicks |
| Compression damping (§ 5.8.2) | 16 clicks | 14 clicks | 12 clicks |
| F4 750 S 1+1 (rider only) | Type of geometry | | |
| | Soft | Standard | Stiff |
| Rebound damping (§ 5.8.1) | 20 clicks | 18 clicks | 12 clicks |
| Compression damping (§ 5.8.2) | 22 clicks | 20 clicks | 15 clicks |
| F4 750 S 1+1 (with passenger) | Type of geometry | | |
| | Soft | Standard | Stiff |
| Rebound damping (§ 5.8.1) | 14 clicks | 12 clicks | 9 clicks |
| Compression damping (§ 5.8.2) | 17 clicks | 15 clicks | 12 clicks |

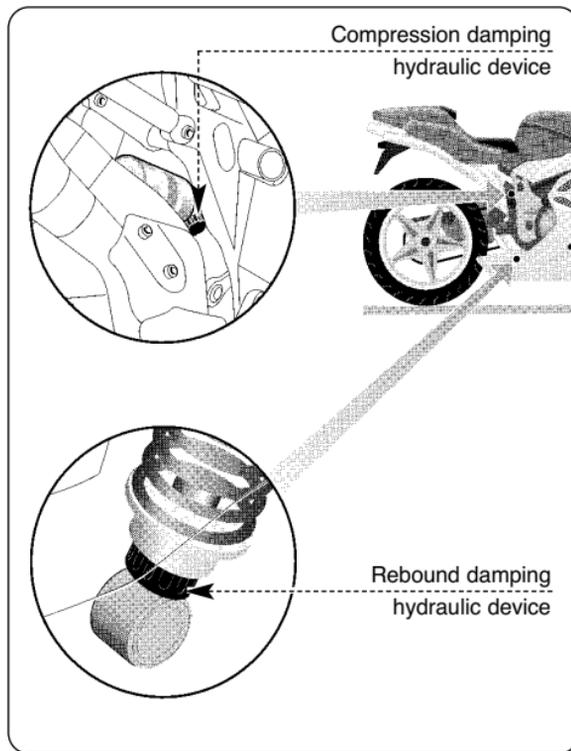




5.8.1 Rebound damping hydraulic device (rear suspension)

The adjustment is obtained from the standard position, which is found by fully rotating the ring clockwise and then anticlockwise (see table). Rotate clockwise to increase the damping action or anticlockwise to decrease it.

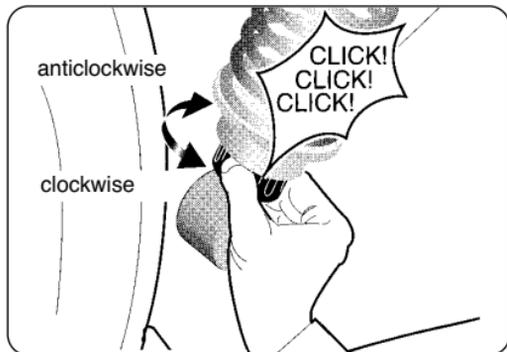

5.8.2 Compression damping hydraulic device (rear suspension)

The adjustment is obtained from the standard position, which is found by fully rotating the screw clockwise and then anticlockwise (see table). Rotate clockwise to increase the damping action or anticlockwise to decrease it.

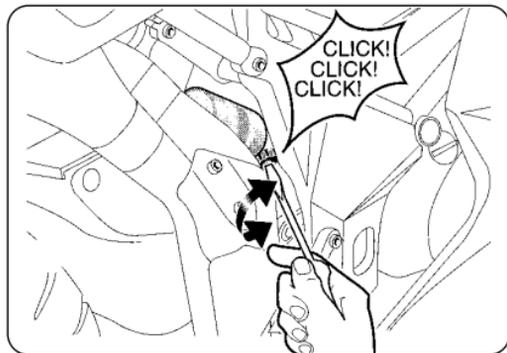



6.1 Tables of scheduled maintenance and checks

The main periodic checks and maintenance operations are shown in the following tables. These operations are necessary to keep the motorcycle safe and in perfect running order.

Some of the operations can be carried out by the user, providing he or she possesses the requisite skills. If unskilled, have the operations performed by an authorized service centre.

Failure to perform the recommended operations makes the warranty null and void.

As a rule maintenance operations must be performed while the motorcycle is on the rear stand after switching off the engine and setting the start switch to OFF. This does not apply to the verification of the fluid levels.

6

When necessary, top up or renew the lubricants and the fluids using the prescribed products (see § 6.3).

After the first 36,000 km (22,400 mi) the operations must be performed at the same intervals shown in the tables.



Tables of scheduled maintenance

| <i>km (mi) covered</i> | | <i>0</i> | <i>1000 (600)</i> | <i>6000 (3800)</i> | <i>12000 (7500)</i> | <i>18000 (11200)</i> | <i>24000 (14900)</i> | <i>30000 (18600)</i> | <i>36000 (22400)</i> |
|---------------------------|---------------------------------------|----------------------------------|------------------------|------------------------|-------------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| <i>Service coupon</i> | | <i>Pre-delivery</i> | <i>A</i> | <i>B</i> | <i>C</i> | <i>D</i> | <i>E</i> | <i>F</i> | <i>G</i> |
| <i>Description</i> | <i>Operation</i> | | | | | | | | |
| Engine oil | Check level | ● | Every 1000 km (600 mi) | | | | | | |
| | Renew | | ● | ● | ● | ● | ● | ● | ● |
| | | At least once a year | | | | | | | |
| Engine oil filter | Replace | | ● | ● | ● | ● | ● | ● | ● |
| | | Every time engine oil is changed | | | | | | | |
| Magnet on oil drain screw | Clean | Every time engine oil is changed | | | | | | | |
| Oil pipes | Verify fitting and check for leakages | ● | ● | ● | ● | ● | ● | ● | ● |
| Coolant | Check level | ● | Every 1000 km (600 mi) | | | | | | |
| | Renew | Every two years | | | | | | | |
| Cooling system | Check for leakages | ● | ● | ● | ● | ● | ● | ● | ● |
| Electric fans | Check | ● | ● | ● | ● | ● | ● | ● | ● |



Tables of scheduled maintenance

| <i>km (mi) covered</i> | | 0 | 1000 (600) | 6000 (3800) | 12000 (7500) | 18000 (11200) | 24000 (14900) | 30000 (18600) | 36000 (22400) |
|----------------------------|--|--------------------------|---------------|----------------|-----------------|------------------|------------------|------------------|------------------|
| <i>Service coupon</i> | | <i>Pre-delivery</i> | A | B | C | D | E | F | G |
| <i>Description</i> | <i>Operation</i> | | | | | | | | |
| Valves | Check/Adjust | | ● | | ● | | ● | | ● |
| Timing chain | Replace | | | | | | | | ● |
| Timing movable shoe | Check/Replace | | | | ● | | ● | | ● |
| Timing chain stretcher | Check/Replace | | | | ● | | ● | | ● |
| Spark plugs | Check/Replace | | | | ● | | ● | | ● |
| Fuel filter | Check/Replace | | | ● | ● | ● | ● | ● | ● |
| Fuel lines and connections | Check for leakages | ● | ● | ● | ● | ● | ● | ● | ● |
| Throttle body | Check idle speed Timing Check CO concentration | | ● | ● | ● | ● | ● | ● | ● |
| Air filter | Check/Replace | | | ● | ● | ● | ● | ● | ● |
| Brakes/clutch | Check fluid level | Every 1000 km (600 mi) | | | | | | | |
| | Check for leakages | ● | ● | ● | ● | ● | ● | ● | ● |
| | Renew fluid | | | | | | ● | | |
| | | At least every two years | | | | | | | |
| | Check controls | ● | ● | ● | ● | ● | ● | ● | ● |

6



Tables of scheduled maintenance

| <i>km (mi) covered</i> | | 0 | 1000 (600) | 6000 (3800) | 12000 (7500) | 18000 (11200) | 24000 (14900) | 30000 (18600) | 36000 (22400) | |
|-------------------------------|--|------------------------|---------------|----------------------------|-----------------|------------------|------------------|------------------|------------------|---|
| <i>Service coupon</i> | | <i>Pre-delivery</i> | A | B | C | D | E | F | G | |
| <i>Description</i> | | <i>Operation</i> | | | | | | | | |
| Brake pads | | Check wear | | | | | | | | |
| | | Every 1000 km (600 mi) | | | | | | | | |
| Brake caliper pins/dust rings | | Check | | | • | | • | | • | |
| Throttle control | | Check operation | | | | | | | | |
| | | Check play | | • | • | • | • | • | • | |
| | | Lubricate | | | | | | | | |
| Locks | | Check | • | • | • | • | • | • | • | |
| Steering bearings | | Check/Adjust | • | | • | | • | | • | |
| Steering head tube ring | | Check | • | | • | | • | | • | |
| Drive chain | | Check | | Every time vehicle is used | | | | | | |
| | | Lubricate | | Every 500 km (300 mi) | | | | | | |
| | | Adjust | | • | • | • | • | • | • | • |
| | | Lubricate | | | | | | | | |
| | | Replace | | | • | | • | | • | |
| Front sprocket/tab washer | | Replace | | | • | | • | | • | |
| Rear sprocket | | Replace | | | • | | • | | • | |
| Chain guide shoe | | Check wear | | | • | | • | | • | |



Tables of scheduled maintenance

| km (mi) covered | | 0 | 1000 (600) | 6000 (3800) | 12000 (7500) | 18000 (11200) | 24000 (14900) | 30000 (18600) | 36000 (22400) |
|----------------------|------------------|--------------|---|----------------|-----------------|------------------|------------------|------------------|------------------|
| Service coupon | | Pre-delivery | A | B | C | D | E | F | G |
| Description | Operation | | | | | | | | |
| Tyres | Check pressure | ● | Every 10 days | | | | | | |
| | Check wear | | Every 500 km (300 mi) | | | | | | |
| Front wheel bearings | Check | | Every time tyre is replaced | | | | | | |
| | Replace | | | | | | | | ● |
| Wheel rims | Inspect visually | | ★● | ★● | ★● | ★● | ★● | ★● | ★● |
| | | | *In any case, every time tyres are replaced | | | | | | |
| Magnesium parts | Inspect visually | | ★● | ★● | ★● | ★● | ★● | ★● | ★● |
| | | | *At least every six months | | | | | | |
| Rear wheel hub | Check bearings | | | | ● | | ● | | ● |
| | Lubricate | | | | | | | | |
| | Replace | | | | | | | | ● |
| Swingarm bearings | Check | | | | | ● | | | ● |
| Rear shock absorber | Check | | ● | ● | ● | ● | ● | ● | ● |
| Sidestand | Check operation | ● | ● | ● | ● | ● | ● | ● | ● |
| Front fork | Renew oil | | | | ● | | ● | | ● |



Tables of scheduled maintenance

| <i>km (mi) covered</i> | | <i>0</i> | <i>1000 (600)</i> | <i>6000 (3800)</i> | <i>12000 (7500)</i> | <i>18000 (11200)</i> | <i>24000 (14900)</i> | <i>30000 (18600)</i> | <i>36000 (22400)</i> |
|----------------------------------|--------------------|----------------------------|--------------------------------|------------------------|-------------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| <i>Service coupon</i> | | <i>Pre-delivery</i> | <i>A</i> | <i>B</i> | <i>C</i> | <i>D</i> | <i>E</i> | <i>F</i> | <i>G</i> |
| <i>Description</i> | <i>Operation</i> | | | | | | | | |
| Fork seal rings | Check for leakages | | | ● | ● | ● | ● | ● | ● |
| Screws and nuts | Check tightening | ● | ● | ● | ● | ● | ● | ● | ● |
| Manifold and cylinder head bolts | Check | ● | ● | ● | ● | ● | ● | ● | ● |
| Hose clamps | Check | | ● | ● | ● | ● | ● | ● | ● |
| Electrical equipment | Check operation | ● | ● | ● | ● | ● | ● | ● | ● |
| Battery | Check connections | ● | ● | ● | ● | ● | ● | ● | ● |
| Instrument panel | Check | ● | ● | ● | ● | ● | ● | ● | ● |
| Lights/Visual signals | Check | Every time vehicle is used | | | | | | | |
| Headlight | Check/Adjust | ● | Every time geometry is changed | | | | | | |
| Horn | Check | Every time vehicle is used | | | | | | | |
| Ignition switch | Check | ● | ● | ● | ● | ● | ● | ● | ● |
| Choke | Check | ● | ● | ● | ● | ● | ● | ● | ● |
| Exhaust system | Check noise level | | | | ● | | ● | | ● |



Tables of scheduled maintenance

| <i>km (mi) covered</i> | | <i>0</i> | <i>1000 (600)</i> | <i>6000 (3800)</i> | <i>12000 (7500)</i> | <i>18000 (11200)</i> | <i>24000 (14900)</i> | <i>30000 (18600)</i> | <i>36000 (22400)</i> |
|------------------------|--|---------------------|-----------------------|------------------------|-------------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| <i>Service coupon</i> | | <i>Pre-delivery</i> | <i>A</i> | <i>B</i> | <i>C</i> | <i>D</i> | <i>E</i> | <i>F</i> | <i>G</i> |
| <i>Description</i> | <i>Operation</i> | | | | | | | | |
| Silencer brackets |  Check tightening | | ● | ● | ● | ● | ● | ● | ● |
| General cleaning | | | ● | ● | ● | ● | ● | ● | ● |
| General lubrication |  | | ● | ● | ● | ● | ● | ● | ● |
| General test | | ● | ● | ● | ● | ● | ● | ● | ● |




6.2 Tools and accessories supplied

A bag in the glove compartment contains the following tools:

- 1 hexagonal bar (10 mm hexagon);
- 6 Allen keys (2.5 - 3 - 4 - 5 - 6 - 8 mm hexagons);
- 1 spanner for rear wheel eccentric with extension;
- 2 fuses (7.5 A and 15 A).

The following accessories are also supplied:

- 1 rear stand;
- 1 ignition spanner (16 mm hexagon);
- ★ 1 motorcycle canvas cover;
- ★ 2 handgrip covers;
- 1 document holder.

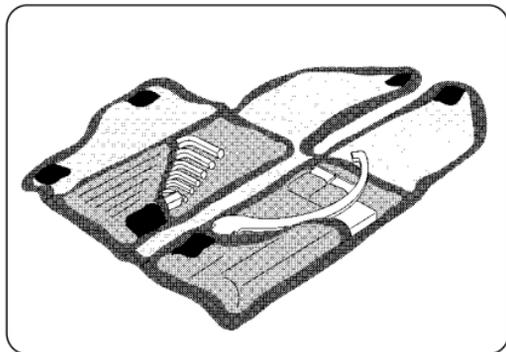


6.3 Table of lubricants and fluids


| <i>Description</i> | <i>Specifications</i> | <i>Recommended product</i> |
|-----------------------------|---|----------------------------|
| Engine lubrication oil | API SJ SAE 10W/60 | AGIP RACING 4T 10W/60 |
| Coolant | Ethylene glycol diluted with 40 percent distilled water | AGIP ECO - PERMANENT |
| Brake and clutch fluid | DOT4 | AGIP BRAKE FLUID DOT4 |
| Drive chain lubrication oil | | AGIP CHAIN AND DRIVE SPRAY |



6.4 Removing/fitting the right-hand side fairing


Pull off the quick fastenings and then remove the side fairing.

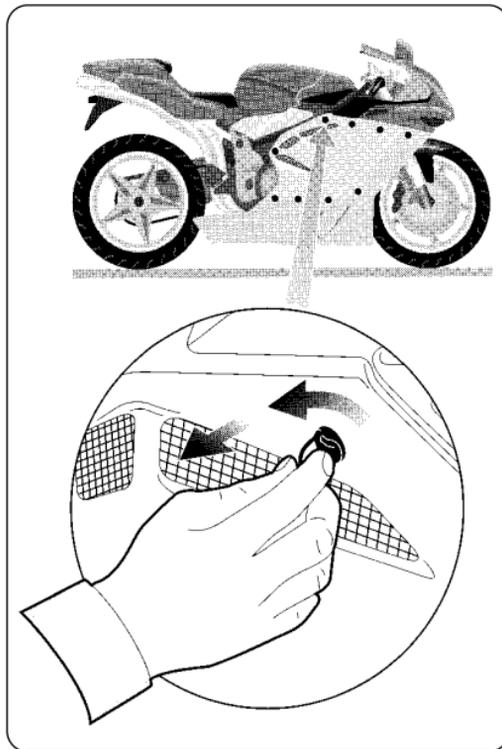

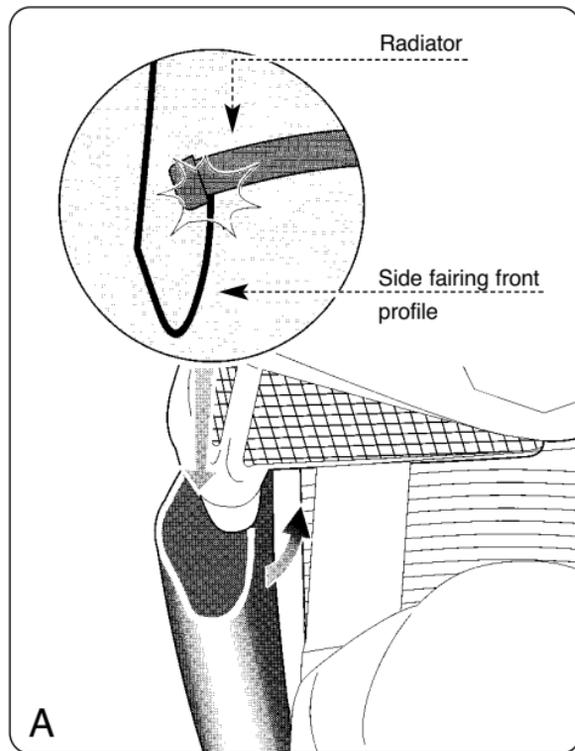

Fit the side fairing, taking care to position the front profile as shown in figure A.

Fasten the panel by positioning the tab in the lower part of the fairing as shown in figure B.

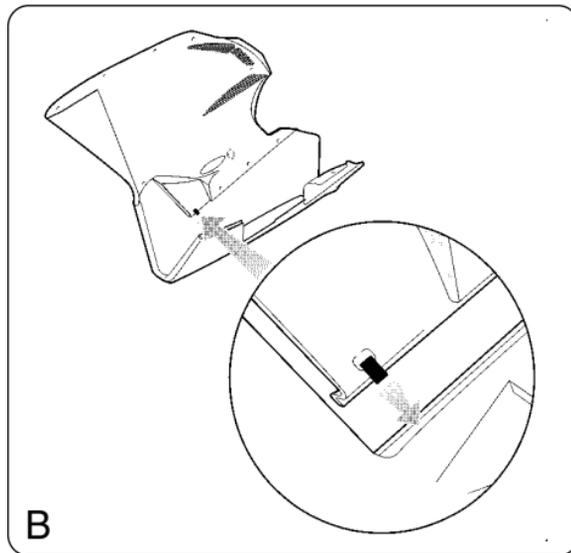



6.5 Checking the engine oil level

Check the oil level while the engine is off and cold. In any case, the engine must have been off for at least ten minutes.

The check must be performed after placing the motorcycle in an upright position on a horizontal surface.


The level must be between the MAX and MIN marks on the crankcase.

If the oil level is below the MIN mark, top up as described in § 6.5.1. Never exceed the MAX level.

6




Danger - Warning: Do not start the engine if the oil level is below the MIN mark.

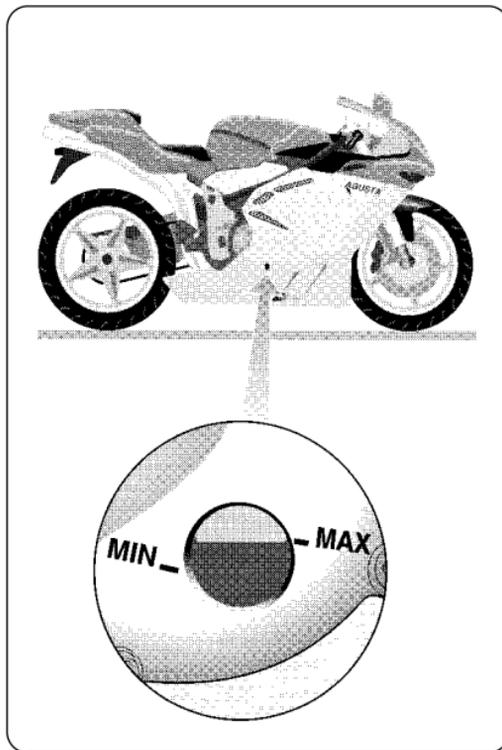



6.5.1 Restoring the engine oil level

To restore the engine oil level, first remove the right-hand side fairing (see § 6.4) to expose the oil filler plug.

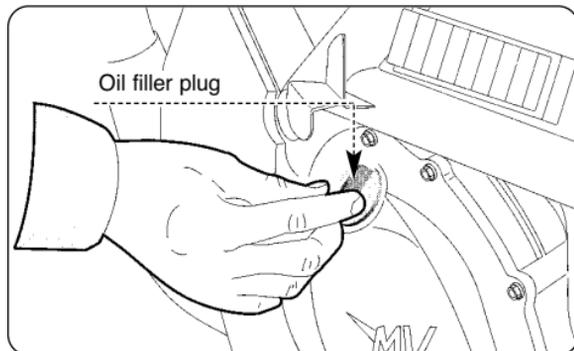




6.6 Checking the coolant level

Check the coolant level while the engine is off and cold.

The check must be performed after placing the motorcycle in an upright position on a horizontal surface.

The coolant level must be between the MAX and MIN marks.

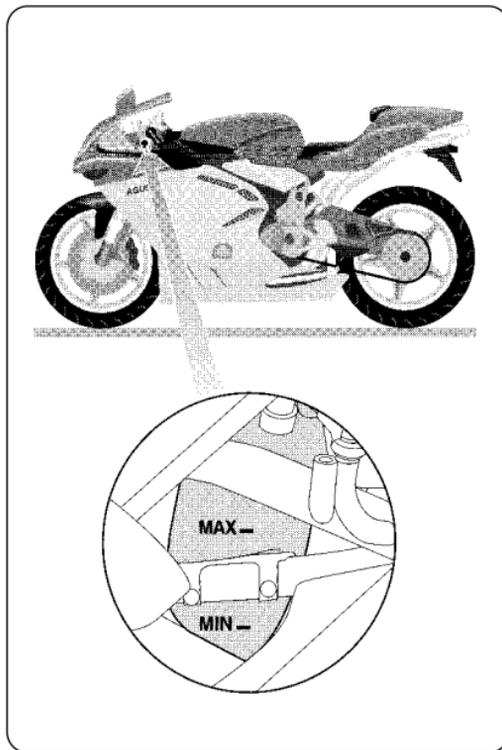



6.6.1 Restoring the coolant level


To gain access to the coolant filler cap, remove the left steering damper screw and the cover.


Use the product specified in the table in § 6.3.

Water can be used in case of need, taking care to replace it with the recommended product as soon as possible.

After topping up, carefully replace the previously removed parts.

 **Danger - Warning:** The coolant circuit is under pressure. To avoid the risk of burns, top up when the engine is cold.

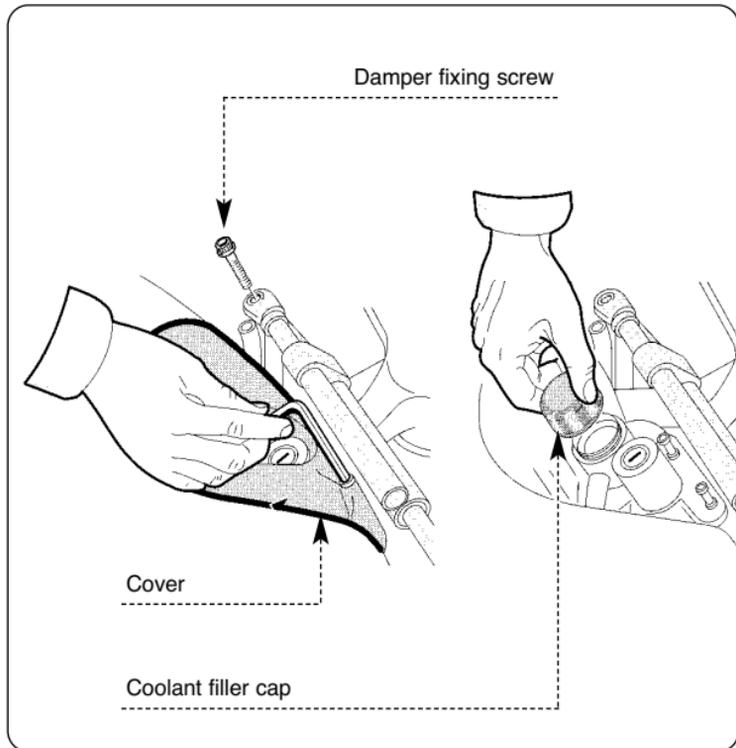

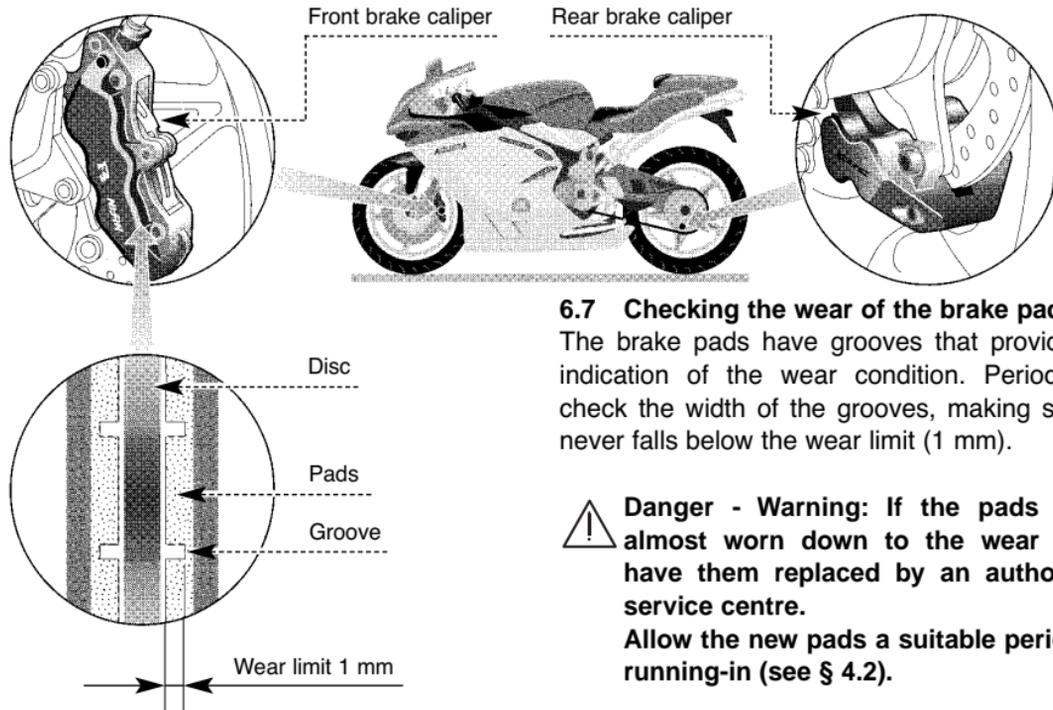


6.7 Checking the wear of the brake pads

The brake pads have grooves that provide an indication of the wear condition. Periodically check the width of the grooves, making sure it never falls below the wear limit (1 mm).



Danger - Warning: If the pads have almost worn down to the wear limit, have them replaced by an authorized service centre.

Allow the new pads a suitable period of running-in (see § 4.2).

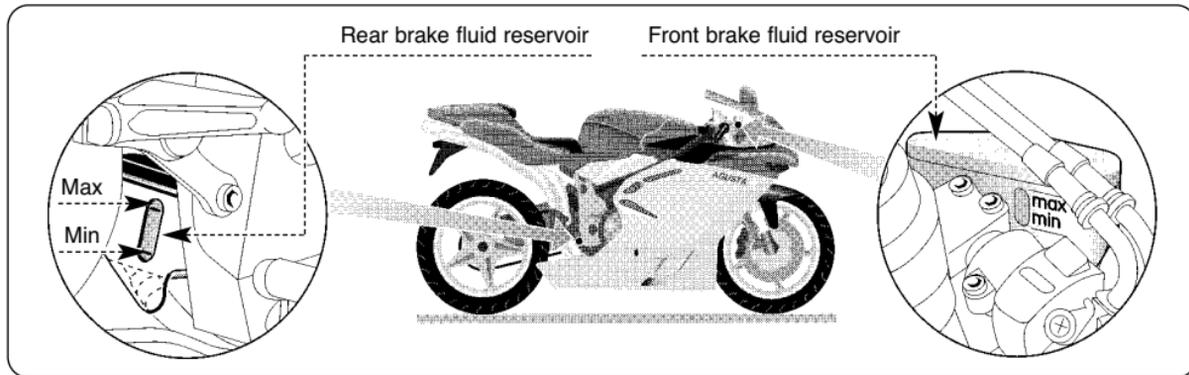

6.8 Checking the brake fluid level

The level of the brake fluid decreases as the brake pads wear down. Ensure that the fluid level is always between the MAX and MIN marks. If the level falls below the MIN mark, contact an authorized service centre and have the braking system overhauled.



Danger - Warning: Do not use the motorcycle if the fluid level is below the MIN mark because the brakes may fail to operate properly.




6.9 Checking the clutch fluid level

The fluid level must be between the MAX and MIN marks.

If the level falls below the MIN mark, contact an authorized service centre and have the clutch control system overhauled.



Danger - Warning: Do not use the motorcycle if the fluid level is below the MIN mark because the clutch may fail to operate properly.

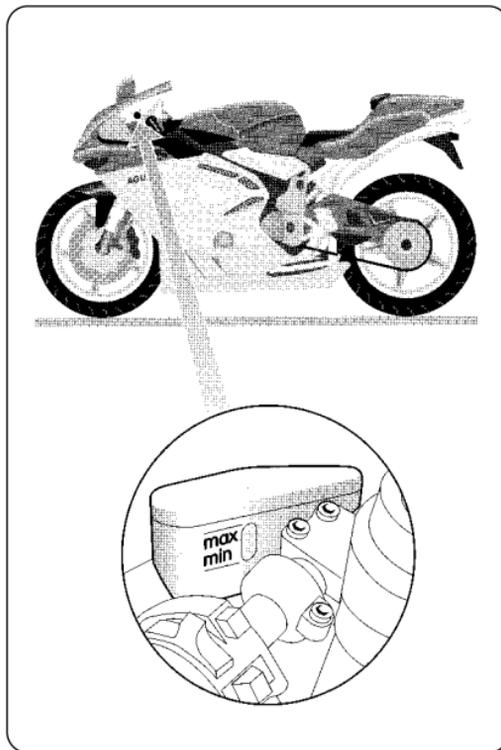




6.10 Checking the tyres

 **Danger - Warning:** Before using the motorcycle, always check the pressure and wear of the tyres.

Measure the tyre pressure at room temperature. Refer to the pressures given in § 8.2 or on the label applied to the steering head tube.

Check the wear of the tyres. The tread depth must not be less than specified in the Highway Code.

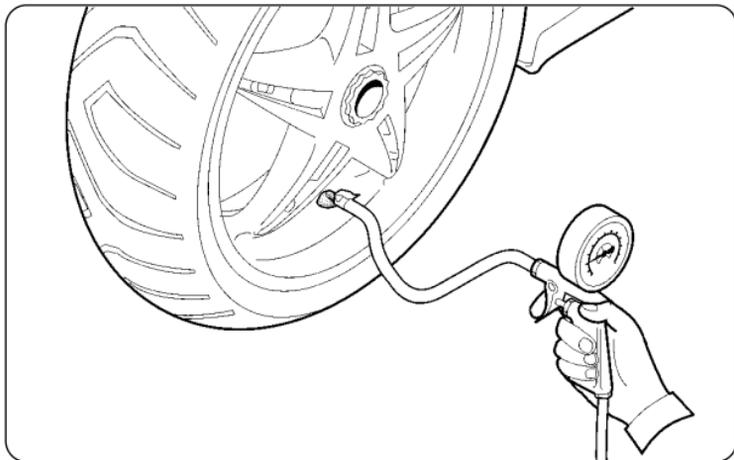

 **Danger - Attention:** When necessary, replace the tyres only with others of the type specified in § 8.2. New tyres require a short running-in period before attaining their full performance. During this period exercise extreme caution.




6.11 Checking and lubricating the drive chain

Put the motorcycle on the rear stand.

Checking the chain adjustment

The axis of the chain lower portion must be 6 mm from the lower chain guard. Manually turn the rear wheel and carry out the check at several points along the chain.

If necessary, have the chain adjusted by an authorized service centre.

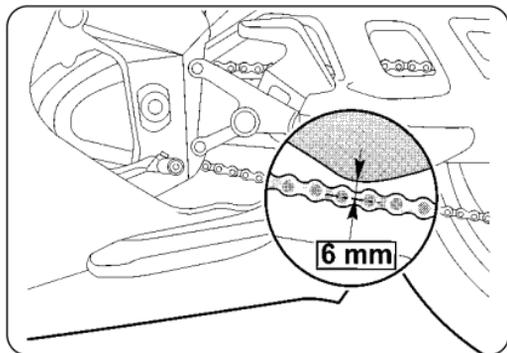



Lubrication

To ensure proper operation, the drive chain needs to be properly lubricated.

► Preliminary cleaning - Before lubrication the dirt accumulated on the chain must be dissolved using specific products. The dirt must then be removed with a clean rag and/or an air jet.



Caution - The chain is of the O-ring type. Be sure to use cleaning products specifically designed for chains of this type.



► Lubrication - Apply a film of lubricant over the whole of the drive chain, taking care not to smear the surrounding parts, and in particular the tyres.



Caution - Only use the recommended lubricant or an equivalent product (see § 6.3).



WARNING
Riding when the drive chain is in poor condition or improperly adjusted can cause accidents.

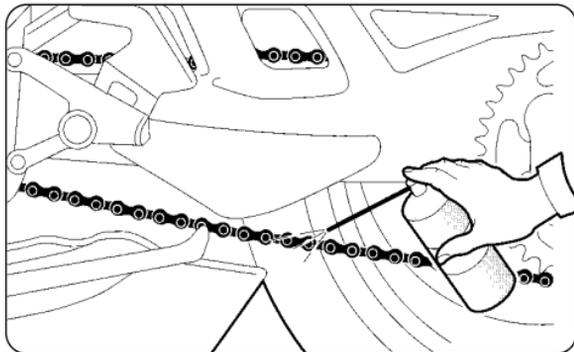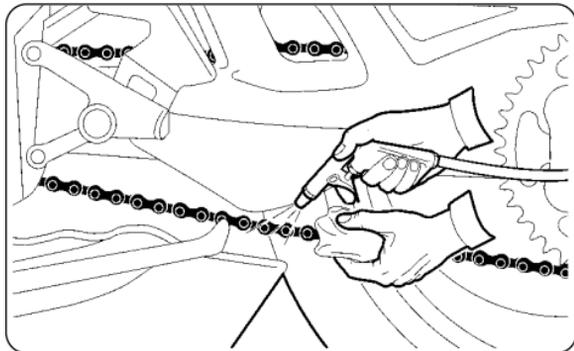




6.12 Checking the idle speed

Check the idle speed when the engine has reached the operating temperature. Ensure that the choke control has not been activated.

The idle speed should range from 1,150 to 1,250 rpm.

If a tune-up is necessary, contact an authorized service centre.

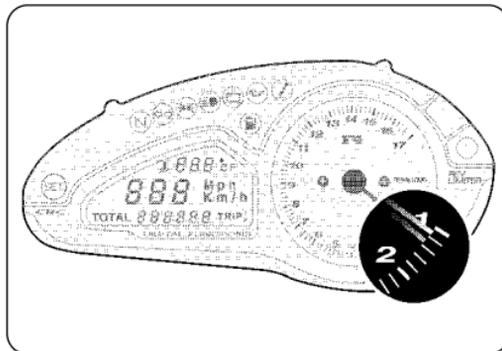



6.13 Periodic emission check

To ensure that your new **MV Agusta F4** maintains compliance with emission regulations, have the following operations performed by an authorized service centre at the specified intervals.

- 1.000 km **Check and if necessary adjust:**
Idle speed
Injection system throttle body
Renew
Engine oil
Oil filter
- 6.000 km **Check and if necessary adjust:**
Injection system throttle body
Renew
Engine oil
Oil filter
- 12.000 km **Check and if necessary adjust (or renew):**
Injection system throttle body
Play of valves
Timing chain slide
Idle speed
Timing chain tension adjuster
Air filter
Spark plugs
Renew
Engine oil
Oil filter
Fuel filter



The operations mentioned for 6,000 km and 12,000 km should then be performed every 12,000 km.

NOTE

Failure to observe the maintenance program indicated voids the emission control system warranty.

6.14 EMISSION CONTROL SYSTEM WARRANTY OBLIGATIONS**6.14.1 YOUR WARRANTY RIGHTS AND OBLIGATIONS**

The *California Air Resources Board* and MV Agusta Motor S.p.A., (hereinafter “MV Agusta”); are pleased to explain the emission control system warranty on your 2000 and later motorcycle. In California new motor vehicles must be designed, built and equipped to meet the State's stringent anti-smog standards. MV Agusta must warrant the emission control system on your motorcycle for the periods of time listed below provided there has been no abuse, neglect or improper maintenance of your motorcycle.

6

Your emission control system may include parts such as the carburetor or fuel-injection system, the ignition system, catalytic converter and engine computer. Also included may be hoses, belts, connectors and other emission-related assemblies.

Where a warrantable condition exists, MV Agusta will repair your motorcycle at no cost to you, including diagnosis, parts and labour.

6.14.2 MANUFACTURER'S WARRANTY COVERAGE

Class I motorcycles (50-169 cc): for a period of use of five (5) years or 12,000 kilometers (7,456 miles),



whichever first occurs.

Class II motorcycles (170 to 279 cc): for a period of use of five (5) years or 18,000 kilometers (11,185 miles), whichever first occurs.

Class III motorcycles (280 cc and larger): for a period of use of five (5) years or 30,000 kilometers (18,641 miles), whichever first occurs.

If an emission-related part on your motorcycle is defective, the part will be repaired or replaced by MV Agusta. This is your emission control system DEFECTS WARRANTY.

6.14.3 OWNER'S WARRANTY RESPONSIBILITIES

As the motorcycle owner, you are responsible for the performance of the required maintenance listed in your owner's manual. MV Agusta recommends that you retain all receipts covering maintenance on your motorcycle, but MV Agusta cannot deny warranty solely for the lack of receipts or for your failure to ensure the performance of all scheduled maintenance.

You are responsible for presenting your motorcycle to an MV Agusta dealer as soon as a problem exists. The warranty repairs should be completed in a reasonable amount of time, not to exceed 30 days.

As the motorcycle owner, you should be aware that MV Agusta may deny your warranty coverage if your motorcycle or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

If you have any question regarding your warranty rights and responsibilities, you should contact Cagiva U.S.A., 1901 Davisville Road, Willow Grove, PA 19090-4193 (215) 830-3300, or the California Air Resources Board at P.O. Box 8001, 9528 Telstar Avenue, El Monte, CA 91734-8001.

**6.15 LIMITED WARRANTY ON EMISSION CONTROL SYSTEM**

MV Agusta Motor S.p.A. Via G. Macchi 144 - 21100 Varese, Italy (hereinafter MV Agusta) warrants that each new 2000 and later MV Agusta motorcycle, which includes as standard equipment a headlight, tail-light and stoplight, and is street legal:

- A. is designed, built and equipped so as to conform at the time of initial retail purchase with all applicable regulations of the United States Environmental Protection Agency, and the California Air Resources Board; and
- B. is free from defects in material and workmanship which cause such motorcycle to fail to conform with applicable regulations of the United States Environmental Protection Agency or the California Air Resources Board for a period of use, depending on the engine displacement, of 12,000 kilometers (7,456 miles), if the motorcycle's engine displacement is less than 170 cubic centimeters; of 18,000 kilometers (11,185 miles), if the motorcycle's engine displacement is equal to or greater than 170 cubic centimeters but less than 280 cubic centimeters; or of 30,000 kilometers (18,641 miles), if the motorcycle's engine displacement is 280 cubic centimeters or greater; or 5 (five) years from the date of initial retail delivery, whichever first occurs.

6**6.15.1 COVERAGE**

Warranty defects shall be remedied during customary business hours at any authorized MV Agusta motorcycle dealer located within the United States of America in compliance with the Clean Air Act and applicable regulations of the United States Environmental Protection Agency and the California Air Resources Board. Any part or parts replaced under this warranty shall become the property of MV Agusta.



In the State of California only, emission related warranted parts are specifically defined by the state's Emission Warranty Parts List. These warranted parts are: carburetor and internal parts; intake manifold; fuel tank; fuel injection system; spark advance mechanism; crankcase breather; air cutoff valves; fuel tank cap for evaporative emission controlled vehicles; oil filler cap; pressure control valve; fuel/vapour separator; canister; igniters; breaker governors; ignition coils; ignition wires; ignition points; condensers, and spark plugs if failure occurs prior to the first scheduled replacement; and hoses, clamps, fittings and tubing used directly in these parts. Since emission related parts may vary from model to model, certain models may not contain all of these parts and certain models may contain functionally equivalent parts. In the State of California only, Emission Control System emergency repairs, as provided for in the California Administrative Code, may be performed by other than an authorized MV Agusta dealer. An emergency situation occurs when authorized MV Agusta dealer is not reasonably available, a part is not available within 30 days, or a repair is not complete within 30 days. Any replacement part can be used in an emergency repair. MV Agusta will reimburse the owner for the expenses, including diagnosis, not exceeding MV Agusta's suggested retail price for all warranted parts replaced and labour charges based on MV Agusta's recommended time allowance for the warranty repair and the geographically appropriate hourly labour rate. The owner may be required to keep receipts and failed parts in order to receive compensation.

6.15.2 LIMITATIONS

This Emission Control System warranty shall not cover any of the following:

- A. Repair or replacement required as a result of
 - (1) accident



- (2) misuse,
 - (3) repairs improperly performed or replacements improperly installed
 - (4) use of replacement parts or accessories not conforming to MV Agusta specifications which adversely affect performance and/or
 - (5) use in competitive racing or related events.
- B. Inspections, replacement of parts and other services and adjustments needed for required maintenance.
- C. Any motorcycle on which the odometer mileage has been changed so that actual mileage cannot be readily determined.

6.15.3 LIMITED LIABILITY

- 6**
- A. The liability of MV Agusta under this Emission Control System Warranty is limited solely to the remedying of defects in material or workmanship by an authorized MV Agusta motorcycle dealer at its place of business during customary business hours. This warranty does not cover inconvenience or loss of use of the motorcycle or transportation of the motorcycle to or from the MV Agusta dealer. MV Agusta shall not be liable for any other expenses, loss or damage, whether direct, incidental, consequential or exemplary arising in connection with the sale or use of or inability to use the MV Agusta motorcycle for any purpose. Some states do not allow the exclusion or limitation of any incidental or consequential damages, so the above limitations may not apply to you.
- B. No express emission control system warranty is given by MV Agusta except as specifically set forth herein. Any emission control system warranty implied by law, including any warranty of merchantability or fitness for a particular purpose, is limited to the express emission control system war-



ranty terms stated in this warranty.

The foregoing statements of warranty are exclusive and in lieu of all other remedies. Some states do not allow limitations on how long an implied warranty lasts so the above limitations may not apply to you.

C. No dealer is authorized to modify this MV Agusta Limited Emission Control System Warranty.

6.15.4 LEGAL RIGHTS

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

This warranty is in addition to the MV Agusta limited motorcycle warranty.

6.15.5 ADDITIONAL INFORMATION

Any replacement part that is equivalent in performance and durability may be used in the performance of any maintenance or repairs. However, MV Agusta is not liable for these parts. The owner is responsible for the performance of all required maintenance. Such maintenance may be performed at a service establishment or by any individual. The warranty period begins on the date the motorcycle is delivered to an ultimate purchaser.

MV Agusta Motor S.p.A.
Via G. Macchi, 144
21100 Varese, Italy

Cagiva U.S.A.
1901 Davisville Road
Willow Grove, PA 19090-4193




6.16 Replacing parts - General information

The replacement of the fuses (except for the battery recharge fuse) and the light bulbs (excepting the front parking light bulbs) can be carried out by the user according to the indications provided below.

| | |
|--|--|
| | Battery recharge fuse - Replacement (§ 6.16.1) |
| | Service fuses - Replacement (§ 6.16.1) |
| | Low beam bulb - Replacement (§6.16.2.) |
| | High beam bulb - Replacement (§6.16.3.) |
| | Front parking light bulbs - Replacement |
| | Front turn indicator bulbs - Replacement (§ 6.16.4) |
| | Rear turn indicator bulbs - Replacement (§ 6.16.5) |
| | Rear light and brake light bulb - Replacement (§ 6.16.6) |
| | Number-plate light bulb - Replacement (§ 6.16.7) |


6.16.1. Replacing the fuses

► The recharge fuse is located on the left side of the motorcycle, in the position shown in the figure.

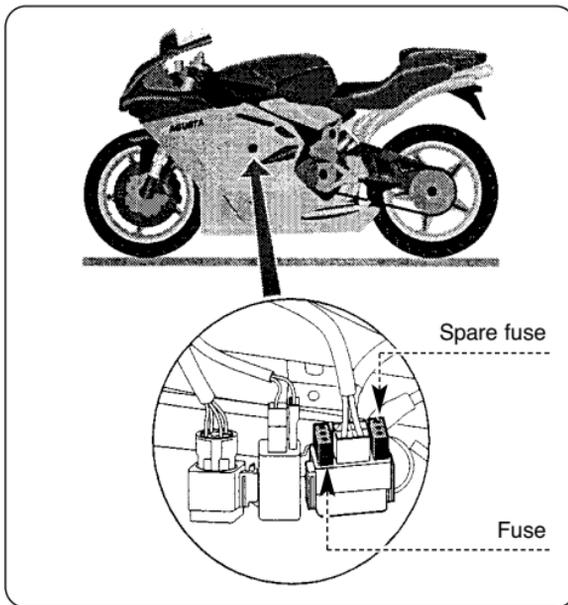




- ▶ The service fuses are located on the right side. To expose them, remove the side fairing (see § 6.4).
- ▶ Remove the fuse box cover.

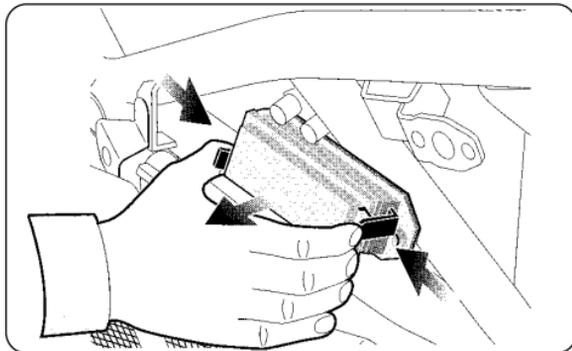


- ▶ Replace the blown fuse and refit the cover. To identify the position and function of the fuses, refer to the information shown on the adhesive label and in the enclosed electrical diagram. The reference letters in the figure correspond to those shown in the diagram.
- Remember that the tool bag contains two spare fuses.

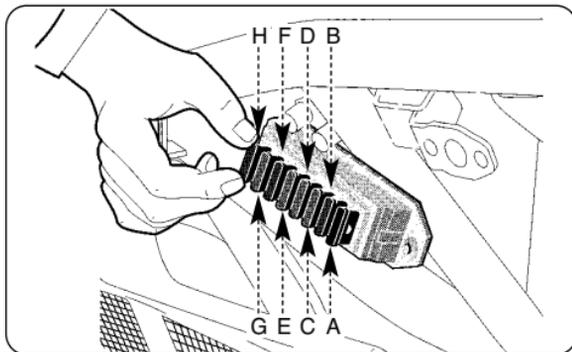



6.16.2 Replacing the low beam bulb

- ▶ Remove the cover.

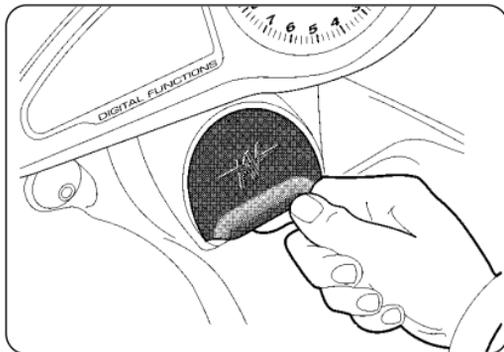


- ▶ Release the retaining spring.
- ▶ Extract the bulb.
- ▶ Detach the connector.

6



Caution: Do not touch the bulb glass with bare hands. If necessary, clean the bulb with a degreasing product.


- ▶ Attach the connector.
- ▶ Fit the new bulb.
- ▶ Reattach the spring.
- ▶ Replace the cover.

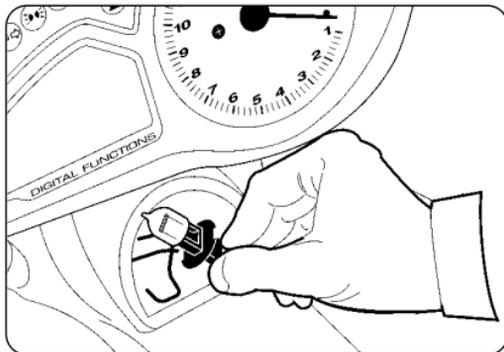



6.16.3 Replacing the high beam bulb

- ▶ Remove the cover.

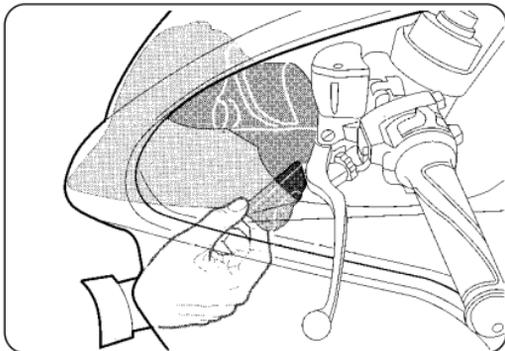


- ▶ Detach the connector.
- ▶ To remove the bulb, rotate it anticlockwise.



Caution: Do not touch the bulb glass with bare hands. If necessary, clean the bulb with a degreasing product.


- ▶ Insert and lock the new bulb in place by rotating it clockwise.
- ▶ Reattach the connector.
- ▶ Replace the cover.

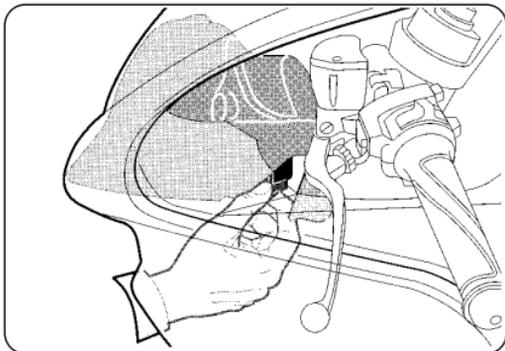




6.16.4 Replacing the front turn indicator bulbs

▶ Remove the lens.

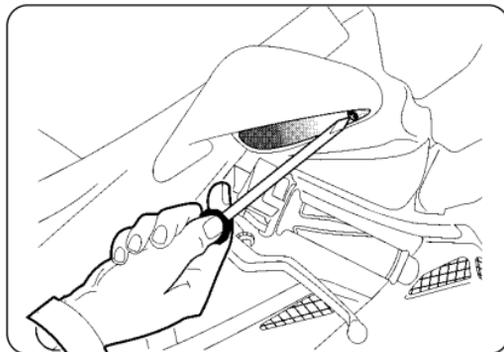



- ▶ Pull out the burnt-out bulb.
- ▶ Insert the new bulb.
- ▶ Replace the lens.

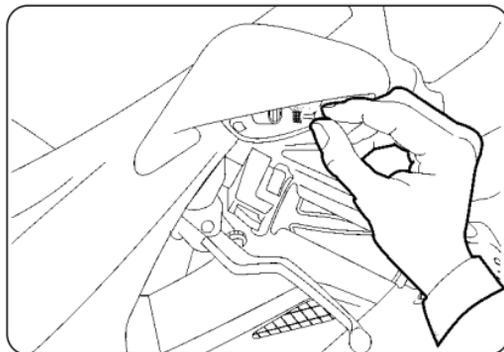



6.16.5 Replacing the rear turn indicator bulbs


- ▶ Remove the lens.
- ▶ To remove the burnt-out bulb, press it and rotate it anticlockwise.
- ▶ To fit the new bulb, press it and rotate it clockwise.
- ▶ Replace the lens.

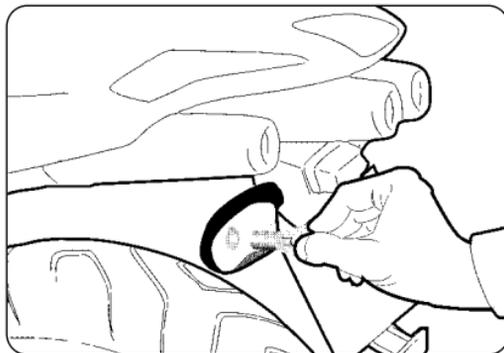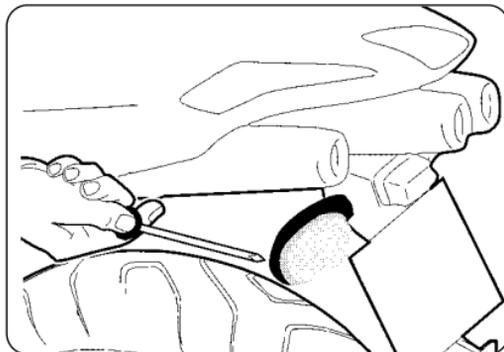




6.16.6 Replacing the rear light and brake light bulb

- ▶ Lift the seat (§ 4.7).
- ▶ Remove the bulb holder by turning it anticlockwise.

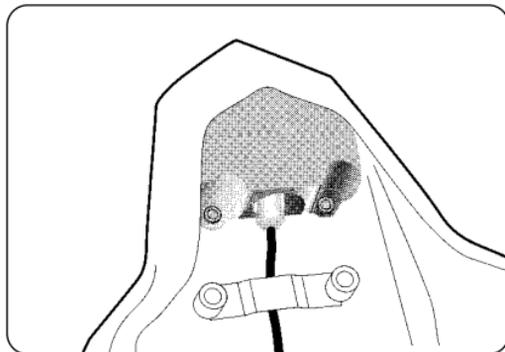



- ▶ To remove the bulb, press it and rotate it anticlockwise.
- ▶ To fit the new bulb, press it and rotate it clockwise.
- ▶ Replace the bulb holder and lock it in place by rotating it clockwise.

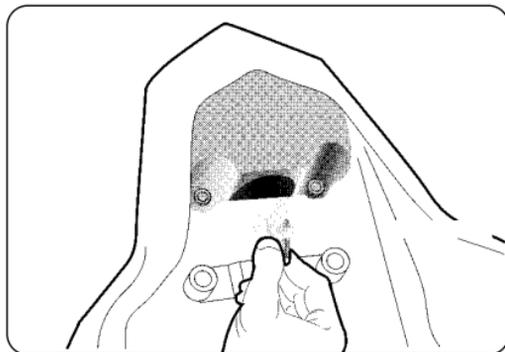

**6.16.7 Replacing the number-plate light bulb**

- ▶ Pull out the bulb holder.

- ▶ Extract the burnt-out bulb.
- ▶ Fit the new bulb.
- ▶ Replace the bulb holder.

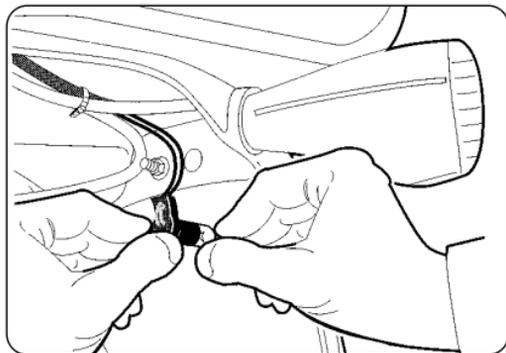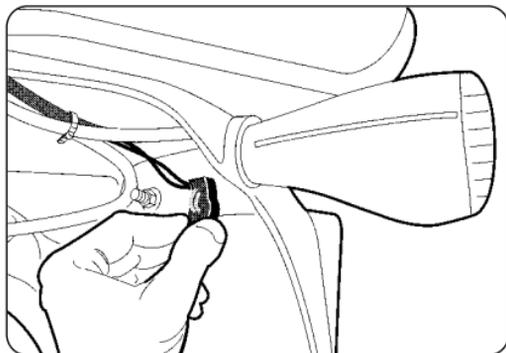



6.17 Battery

The battery is of the maintenance-free type and is installed under the tail section.



WARNING

If the battery casing is damaged, there may be a leakage of sulphuric acid, a HIGHLY CORROSIVE substance.

This would result in the formation of hydrogen gas which, if ignited by a spark or a flame, would cause an explosion.

To replace the battery, wear protective clothes and a face shield, or have the operation performed by an authorized service centre.

Prolonged inactivity

If the motorcycle is to remain unused for a long time (a month or longer), it is advisable to remove the battery or disconnect the battery cables. In case of prolonged inactivity, to avoid shortening the life of the battery, it is essential to recharge it every 4-5 months.



DANGER

When removing the battery, disconnect the negative terminal FIRST and then the positive terminal. When reinstalling the battery, use the reverse procedure.




6.18 Cleaning the motorcycle

Periodic careful cleaning is a key factor in preserving the value of the motorcycle.



Caution: Before washing the vehicle, stop up the exhaust pipes and protect the electrical parts. After completing the washing, run the engine for a few minutes and start off at reduced speed. Carefully apply the brakes a few times so as to dry the brake pads and discs.

Wash the motorcycle with water, a mild detergent and a sponge. Wipe the vehicle with a soft cloth. Use an air jet to dry difficult-to-reach areas. Periodically treat the paintwork with specific products. After riding on roads treated with corrosive substances (salt), wash the vehicle as soon as possible with cold water. Do not use hot water as it enhances the corrosive action.

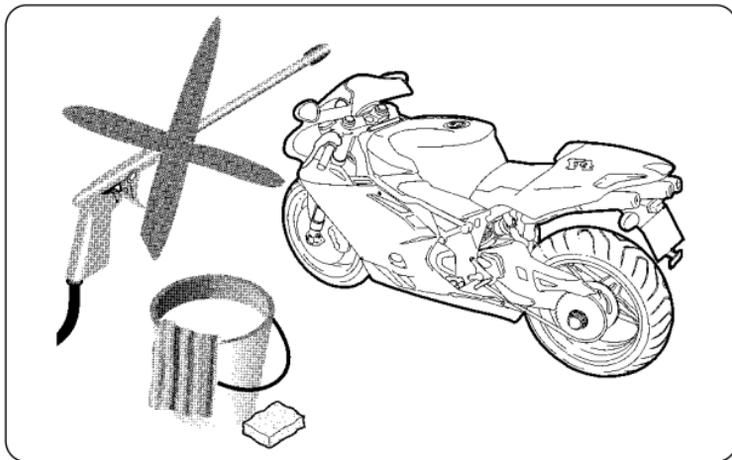

DANGER

To avoid irreparable damage to the windscreen, never use alkaline or strongly acid detergents, petrol, brake fluid or other solvents. Clean the windscreen only with a soft cloth, warm water and a neutral detergent.



6.19 Prolonged inactivity

If the motorcycle is to remain unused for a long time, it is advisable to carry out the following operations:


- | | |
|---|---|
|  | Clean the motorcycle and treat the paintwork with specific products (§ 6.18). |
|  | Park the motorcycle in a suitable place and place it on the rear stand (§ 4.8). |
|  | Empty the fuel tank. |
|  | Remove the battery and store it in a suitable place. |
|  | ★ Cover the vehicle with the canvas cover supplied. |

6

When first reusing the motorcycle, remember to carry out a comprehensive check (§ 4.9) and, if necessary, to have the vehicle serviced (§ 6.1).




7.1. Engine problems: **ENGINE DOES NOT START**

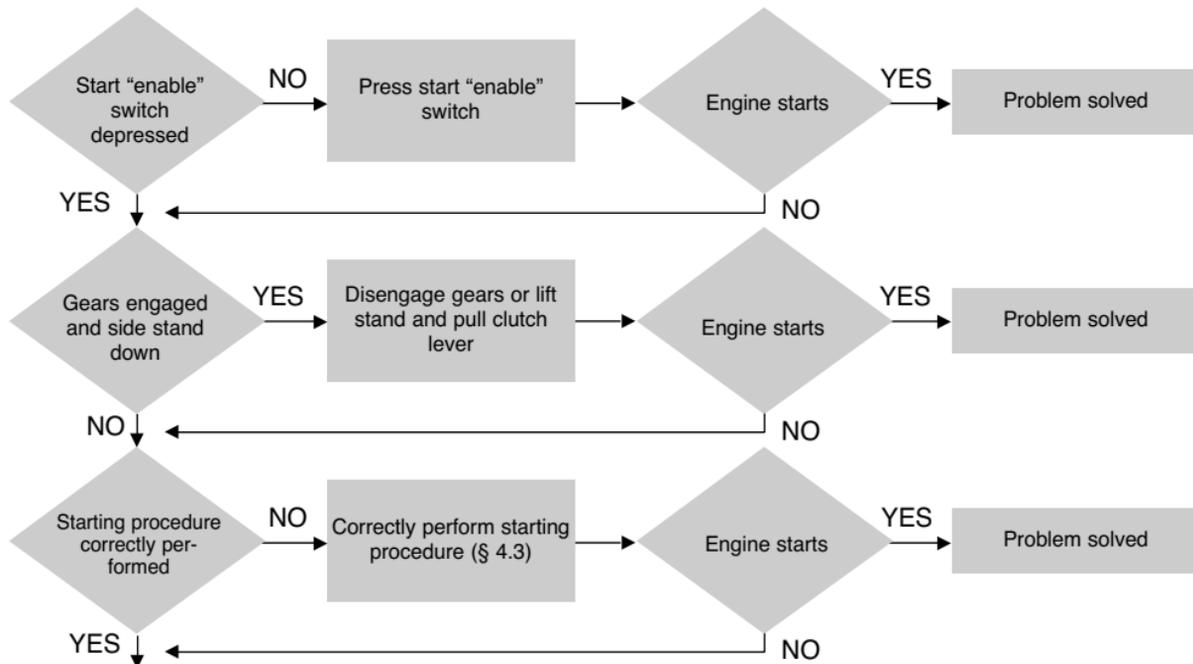

continued on next page




continued from previous page

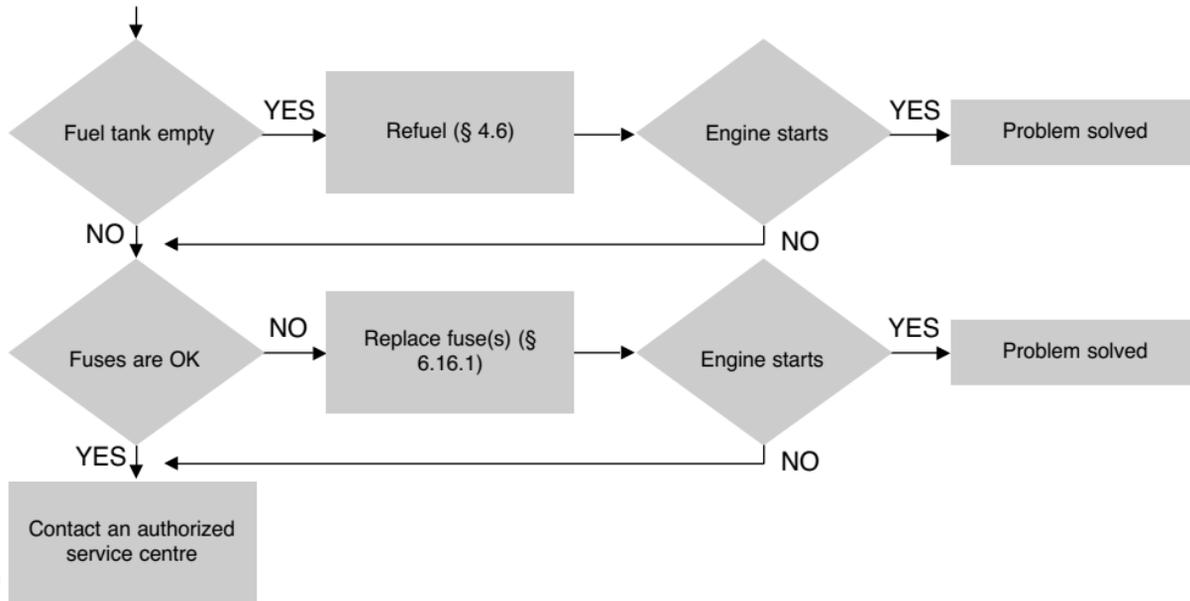




ENGINE IS DIFFICULT TO START

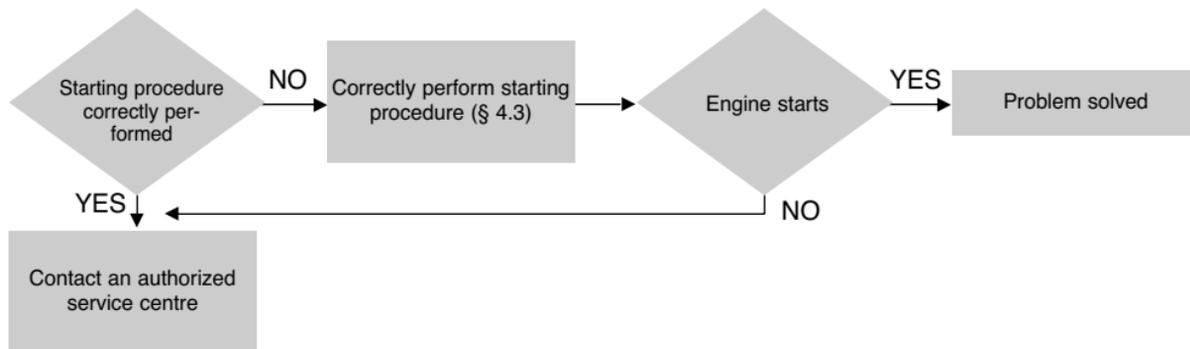




ENGINE OVERHEATS

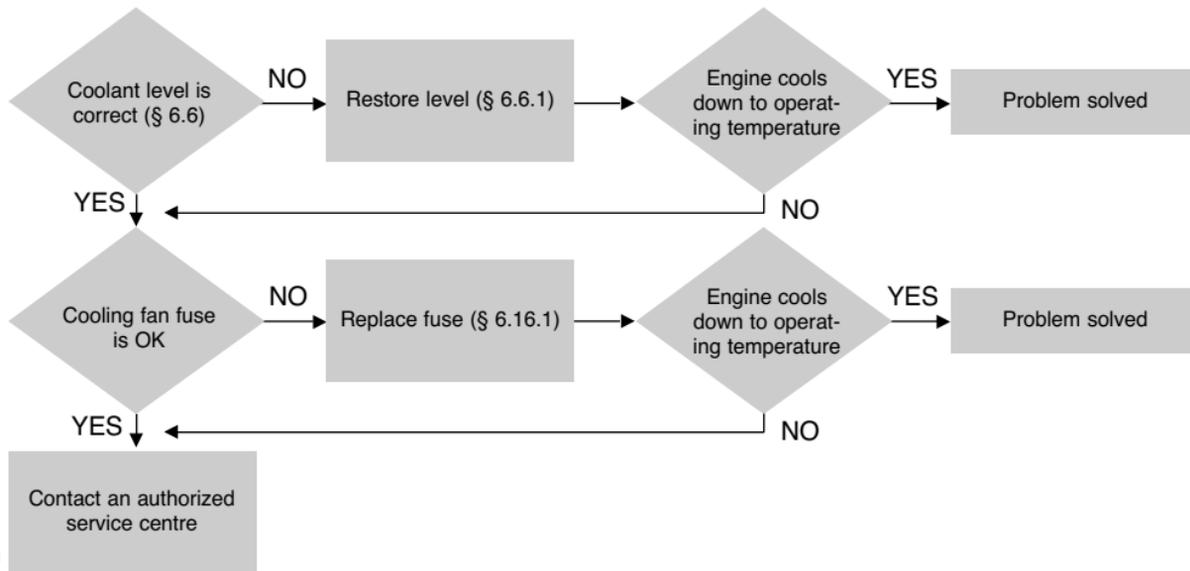




OIL PRESSURE IS TOO LOW

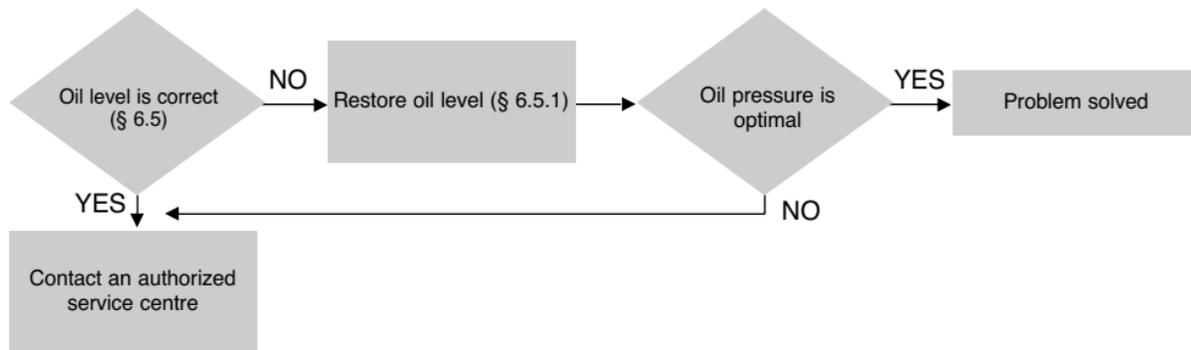



7.2 Electrical equipment problems: **LIGHTS DO NOT WORK**

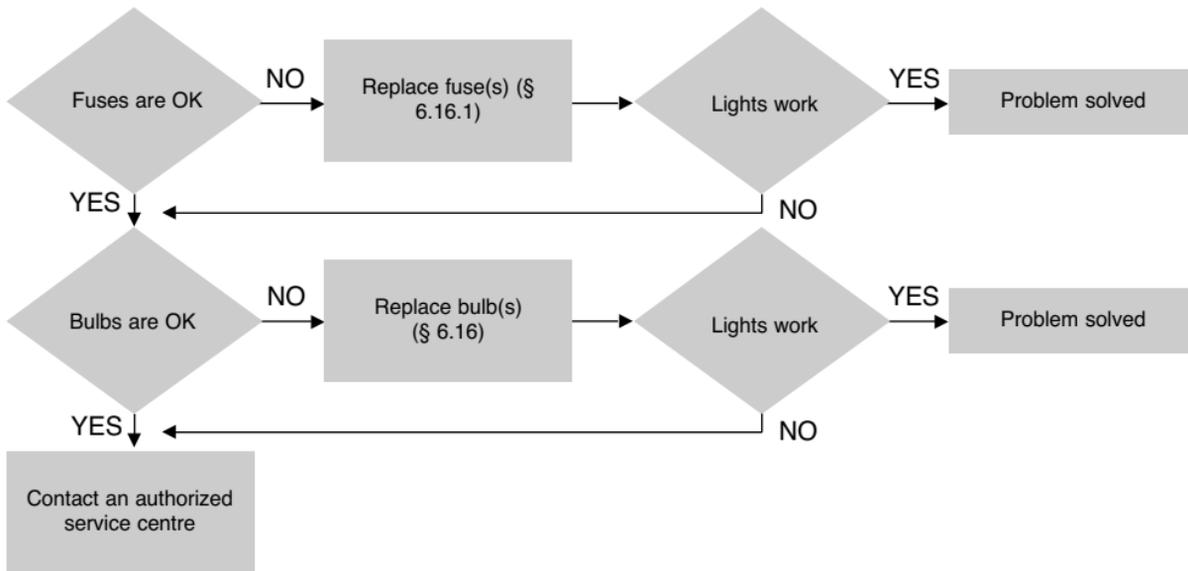




HORN DOES NOT WORK




SPEEDOMETER DOES NOT WORK

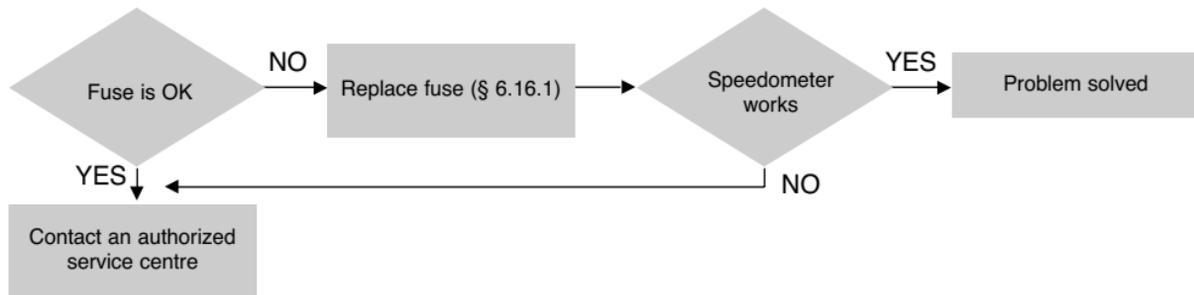



RESERVE FUEL WARNING LIGHT DOES NOT WORK

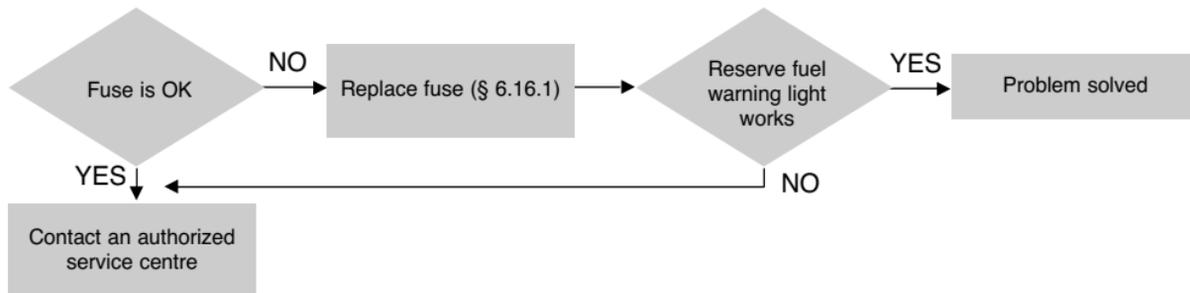


ALTERNATOR DOES NOT CHARGE BATTERY

Contact an authorized service centre



8.1. Motorcycle overview

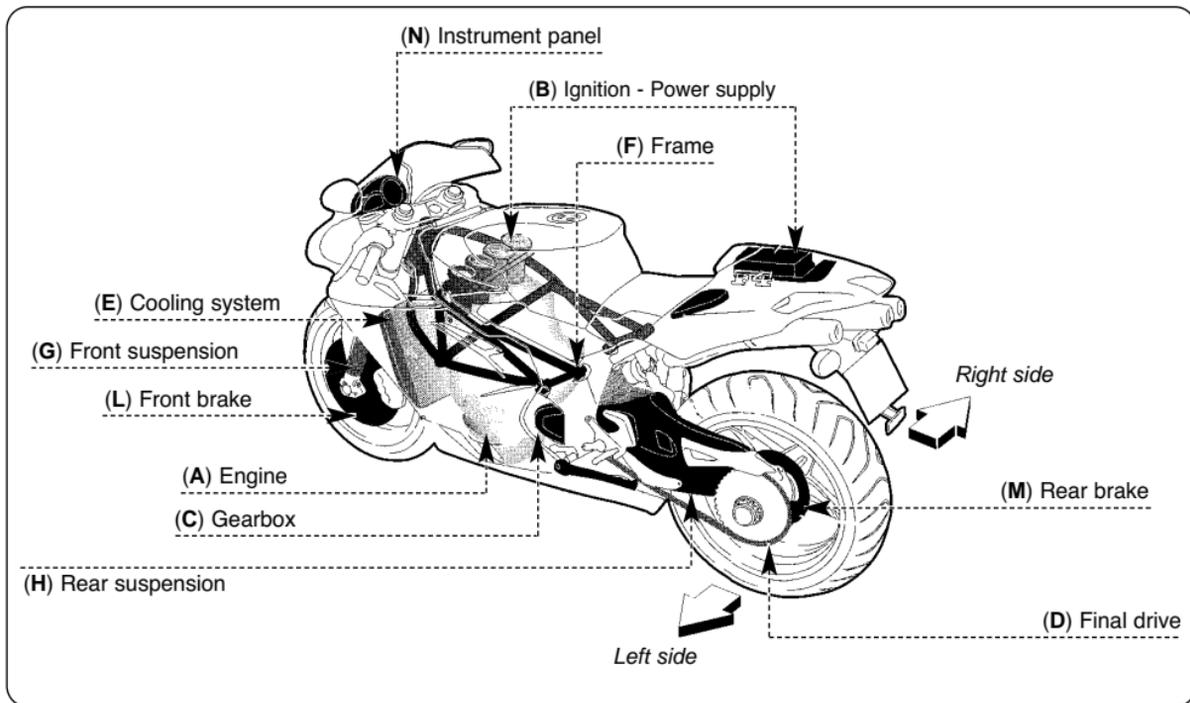




- A - Engine:** four-stroke, inline four-cylinder. Double-overhead camshaft valve train with radial valves. Wet sump lubrication.
- B - Ignition - Power supply:** integrated ignition-injection system. Inductive-discharge electronic ignition. “Multipoint” electronic injection.
- C - Gearbox:** removable, six-speed, with constant-mesh gears.
- D - Final drive:** consisting of drive sprocket, rear sprocket and chain.
- E - Cooling system:** liquid cooling with water-oil heat exchanger.
- F - Frame:** tubular steel trellis with aluminum (magnesium ★) side plates.
- G - Front suspension:** inverted hydraulic fork with external adjusting system.
- H - Rear suspension:** progressive, with single-sided swingarm and single shock absorber with external adjusting system.
- L - Front brake:** dual semi-floating disc with six-piston calipers.
- M - Rear brake:** single disc with four-piston caliper.
- N - Instrument panel:** with warning lights and analogue and digital instruments.




8.1.1 Front brake circuit

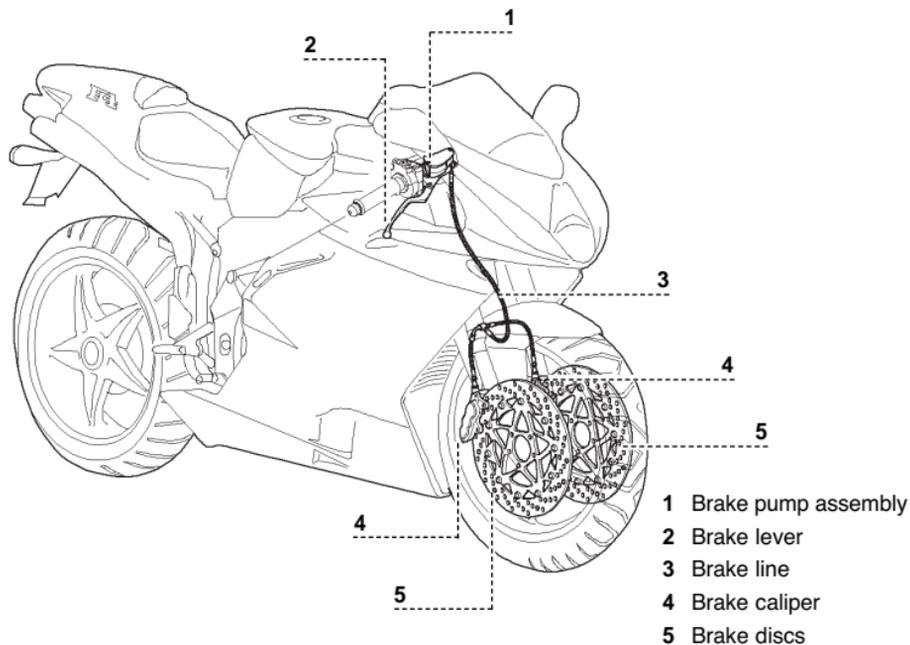




8.1.2. Rear brake circuit

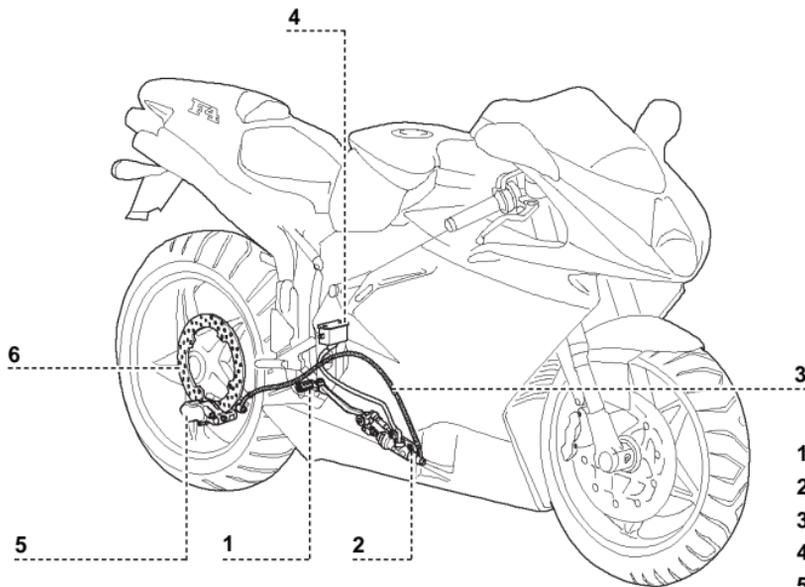

- 1 Brake lever
- 2 Brake pump
- 3 Brake line
- 4 Brake fluid reservoir
- 5 Brake caliper
- 6 Brake disc




8.1.3. Clutch circuit

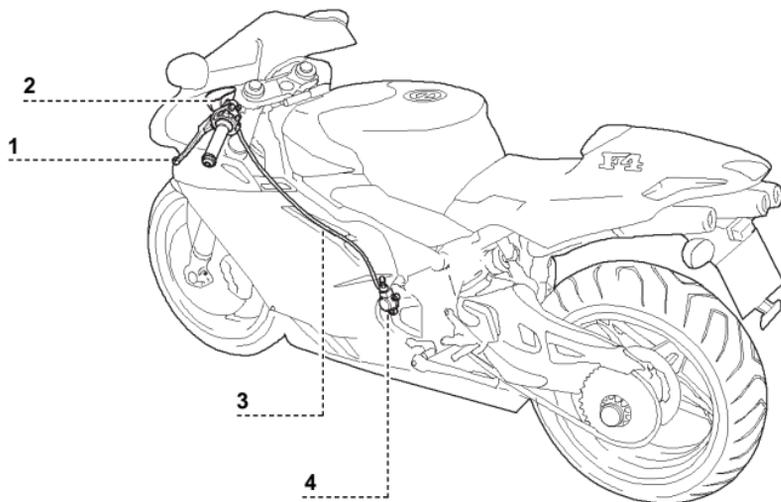

- 1 Clutch lever
- 2 Clutch pump assembly
- 3 Clutch line
- 4 Clutch cylinder assembly




8.1.4. Engine lubrication

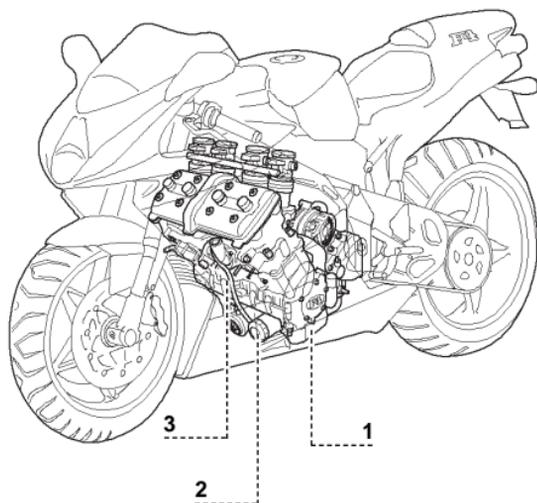

- 1 Oil sump
- 2 Oil filter
- 3 Cylinder head oil feed pipe




8.1.5. Coolant circuit

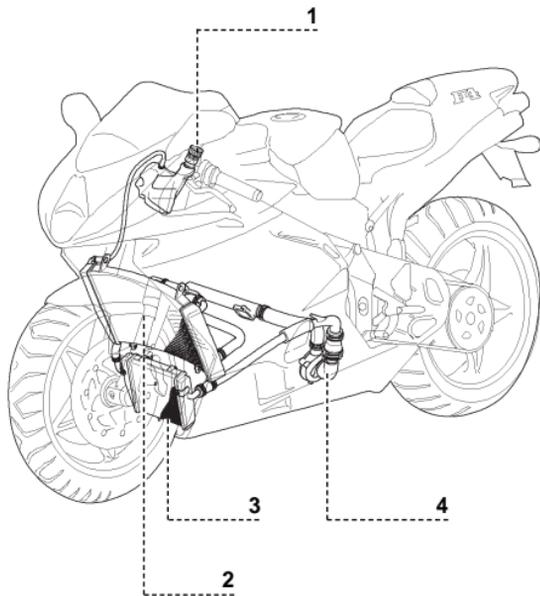


- 1 Expansion tank
- 2 Upper radiator
- 3 Lower radiator
- 4 Coolant pump



8.1.6. Fuel system

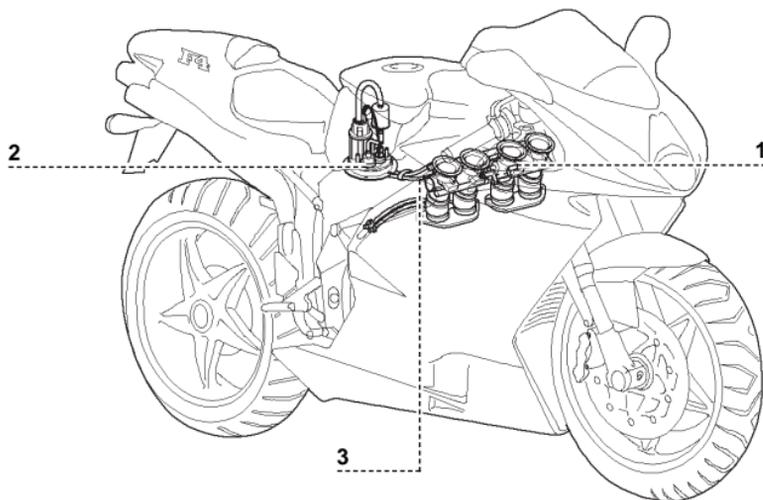

- 1 Throttle bodies
- 2 Fuel pump
- 3 Fuel line

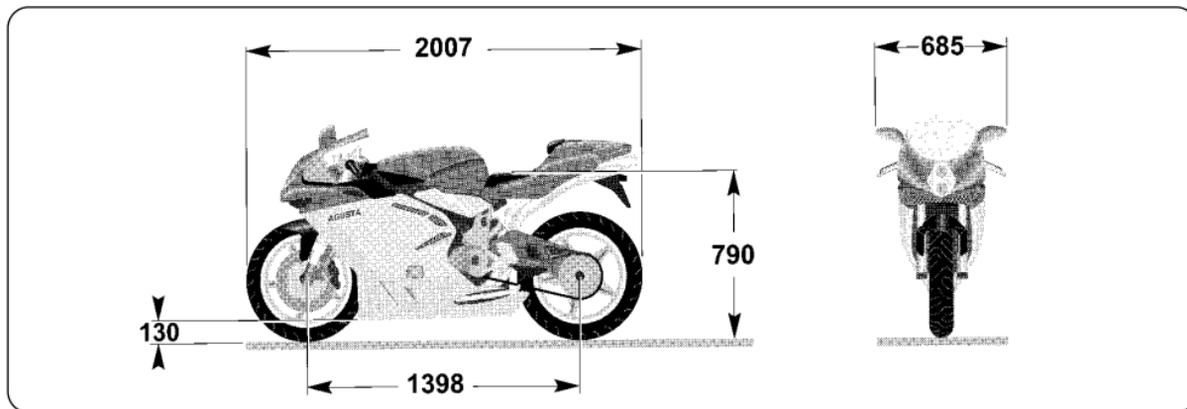

8.2. Specifications

| Description | F4 750 ORO | F4 750 S | F4 750 S (1+1) |
|----------------------------|------------|----------|----------------|
| SPECIFICATIONS | | | |
| Wheelbase (mm) | 1398 | 1398 | 1398 |
| Overall length (mm) | 2007 | 2007 | 2007 |
| Max. width (mm) | 685 | 685 | 685 |
| Seat height (mm) | 790 | 790 | 790 |
| Min. ground clearance (mm) | 130 | 130 | 130 |
| Trail (mm) | 98.5 | 98.5 | 98.5 |

**Specifications**

| Description | F4 750 ORO | F4 750 S | F4 750 S (1+1) |
|---------------------------------------|---|---|---|
| Dry weight (kg) | 184 | 191 | 192 |
| Fuel tank capacity (l) | 20 | 20 | 20 |
| Reserve fuel (l) | 4 | 4 | 4 |
| Oil in crankcase (kg) | 3.5 | 3.5 | 3.5 |
| PERFORMANCE | | | |
| Top speed (km/h), over | 281 | 281 | 281 |
| Average fuel consumption (km/l) | 13 | 13 | 13 |
| Max. horsepower at rpm (on shaft) | kW 93/12,500 cv 126/12,500 | kW 93/12,500 cv 126/12,500 | kW 93/12,500 cv 126/12,500 |
| Max. torque at rpm | Nm 74/10,500 Kgm 7.5/10,500 ft lb 54.5/10,500 | Nm 74/10,500 Kgm 7.5/10,500 ft lb 54.5/10,500 | Nm 74/10,500 Kgm 7.5/10,500 ft lb 54.5/10,500 |
| ENGINE | | | |
| Type | Four-cylinder, four-stroke | | |
| Bore (mm) | 73.8 | 73.8 | 73.8 |
| Stroke (mm) | 43.8 | 43.8 | 43.8 |
| Total displacement (cm ³) | 749.4 | 749.4 | 749.4 |
| Compression ratio | 12 : 1 | 12 : 1 | 12 : 1 |
| Starting | Electric starter | | |
| Cooling system | Liquid cooling with water-oil heat exchanger | | |


Specifications

| Description | F4 750 ORO | F4 750 S | F4 750 S (1+1) |
|------------------------------------|--|------------------------------|------------------------------|
| Crankcase and covers | sand-cast | die-cast | die-cast |
| Head and cylinders | sand-cast | chill-cast | chill-cast |
| Valves | bimetal - Nimonic head | bimetal/ single-metal | bimetal/ single-metal |
| VALVE TRAIN | | | |
| Type | Double-overhead camshaft, radial valves | | |
| LUBRICATION | | | |
| Type | Wet sump | | |
| IGNITION - POWER SUPPLY | | | |
| Type | "Weber-Marelli" 1.6 M integrated ignition-injection system Inductive-discharge electronic ignition, "Multipoint" electronic injection | | |
| Spark plugs | Champion G59C or NGK CR8E | Champion G59C or NGK CR8E | Champion G59C or NGK CR8E |
| Spark gap (mm) | 0.5 ÷ 0.6 | 0.5 ÷ 0.6 | 0.5 ÷ 0.6 |
| CLUTCH | | | |
| Type | Multiple-disc in oil bath | | |
| PRIMARY DRIVE | | | |
| Number of teeth on crankshaft gear | Z = 50 | Z = 50 | Z = 50 |
| Number of teeth on clutch gear | Z = 79 | Z = 79 | Z = 79 |
| Transmission ratio | 1.58 | 1.58 | 1.58 |


Specifications

| Description | F4 750 ORO | F4 750 S | F4 750 S (1+1) |
|-----------------------------------|--|----------------|----------------|
| SECONDARY DRIVE | | | |
| Number of teeth on front sprocket | Z = 14 | Z = 14 | Z = 14 |
| Number of teeth on rear sprocket | Z = 41 | Z = 41 | Z = 41 |
| Transmission ratio | 2.93 | 2.93 | 2.93 |
| TRANSMISSION | | | |
| Type | Removable, six-speed gearbox with constant-mesh gears | | |
| Gear ratios (overall ratios) | | | |
| First gear | 2.92 (13.53) | 2.92 (13.53) | 2.92 (13.53) |
| Second gear | 2.21 (10.25) | 2.21 (10.25) | 2.21 (10.25) |
| Third gear | 1.78 (8.23) | 1.78 (8.23) | 1.78 (8.23) |
| Fourth gear | 1.50 (6.94) | 1.50 (6.94) | 1.50 (6.94) |
| Fifth gear | 1.32 (6.10) | 1.32 (6.10) | 1.32 (6.10) |
| Sixth gear | 1.19 (5.51) | 1.19 (5.51) | 1.19 (5.51) |
| FRAME | | | |
| Type | Trellis made up of drawn CrMo 25 steel tubes | | |
| Swingarm pivot plates | Magnesium alloy | Aluminum alloy | Aluminum alloy |
| FRONT SUSPENSION | | | |
| Type | Hydraulic fork with inverted rods and external adjustment of rebound and compression damping and of spring preload | | |
| Ø Rod (mm) | 49 | 49 | 49 |
| Travel on leg axis (mm) | 118 | 118 | 118 |

**Specifications**

| Description | F4 750 ORO | F4 750 S | F4 750 S (1+1) |
|---------------------------------|--|----------------|----------------|
| REAR SUSPENSION | | | |
| Type | Progressive, with single-sided swingarm and single shock absorber adjustable for rebound, compression and spring preload | | |
| Swingarm | Magnesium alloy | Aluminum alloy | Aluminum alloy |
| Wheel travel (mm) | 120 | 120 | 120 |
| FRONT BRAKE | | | |
| Type | Dual floating disc with steel braking band | | |
| Ø Disc (mm) | 310 | 310 | 310 |
| Disc flange | Aluminium | Steel | Steel |
| Calipers, piston diameters (mm) | 6-piston, Ø 22.65; Ø 25.4; Ø 30.23 | | |
| REAR BRAKE | | | |
| Type | Steel disc | | |
| Ø Disc (mm) | 210 | 210 | 210 |
| Caliper, piston diameter (mm) | 4-piston, Ø 25.4 mm | | |
| FRONT RIM | | | |
| Material | Magnesium alloy | Aluminum alloy | Aluminum alloy |
| Dimensions | 3.50" x 17" | 3.50" x 17" | 3.50" x 17" |
| REAR RIM | | | |
| Material | Magnesium alloy | Aluminum alloy | Aluminum alloy |


Specifications

| Description | F4 750 ORO | | F4 750 S | F4 750 S (1+1) |
|-------------------------------|---|---|---|---|
| Dimensions | Standard 6.00" x 17" | Optional 5.75" x 17" | 6.00" x 17" | 6.00" x 17" |
| TYRES | | | | |
| Front | 120/65-ZR 17 | | 120/65-ZR 17 | 120/65-ZR 17 |
| Rear | 190/50-ZR 17 o 180/50-ZR 17 | | 190/50-ZR 17 o 180/50-ZR 17 | 190/50-ZR 17 o 180/50-ZR 17 |
| Brand and type | PIRELLI - Dragon Evo MTR21 Corsa METZELER - MEZ3 Racing MICHELIN - Pilot Sport | PIRELLI - Dragon Evo MTR21 Corsa METZELER - MEZ3 Racing MICHELIN - Pilot Sport | PIRELLI - Dragon Evo MTR21 Corsa METZELER - MEZ3 Racing MICHELIN - Pilot Sport | PIRELLI - Dragon Evo MTR21 Corsa METZELER - MEZ3 Racing MICHELIN - Pilot Sport |
| Inflating pressure | | | | |
| Front | PIRELLI-METZELER 2.5 bar (36 psi), MICHELIN 2.2 bar (32 psi) | | | |
| Rear | PIRELLI-METZELER 2.3 bar (33 psi), MICHELIN 2.4 bar (35 psi) | | | |
| ELECTRICAL EQUIPMENT | | | | |
| Equipment voltage | 12V | | 12V | 12V |
| Low beam | 12V 55W | | 12V 55W | 12V 55W |
| High beam | 12V 60W | | 12V 60W | 12V 60W |
| Dual-bulb front parking light | 12V 5W | | 12V 5W | 12V 5W |
| Rear light | 12V 5W | | 12V 5W | 12V 5W |
| Brake light | 12V 21W | | 12V 21W | 12V 21W |
| Turn indicators | 12V 10W | | 12V 10W | 12V 10W |


**Specifications**

| Description | F4 750 ORO | F4 750 S | F4 750 S (1+1) |
|-----------------------------|-------------------|------------------------|------------------------|
| Battery | 12V - 9Ah | 12V - 9Ah | 12V - 9Ah |
| Alternator | 650 W at 5000 rpm | 650 W at 5000 rpm | 650 W at 5000 rpm |
| BODYWORK | | | |
| Fairing | Carbon fibre | Thermoplastic material | Thermoplastic material |
| Windscreen | Carbon fibre | Thermoplastic material | Thermoplastic material |
| Tail section | Carbon fibre | Thermoplastic material | Thermoplastic material |
| Fuel tank | Carbon fibre | Steel | Steel |
| Air box | Carbon fibre | Thermoplastic material | Thermoplastic material |
| Air scoops | Carbon fibre | Thermoplastic material | Thermoplastic material |
| Air box side panels | Carbon fibre | Thermoplastic material | Thermoplastic material |
| Front mudguard | Carbon fibre | Thermoplastic material | Thermoplastic material |
| Electrical equipment covers | Carbon fibre | Aluminum | Aluminum |
| Chain guards | Carbon fibre | Thermoplastic material | Thermoplastic material |
| Battery support | Carbon fibre | Steel | Steel |
| Exhaust pipe guard | Carbon fibre | Aluminum | Aluminum |
| Heat shield | Carbon fibre | Thermoplastic material | Thermoplastic material |
| Number-plate holder | Carbon fibre | Thermoplastic material | Thermoplastic material |



8.3. Carbon components ★

- 1 - Windscreen
- 2 - Right-hand side fairing
- 3 - Left-hand side fairing
- 4 - Undercowl
- 5 - Tail section
- 6 - Fuel tank
- 7 - Filter box
- 8 - Right-hand air scoop
- 9 - Left-hand air scoop
- 10 - Electrical equipment cover (right side)
- 11 - Electrical equipment cover (left side)
- 12 - Right-hand side panel
- 13 - Left-hand side panel
- 14 - Ignition switch and steering lock cover
- 15 - Front mudguard
- 16 - Cooling fan duct
- 17 - Exhaust pipe guard
- 18 - Battery support
- 19 - Heat shield
- 20 - Lower chain guard
- 21 - Upper chain guard
- 22 - Number-plate holder

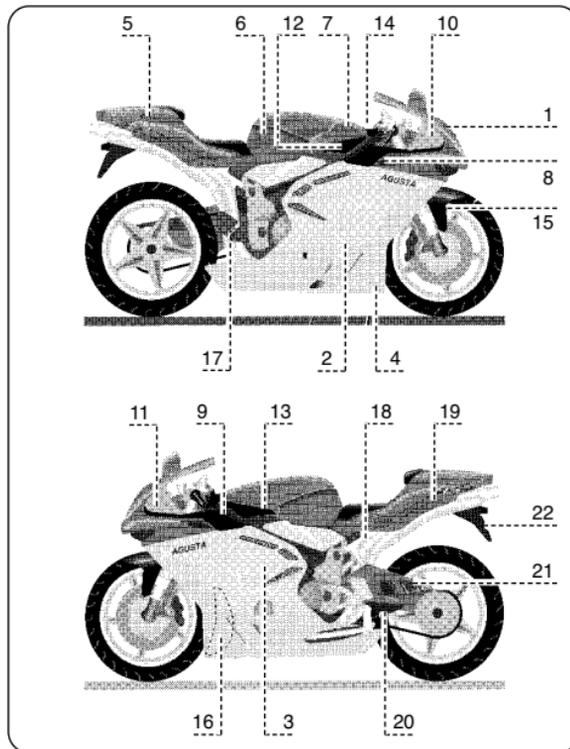



NOTES

A series of ten horizontal dotted lines for writing notes.

